 


尺寸：74(宽)*92(高)mm

联想thinkplus骨传导蓝牙耳机

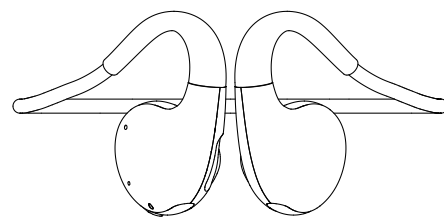

使用说明书
使用前请阅读使用说明书

Lenovo

产品使用简介

- (1) 除说明书有特殊标示的操作方式以外, 请勿尝试拆卸或更换产品内的任何零件。
(2) 请勿将产品放入水或其他任何液体中, 此产品非防水设计。
(3) 如果有任何液体不小心进入产品内时, 请立即断开连接并移开此产品。
(4) 为避免触电, 请在安装或卸载产品时, 确保手上没有沾水。
(5) 请勿将此产品放置于热源附近或直接暴露在光源附近。
(6) 请勿将本产品放置在有强大电磁力的环境中, 否则会导致产品故障。

物品清单




产品规格


产品型号: Lenovo X7
产品材质: ABS+PC
蓝牙版本: V5.3
耳机锂电池额定容量: 150mAh
额定输入: 5V ==150mA
充电时间: 约2小时
播放时间: 约10小时
额定功率: 0.75W
(所有技术信息以实际性能为准)

产品操作说明

- 1. 开机: 长按多功能键约2秒, 蓝灯亮1秒开机。
2. 蓝牙连接: 耳机开机后, 打开智能设备, 开启蓝牙(如图示)搜索显示“联想thinkplus-X7”, 点击连接成功后红蓝灯熄灭。

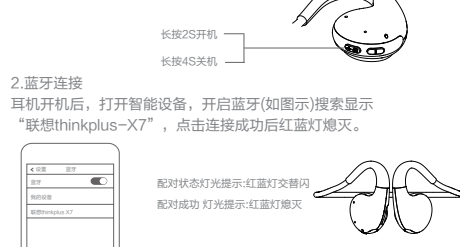

产品示意图

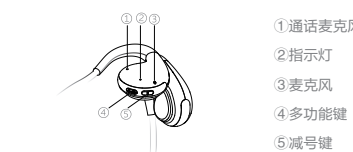

指示灯说明

Table with 2 columns: Indicator status (e.g., Red and blue lights alternate, Red and blue lights go out) and corresponding state (e.g., Paired state, Connection successful).

充电指示

正常连接, 智能设备会显示耳机电量, 如低电报警, 即表示需要充电, 请使用标注5V充电器连接充电线即可充电。



功能操作

- 开机: 长按多功能键2S
关机: 长按多功能键4S
上一曲: 双击减号键
下一曲: 双击多功能键
音量加: 短按多功能键
音量减: 短按减号键
启动语音助手: 三击多功能键
接听/挂断: 双击多功能键
拒接: 长按多功能键2S
播放/暂停: 长按多功能键1S

注意事项

如有汗水等依附在充电柱上, 请及时擦拭干净再打开进行充电。

产品中有害物质名称及含量

Table with 6 columns: Component name, Lead (Pb), Mercury (Hg), Cadmium (Cd), Hexavalent Chromium (Cr(VI)), Polybrominated Biphenyls (PBB), and Polybrominated Diphenyl Ethers (PBDE).


本表格依据SJ/T11364的规定编制
O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定限量要求以下。
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB26572规定的限量要求。

本表格依据SJ/T11364的规定编制
印刷电路板组件: 包括印刷电路板及其零部件, 电子元器件等根据产品型号不同, 您所购买的产品可能不会含有以上所有部件。



在中华人民共和国境内销售的电子电气产品必须标识此标志, 标志内的数字代表在正常的使用状态下的产品的环保使用期限。

thinkplus Bone conduction Headphone

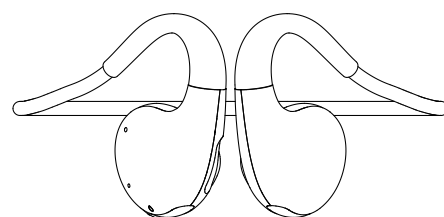


Manual
Please read the instruction manual before use

Lenovo

Product usage profile

- (1) Do not try to disassemble or replace the products except for the operation methods specified in the instructions Any part.
(2) Do not put the product into water or any other liquid, this product is not waterproof design.
(3) If any liquid accidentally enters the product, please disconnect and remove the product immediately.
(4) In order to avoid electric shock, please ensure that your hands are free from water when installing or unloading the product.
(5) Do not place the product near the heat source or expose it directly near the fire source.
(6) Do not place this product in an environment with strong electromagnetic force, otherwise it will cause product failure.

List of articles

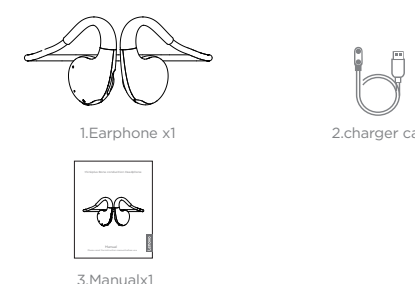


Product standard


Product model:Lenovo X7
Product material: ABS+PC
Bluetooth version: V5.3
Battery capacity: 150mAh
Rated input: 5V ==150mA
Charging time: About 2 hours
Running time: About 10 hours
Rated power: 0.75W
(All technical information is subject to actual performance)

Product operation instruction

- 1. Power on/off: Long press the multifunctional button for about 2 seconds, and the blue light will turn on for 1 second.
2. Bluetooth connection: After the headset is turned on, turn on the smart device and enable the bluetooth search display (as shown in the picture)“联想 thinkplus-X7”, click the connection successful after the red and blue lights off.

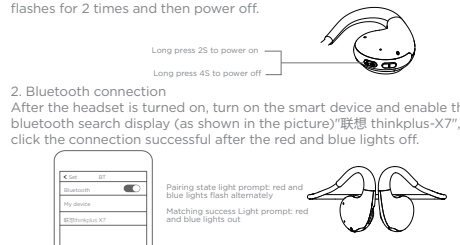

Product diagram

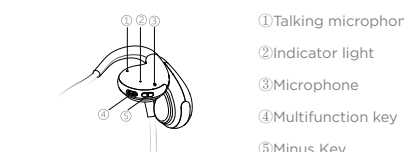


Indicator description

Table with 2 columns: Indicator status (e.g., Alternating red and blue, Red and blue lights go out) and corresponding state (e.g., Paired state, Connection successful).

Charge indication

After normal connection, the smart device will display the power level of the earphone. If the alarm is low, it means that it needs to be charged. Please use the marked 5V charger to connect the charging cable to charge.

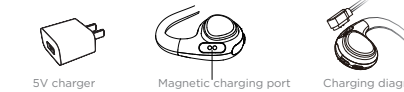

Functional operation

- turn on: Long press MFB Key2S
turn off: Long press MFB Key4S
Previous song: Double click minus key
Next song: Double click MFB key
vol+: Click on the MFB key
vol-: Click on the minus key
Star voice Assistant: Three strikes MFB key
Answer: Double click MFB key
Hang up: Long press MFB key2S
Play/pause: Long press MFB key1S

Matters need attention

If there is sweat attached to the charging post, please wipe it clean in time and then open it for charging.

Name and content of harmful substances in products

Table with 6 columns: name of parts, Pb, Hg, Cd, Cr(VI), PBB, PBDE.

This form is prepared in accordance with the requirements of SJ/T11364
O: indicates that the content of the hazardous substance in all homogeneous materials of the component is in GB/T26572 specified limit requirements below.
X: indicates an excess of the hazardous substance in at least one homogeneous material of the component GB26572 specified limit requirements.

This form is prepared in accordance with the requirements of SJ/T11364
Printed circuit board components: including printed circuit board and its components, electronic components, etc Depending on the model, the product you purchase may not contain all of the above components.

Electronic and electrical products sold within the territory of the People's Republic of China must mark this Logo. The number inside the logo represents the ring of the product in normal service condition Warranty period.

保修声明

免责声明: 本使用手册没有任何形式的担保、立场表达或其他暗示, 本使用手册所提到的产品、规格及信息仅供参考, 内容亦会随时更新于网页, 恕不另行通知。

保修声明: 就本文件附随的产品做如下保证:如产品在您购买日起十二(12)个月(“保修期”)内, 在正常使用情况下因质量瑕疵发生损坏, 能修理的免费修理; 经厂家确认无法修理的, 免费更换; 修理或更换后的产品, 在剩余保修期(最短不少于30天)内继续享有保修。购买日以销售发票日期为准; 如无法确定购买日, 则保修期自产品生产日期起按十三(13)个月计算。

以上保证不适用于下列情况:

- 1. 超过三包有效期的;
2. 涂改保修卡、产品编码与产品本体不符;
3. 因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏;
4. 因不可抗力(如地震、战争、火灾等)或意外导致的故障或损坏;
5. 拉链、塔扣因受力过大而损坏;
6. 因超载过重造成的脱线或撕裂;
7. 任何因尖锐物体造成的损坏;
8. 有烧损或水浸迹象的产品;
9. 因擅自拆改导致的损坏;

保修声明

10. 产品正常使用过程中发生的老化、脱色、磨损、破裂和其他损耗。
11. 如产品原有标识标签被更改或损毁本保证将失效。产品及随附物料的齐备和外观完好不属于保证范围, 您应在接收产品时当场检验并对任何不符提出异议。

 
以上保证是我们就产品做出的全部保证, 且仅在中国大陆地区境内适用。本文件的任何内容均不影响根据法律规定不能排除或限制的消费者权益。

售后邮箱: frank@szeyan.cn
服务电话: 400-812-0102

“Lenovo” “thinkplus”及其他联想标识是联想集团所属企业的商标。(本材料)提及的其他商标、公司名称、产品或服务名称可能是联想集团所属企业或其他公司的商标。
版权所有©2023联想(北京)有限公司保留所有权利。

thinkplus

thinkplus Bone conduction Headphone

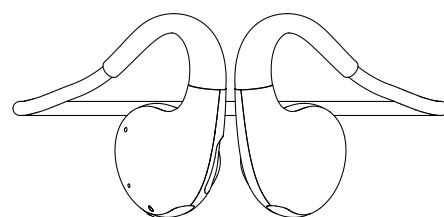


Manual
Please read the instruction manual before use

Lenovo

Product usage profile

- (1) Do not try to disassemble or replace the products except for the operation methods specified in the instructions Any part.
(2) Do not put the product into water or any other liquid, this product is not waterproof design.
(3) If any liquid accidentally enters the product, please disconnect and remove the product immediately.
(4) In order to avoid electric shock, please ensure that your hands are free from water when installing or unloading the product.
(5) Do not place the product near the heat source or expose it directly near the fire source.
(6) Do not place this product in an environment with strong electromagnetic force, otherwise it will cause product failure.

 List of articles

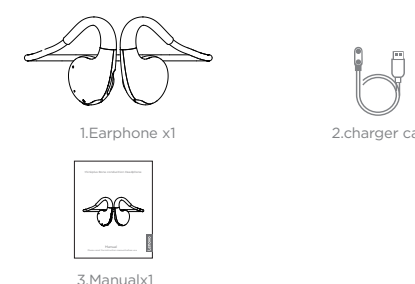


Product standard


Product model:Lenovo X7
Product material: ABS+PC
Bluetooth version: V5.3
Battery capacity: 150mAh
Rated input: 5V ==150mA
Charging time: About 2 hours
Running time: About 10 hours
Rated power: 0.75W
(All technical information is subject to actual performance)

Product operation instruction

- 1. Power on/off: Long press the multifunctional button for about 2 seconds, and the blue light will turn on for 1 second.
2. Bluetooth connection: After the headset is turned on, turn on the smart device and enable the bluetooth search display (as shown in the picture)“联想 thinkplus-X7”, click the connection successful after the red and blue lights off.

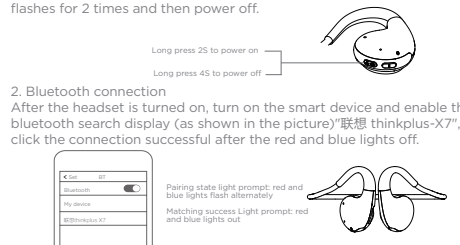

Product diagram

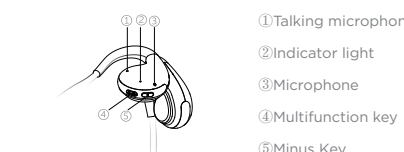


Indicator description

Table with 2 columns: Indicator status (e.g., Alternating red and blue, Red and blue lights go out) and corresponding state (e.g., Paired state, Connection successful).

Charge indication

After normal connection, the smart device will display the power level of the earphone. If the alarm is low, it means that it needs to be charged. Please use the marked 5V charger to connect the charging cable to charge.

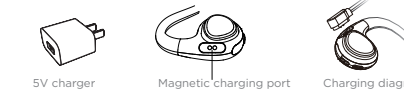

Functional operation

- turn on: Long press MFB Key2S
turn off: Long press MFB Key4S
Previous song: Double click minus key
Next song: Double click MFB key
vol+: Click on the MFB key
vol-: Click on the minus key
Star voice Assistant: Three strikes MFB key
Answer: Double click MFB key
Hang up: Long press MFB key2S
Play/pause: Long press MFB key1S

Matters need attention

If there is sweat attached to the charging post, please wipe it clean in time and then open it for charging.

Name and content of harmful substances in products

Table with 6 columns: name of parts, Pb, Hg, Cd, Cr(VI), PBB, PBDE.

This form is prepared in accordance with the requirements of SJ/T11364
O: indicates that the content of the hazardous substance in all homogeneous materials of the component is in GB/T26572 specified limit requirements below.
X: indicates an excess of the hazardous substance in at least one homogeneous material of the component GB26572 specified limit requirements.

This form is prepared in accordance with the requirements of SJ/T11364
Printed circuit board components: including printed circuit board and its components, electronic components, etc Depending on the model, the product you purchase may not contain all of the above components.

Electronic and electrical products sold within the territory of the People's Republic of China must mark this Logo. The number inside the logo represents the ring of the product in normal service condition Warranty period.

Warranty statement

Disclaimer: No warranty, position or other implication of any kind is given in this user's manual The products, specifications and information mentioned are for reference only and will be updated on the website at any time Row notification.

Warranty Statement: Make the following warranties with respect to the products attached to this document: If the Products are twelve (12) months from the date you purchase them(“Warranty Period”), which is damaged due to quality defects under normal use and can be repaired Free repair; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge. Repair or replace the product after. The remaining warranty period (no less than 30 days) shall continue to enjoy the warranty. Purchase date to sales invoice date The period shall prevail; If the date of purchase cannot be determined, the warranty period shall be 13 (13) from the date of manufacture.

Every month. To apply for warranty, please call the product service hotline first and follow our instructions to apply for warranty At the time of repair, you need to provide a valid sales invoice that is accurate, complete and clearly filled out.

- The above warranties do not apply to:
1. More than the validity period of three packages;
2. Correcting the warranty card, product code and product ontology are inconsistent;
3. Failure or damage caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure or damage caused by force majeure (such as earthquake, war, fire, etc.) or accidents;
5. Zipper and buckle are damaged due to excessive force;

Warranty statement

- 6. Off-line or tear caused by heavy load;
7. Any damage caused by sharp objects;
8. Products showing signs of burning or flooding;
9. Damage caused by unauthorized demolition and modification;
10. Aging, decolorization, wear, breakage and other losses occurring during the normal use of the product.
11. This warranty shall be effective if the original identification label of the product is altered or damaged. Products and accompanying materials

Complete and in good appearance are not guaranteed. You should inspect the product on the spot upon receipt of the product and check for any defects To raise an objection.

The above warranties are all warranties made by us with respect to the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or limited by law.

After-sales email: frank@szeyan.cn
The service number is 400-812-0102

“Lenovo” “thinkplus” and other Lenovo logos are Lenovo Group Trademark of the enterprise to which it belongs. Other trademarks, company names, products or services mentioned in (this Material) The name may be the trademark of Lenovo Group or other companies. Copyright©2023 Lenovo Beijing Co., LTD. All rights reserved.

thinkplus