 


联想 thinkplus LivePods LP40 II
真无线蓝牙耳机

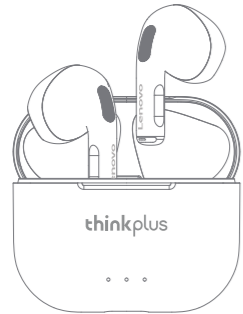

使用说明书
使用前请阅读使用说明书


产品使用简介

(1) 除说明书有特殊标示的操作方式以外, 请勿尝试拆卸或更换产品内的任何零件。
(2) 请勿将产品放入水或其他任何液体中, 此产品非防水设计。
(3) 如果有任何液体不小心进入产品内时, 请立即断开连接并移开此产品。
(4) 为避免触电, 请在安装或卸载产品时, 确保手上没有沾水。
(5) 请勿将此产品放置于热源附近或直接暴露在光源附近。
(6) 请勿将本产品放置在有强大电磁力的环境中, 否则会导致产品故障。

包装清单

	耳机X2		充电盒X1
	使用说明书X1		充电线X1

产品示意图



 
产品规格

蓝牙版本: V5.3
传输距离: >= 10M
电池容量: 35mAh
使用时间: 约4小时 (耳机)
充电时间: 约1小时 (耳机)
额定输入: 5V==30mA

充电盒规格

电池容量: 230mAh
充电时间: 约1.5小时
额定输入: 5V==230mA
(所有技术信息以实际性能为准)

给充电盒充电
用Type-C充电线连接充电盒到5V电源适配器。

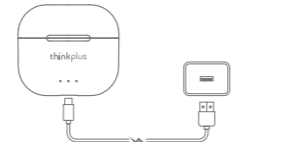

额定输入:5V==30mA(耳机) 额定输入:5V==230mA(充电盒)

LED指示灯状态


充电盒指示灯	<ul style="list-style-type: none"> 充电盒开盖: 指示灯亮白灯 给充电盒充电(未充满): 指示灯呈白灯闪烁 充电盒充满电: 指示灯呈白灯长亮 给耳机充电未充满: 指示灯呈白灯长亮 给耳机充满电: 灯灭
--------	--

产品操作说明

1. 开机
方式一: 打开充电仓上盖, 耳机自动开机。
方式二: 用手指长按耳机功能按键3S, 耳机开机。


2. 关机
方式一: 将耳机放回充电仓, 关上充电仓上盖, 耳机关机。
方式二: 左右耳机开机状态下, 长按耳机功能按键5S后, 耳机关机。(未连接蓝牙设备)

 3. 配对
步骤一: 打开充电仓上盖, 主副耳机自动开机并配对;
步骤二: 打开智能设备的蓝牙列表, 搜索“联想thinkplus-LP40 II”并连接 (支持单耳使用)。

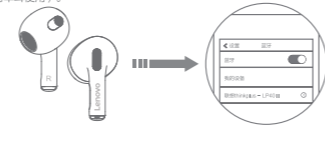

触控按键的操作
音乐播放模式

 
左/右耳机操作



- 上一曲: 三击左耳机 (L) 功能键
- 下一曲: 三击右耳机 (R) 功能键
- 音量+: 单击右耳机 (R) 功能键
- 音量-: 单击左耳机 (L) 功能键
- 暂停/播放: 双击任意耳机功能键

电话免提


左/右耳机操作 (来电状态下)



接听: 双击任意耳机功能键
拒接: 长按任意耳机功能键2S松开
挂断: 双击任意耳机功能键

激活语音助手 (智能设备支持语音助手)

左/右耳机操作



激活: 长按任意耳机功能键2S听到“Tone”音松开

恢复出厂设置

单个耳机开机后未与手机配对状态下, 连续单击耳机功能键5次清除配对信息后关机。

产品中有有害物质名称及含量

产品中有有害物质的名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
印刷电路板组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。
○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
×: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。
表中标记“X”的部件, 皆因全球技术发展水平限制而无法实现有害物质的替代。

印刷电路板组件*: 包括印刷电路板及其零部件, 电子元器件等, 根据产品型号不同, 您所购买的产品可能不会含有以上所有部件

保修声明

免责声明
本使用手册没有任何形式的担保、立场表达或其他暗示, 本使用手册所提到的产品、规格及信息仅供参考, 内容亦会随时更新于网页, 恕不另行通知。

保修声明:
就本文件附随的产品做如下保证: 如产品在您购买日起十二(12)个月(“保修期”)内, 在正常使用情况下因质量问题发生损坏, 能修理的

免费修理: 经厂家确认无法修理的, 免费更换; 修理或更换后的产品, 在剩余保修期(最少不少于30天)内继续享有保修。购买日以销售发票日期为准; 如无法确定购买日, 则保修期自产品生产日期起按十三(13)个月计算。如申请保修, 请先致电产品服务热线, 并按我们指示的方式执行。申请保修时, 您需提供准确、完整和清晰填写的有效销售发票。

以上保证不适用于下列情况:
1. 超过三包有效期的;
2. 涂改保修卡、产品编码与产品本体不符;
3. 因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏;
4. 因不可抗力(如地震、战争、火灾等)或意外导致的故障或损坏;
5. 碰撞、增加因受力过大而损坏;
6. 因超载过重造成的脱线或断裂;
7. 任何因尖锐物体造成的损坏;
8. 有烧痕或水浸迹象的产品;
9. 因擅自拆改导致的损坏;
10. 产品正常使用过程中发生的老化、变色、磨损、破裂和其他损耗。
11. 如产品原有标识标签被更改或损毁, 本保证将失效。

 
产品及随附物料的齐备和外观完好不属于保证范围, 您在接收产品时当场检验并对任何不符提出异议。以上保证是我们就产品做出的全部保证, 且仅在中国大陆地区境内适用。本文件的任何内容均不影响根据法律规定不能排除或限制的消费者权利。

服务热线: 400-812-0102
售后邮箱: frank@szeyan.cn

“Lenovo”、“thinkplus” 是联想集团所属企业的商标, 提及的其他公司、产品和服务名称可能是其他公司的商标。
版权所有 © 2022 联想集团所属企业及其许可方保留所有权利。



Lenovo thinkplus LivePods LP40 II

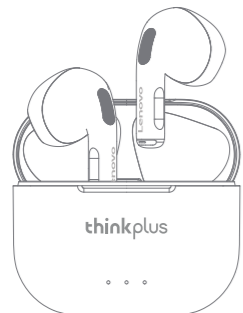

Manual
Please read all instructions carefully and retain for future use


Usage Instruction

(1) Don't attempt to disassemble the unit and change any part, except there is operation method mentioned in the manual.
(2) Don't expose the unit to liquid, moisture or humidity, since it is not a waterproof product.
(3) Disconnect the unit with your BT device and move it to the safe area if the liquid get inside the unit.
(4) Don't assemble or disassemble the unit to avoid electric shock, if there is water on your hands.
(5) Don't expose the unit to extremely high temperature or dispose of the unit in fire as it will result in an explosion.
(6) Don't place the unit in an electromagnetic interference environment to avoid malfunction.

Packing list

	Headphone X 2		Charging case X 1
	User manual X 1		Charging cable X 1

Product schematic description



 
Product specification

BT Version: V5.3
Transmission distance: >=10M
Battery capacity: 35mAh
Playing time: About 4 hours (headphone)
Charging time: About 1 hours (headphone)
Rated input: 5V == 30mA

Charging case specification

Battery capacity: 230mAh
Charging time: About 1.5 hours
Rated input: 5V == 230mA
(All technical information is subject to actual performance)

To Charge the case
Connect the Type-C cable to the 5V power adaptor, and another end to the charging port of the Charging Case.

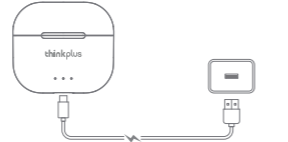

Rated input 5V== 30mA (headphones) Rated input 5V== 230mA (Case)

LED Indicator Status

Case LED Indicator	<ul style="list-style-type: none"> Open the charging case: The indicator light of the charging case will last long time by white. Charge the charging case (not fully charged): The indicator light of the charging case flashes white.
--------------------	---

Case LED Indicator

 
- The charging case is fully charged: The indicator light of the charging case will last long time by white.
- The headphones are not fully charged: the indicator light of the charging case with white for a long time.
- Fully charged the headphones: the indicator light of the charging case is turn off.

Product operating instructions

1. Power on:
Method 1: Open the case, the headphones will turn on automatically.
Method 2: Long touch the MF button of the headphones for 3s to turn on the headphones.


2. Power off
Method 1: Put the headphones into the charging case directly and close the case to turn off.
Method 2: Long touch the MF button of the headphones for 5s to turn off the headphones. (The headphone is not connected to the BT device)

3. Pairing to the BT device
Step 1: open the upper cover of the charging case, and the main and auxiliary headphones will automatically connected;
Step 2: open the BT list of smart devices, search "联想thinkplus-LP40 II" and Connect (single ear use is supported).

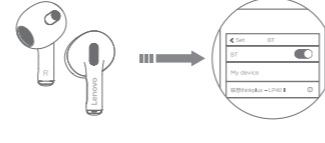

Touch control button operating Music playing mode

 
Left/Right headphone operating

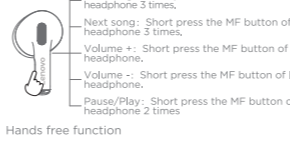

- Last song: Short press the MF button of left headphone 3 times.
- Next song: Short press the MF button of right headphone 3 times.
- Volume +: Short press the MF button of right headphone.
- Volume -: Short press the MF button of left headphone.
- Pause/Play: Short press the MF button of one headphone 2 times

Hands free function

 
Left/ Right headphone operating (incoming call)

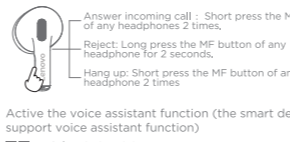

- Answer incoming call: Short press the MF button of any headphones 2 times.
- Reject: Long press the MF button of any headphone for 2 seconds.
- Hang up: Short press the MF button of any headphone 2 times

Active the voice assistant function (the smart devices support voice assistant function)

Left/ Right headphone operating



Activation: Press and hold the MF button of any headphone for 2 seconds, then hear "Tone" to release.

Restore factory settings

When you turn on the headphones, make sure it does not connect to any BT device, and click the MF button 5 times to clear the pairing record, then turn off the headphones.

Name and content of hazardous substances in products

Name and content of hazardous substances in products

Part Name	Harmful materials					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit assembly	○	○	○	○	○	○
Small structural parts such as Shell	○	○	○	○	○	○

This form is compiled in accordance with SJ/T 11364.
○: Indicates that the content of the hazardous substance in all homogeneous materials of the part is in below the limit requirements specified in GB/T 26572.
×: Indicates that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds the limit requirements specified in GB/T 26572.
The parts marked with "X" on the form are all harmful due to the limitations of global technological development. Substitution of substances.

Printed circuit board components*: including printed circuit boards and their parts, electronic components, etc. Depending on the product model, the product you purchased may not contain all the above components

Warranty statement

Disclaimer
This user manual does not have any form of guarantee, position expression or other implication. The mentioned products, specifications and information are for reference only, and the content will also be updated on the webpage at any time, without additional line notification.

Warranty statement:
The product attached to this document is guaranteed as follows: If the product is twelve (12) months from the date of purchase ("Warranty Period"), under normal conditions of use due to quality defects damaged, can be repaired free, if the manufacturer confirms

that it cannot be repaired, free replacement; repaired or replaced product; Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchase date by sale The ticket date shall prevail; if the purchase date cannot be determined, the warranty period shall be 13 Months calculation. If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice. The above guarantee does not apply to the following situations:
1. The validity period of the three packs is exceeded;
2. Alteration of the warranty card and product code does not match the product body;
3. Causes caused by misuse, abuse or improper transportation, use, maintenance or storage impaired or damaged;
4. Failure or damage caused by force majeure (such as earthquake, war, fire, etc.) or accident bad;
5. The zipper and buckle are damaged due to excessive force;
6. Disconnection or tearing caused by excessive load;
7. Any damage caused by sharp objects;
8. Products with signs of burning or water immersion;
9. Damage caused by unauthorized disassembly;
10. Aging, discoloration, abrasion, rupture and other losses occurred during normal use of the product.

11. If the original identification label of the product is changed or damaged, this guarantee will become invalid. The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should Check on the spot and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit.

After-sales service Email: frank@szeyan.cn
Service supervision hotline: 400-812-0102

“Lenovo”、“thinkplus” belongs to affiliated enterprises of Lenovo Group. Mentioned other trademarks, company names, products or services name may be a trademark of affiliated enterprises of Lenovo Group or another company. Copyright © 2022 Lenovo Group and its licensors. All rights reserved.



文件名称	联想LP40 II 说明书			材料	70g书写纸	单位	mm	厂商物料编号	变更履历	设计	薛圣超	日期	2023/01/07
文件尺寸	54x80mm (单P尺寸)			工艺	1C印刷 风琴折	公差	±0.5mm	XXXXXXXXXX	V01: V02:更新LOGO尺寸	审核		日期	
设计日期	2023/01/07	文件版本	2023V02			比例	1:1			批准		日期	