



 
SPD-SL compatible

Instructions

General advice (for adjustable pedals)

- Before inserting or removing Pedal Plate: reduce the tension
- of the pedal

 2. Before cycling with the Pedal Plate: increase the tension



Insert

- 1. Insert Pedal Plate into front of
- 2. Push back of the Pedal Plate down into the rear clip



Remove (option 1)

- Pull rear clip of the pedal backward
- 2. Remove Pedal Plate from pedal



Remove (option 2)

1. Push against the rear side of the pedal-plate



- Remove (high-tension peda 1. Insert tool into rear of the Pedal Plate
- 2. Rotate Pedal Plate to release from the pedal





Please note:

The Pedal Plates are designed for normal road use. Visit the FAQ section on www.Pedal-Plate.cc to find the full set of instructions, video's, tips & tricks. If you have any questions please contact us through the form on our website. Enjoy your Pedal Plates!



