

**2 TONNES
JACK
STAND**


Safe working load
of 2 tonne per
pair - must be
used in pair.

**3 TONNES
JACK
STAND**

Safe working load
of 3 tonne per
pair - must be
used in pair.

**6 TONNES
JACK
STAND**

Safe working load
of 6 tonne per
pair - must be
used in pair.

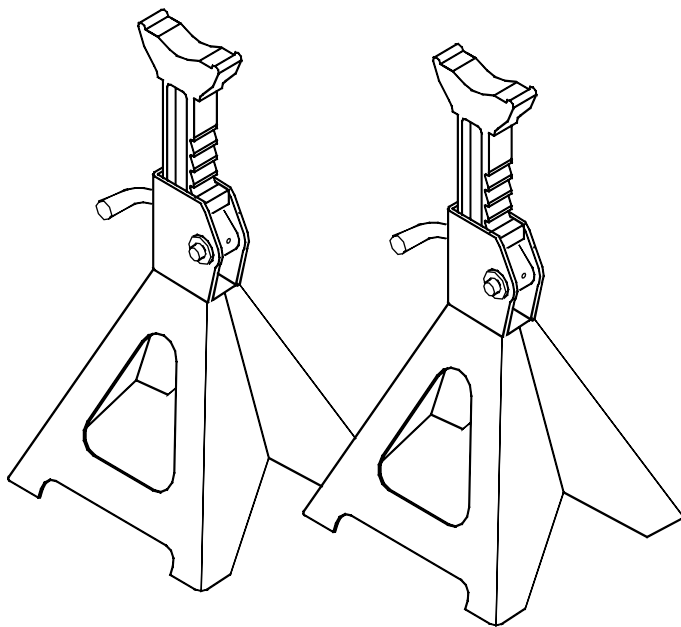**TH52002C / TH53003E/ TH56002A**

Original Instructions

GENERAL WARNINGS & DISPOSAL



To reduce the risk of injury, the user must read the instruction manual.



This symbol is used throughout this manual to warn the user about potential risks. Please read & understand these sections before using the device.



Caution! Wear ear-muffs. The impact of noise can cause damage to hearing.



Caution! Wear protective safety gloves.



Caution! Wear safety goggles. Sparks generated during working or splinters, chips and dust emitted by the device can cause loss of sight. wood and other materials. Never use the device to work on any materials containing asbestos!



Caution! Wear a breathing mask. Dust which is injurious to health can be generated when working on wood and other materials. Never use the device to work on any materials containing asbestos!

The month and year of manufacture can be found within the product serial number e.g. MMYPPPAXXXXX. Where production month (MM) and production year (YY) are included.



Contents

INTRODUCTION	4
SAFETY PRECAUTIONS	4
PARTS OF THE JACK STAND	5
MAINTENANCE	5
SPECIFICATIONS	5
OPERATING INSTRUCTIONS	6
WARRANTY STATEMENT	7-8



INTRODUCTION

For your safety, please read this manual before using any lifting equipment ensuring you fully understand its operation and the safety procedures to be observed. Ensure this manual is retained for future reference and that new users of this product read and understand the content before they use the product.


SAFETY PRECAUTIONS

WARNING!

Failure to comply with these instructions can cause serious injury and damage to the vehicle. If you are in any way unsure, do not attempt to use this product and consult a qualified mechanic.

1. Read and understand instruction manuals fully before use. Use only as specified.
2. Never overload these jack stands by exceeding the rated safe working load.
3. Check vehicle owner's manual for gross vehicle weight.
4. Use no more than one pair of stands.
5. Ensure all body parts are kept clear of the jack and vehicle when positioning and removing the jack stands.
6. After lifting the vehicle, support immediately with properly rated jack stands.
7. Never work on or under a vehicle without using properly rated jack stands.
8. Only use on solid, even and level ground with the wheels chocked, the vehicle in gear and its handbrake on.
9. Always ensure that the load is centred and secure on the jack stand top saddle. Off centre loads can become unstable and slip resulting in possible damage or injury.
10. Ensure that each stand is securely located under a strong, stable point on the vehicle: consult the vehicle owner's manual for guidance.
11. Ensure vehicle jacking and support points are in good, sound condition with no corrosion etc.
12. Do not attempt to move or dolly the vehicle whilst on the jack stands or jack.
13. Do not attempt to modify these jack stands in any way.
14. Upper and lower columns to be used as a pair as supplied.
15. Do not attempt to use if you suspect a fault.
16. Do not start the vehicle in its raised position.
17. Do not attempt to enter the vehicle and ensure all passengers are out of the vehicle when using this product.
18. Take care when using on a three-wheeled vehicle or trailer.

PARTS OF THE JACK STAND

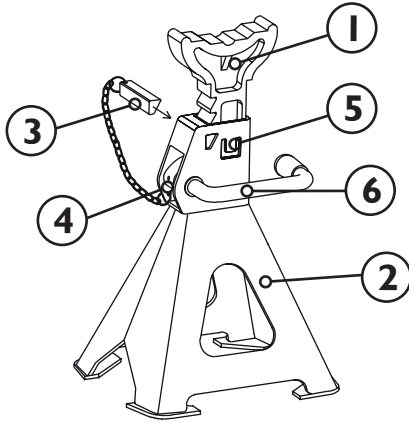


1. RATCHET BAR
2. BASE FRAME
3. LOCKING PIN
4. LOCKING PAWL(STOPPER)
5. LOCKING TAB
6. LOCKING HANDLE

part of this product. If rust appears, sand affected area and cover with suitable utility paint.

Storage

Store stands in an upright position in a clean, dry area.

SPECIFICATIONS

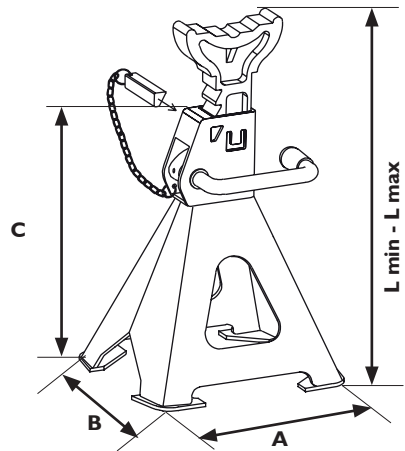

Visual inspection should be made before each use of the jack stands. Check for cracked welds and damaged, lose or missing parts.

Any jack stands which appears to be damaged in any way, found to be badly worn, operates abnormally, or has been subjected to an abnormal load or shock **MUST NOT BE USED.**

MAINTENANCE

Periodically inspect each stand. Ensure all parts move freely. Do not apply oil or grease to any

Dimensions (mm)	A	B	C	L min.	L max.
TH52002C	193	180	243	278	425
TH53003E	207	188	242	303	438
TH56002A	294	263	340	405	620

	Capacity per pair of stand
TH52002C	2 ton (2000 kg)
TH53003E	3 ton (3000 kg)
TH56002A	6 ton (6000 kg)

All dimensions are approximate. Images for illustration purposes only.



GUARANTEE

This item is covered by our three-year Quality Guarantee. In the unlikely event that it develops a fault within this period, we will replace it.

OPERATING INSTRUCTIONS

TO SUPPORT VEHICLE

1. Pull the upper column out from the lower column.
2. Insert the locating pin through the holes in both upper and lower columns.
3. Secure the locating pin by inserting the clip pin into it.
4. Carefully position the jack stands so that the load will contact the centre of the top saddle.
5. Always use jack stands in pairs and only on those parts of the vehicle which can support the load. Please consult the vehicle owner's manual for the lift and support points.

NOTE


The stands must only be positioned on a hard level surface when operational. The rated load of 2/3/6 Tonnes (TH52002C / TH53003E/ TH56002A) per pair must not be exceeded under any circumstances. Centre load on the top saddle. Use as a matched pair to support one end of a vehicle only.

TO LOWER LOAD

1. Raise vehicle clear of stands.
2. Carefully lower the stands to lowest position.
3. Remove stands then carefully lower

vehicle to the ground.

4. Ensure that all tools, equipment, and personnel are clear of the vehicle before lowering the load.

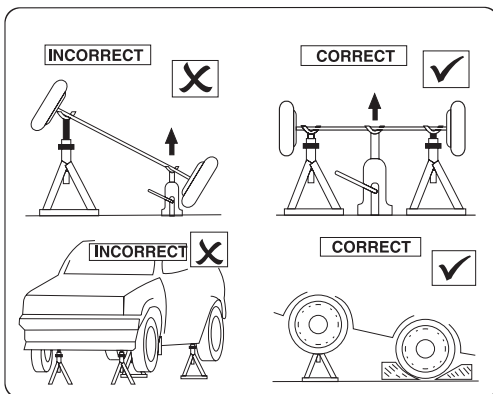

All dimensions are approximate. Images for illustration purposes only.

WARRANTY STATEMENT

JCB Power Tools are guaranteed against manufacturing defects for up to 3 years from date of purchase

Warranty cover commences from the date of purchase on the retail sales receipt and is valid only for JCB Tools products bearing the CE and UKCA mark and a visible serial number.

In the unlikely event your JCB Tool is subject to a manufacturing fault within the warranty period, JCB Tools may repair the product by replacing defective parts free of charge at our discretion. In the event parts are irreplaceable JCB Tools may replace your product free of charge. The original product will remain the property of JCB Tools in this situation.

The above repair or replacement of products will be undertaken providing that:

- The product has been subject to fair wear and tear only.
- The product has not been subject to accidental or cosmetic damage.
- The product has not been misused and has been used only in accordance with the instruction manual provided.
- The product has not been subject to overload or insufficient servicing and maintenance.
- The product has not been subject to any abnormal environmental conditions or inappropriate operating conditions.
- Repairs have not been attempted by an unauthorised person and no modifications have been made to the product.
- Repairs have not been undertaken using non-genuine spare parts.

JCB Tools used for Hire Fleets or as part of B2B and Service Contracts are not covered by these terms and conditions.



JCB Tools 3 Year Warranty excludes the following (where applicable):

- > Components normally subject to wear such as carbon brushes.
- > Batteries, Chucks and Chargers.
- > Accessories and consumable items.
- > Cases and tool storage products.

If your product develops a fault within 30 days of purchase, return it to the retailer where it was purchased together with your sales receipt. If a product develops a fault after 30 days a warranty claim must be submitted.

JCB TOOLS WILL NOT BE LIABLE FOR ANY INJURIES OR CONSEQUENTIAL DAMAGES RESULTING FROM USE OF THIS PRODUCT.

EU IMPORTER:

TRADE HOUSE FORSAGE INSTRUMENT POL SPZ.O.O.
UL GRODECKA 1A
15-561 BIALYSTOK
POLAND



DOWNLOAD YOUR INSTRUCTION MANUAL


AE

BG

DE

ES

FR

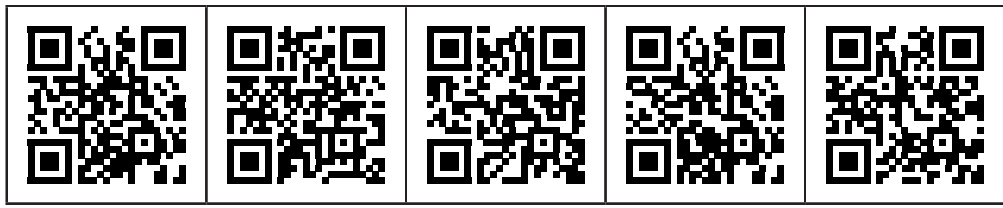

HU

PL

RU

TR

