

尺寸: 73*93 mm

材质: 105g 双铜纸(折页)

备注: 单黑印刷 (别偏彩色)

 
 

 
联想 thinkplus LivePods LP40pro
真无线蓝牙耳机



使用说明书
使用前请阅读使用说明书

Lenovo

物品清单

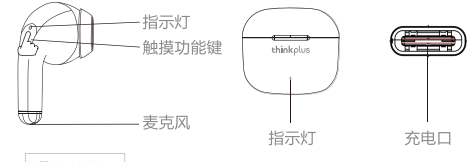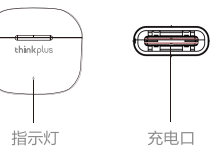说明书&保修卡
充电线 x 1

产品使用简介

- 除说明书有特殊标示的操作方式以外, 请勿尝试拆卸或更换产品内的任何零件。
- 请勿将产品放入水或其他任何液体中, 此产品非防水设计。
- 如果有任何液体不小心进入产品内时, 请立即断开连接并移开此产品。
- 为避免触电, 请在安装或卸载产品时, 确保手上没有沾水。
- 请勿将此产品放置于热源附近或直接暴露在火源附近。
- 请勿将本产品放置在有强大电磁力的环境中, 否则会导致产品故障。

产品规格

 
传输距离: ≥ 10M
 电池容量: 30mAh
 使用时长: 约5小时 (耳机)
 充电时间: 约1.5小时 (耳机)
 额定输入: 5V 300mA

充电盒规格

电池容量: 250mAh
 充电时间: 约1.5小时
 额定输入: 5V 300mA
 (所有技术信息以实际性能为准)

给充电盒充电

充电状态: 红灯闪烁
 充电完成: 红灯常亮
 充电仓低电时, 绿灯闪烁, 请及时充电。

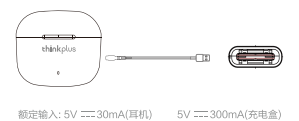

LED指示状态

耳机	把耳机放进充电盒, 自动给耳机充电	配对状态: 主耳白灯闪(副耳灯灭) 已连接状态: 灯常亮 音乐播放状态: 灯灭	充电状态: 白灯常亮 充电完成: 灯灭 低电状态: 白灯2分钟一闪
充电盒	使用Type-C充电线, 连接5V充电器	充电中: 红灯闪烁 充电完成: 红灯常亮 充电盒给耳机充电: 绿灯常亮(充电结束后灯灭)	

产品操作说明

- 开机
方式一: 耳机从充电盒取出自动开机。
方式二: 长按触摸功能键2秒手动开机。
- 关机
方式一: 把耳机放回充电盒, 自动关机。
方式二: 在开机状态, 长按触摸功能键6秒手动关机。
- 配对
从充电盒取出耳机, 耳机将自动进入蓝牙配对模式, 从您设备的蓝牙列表中选择耳机名称并连接。



触控按键的操作
音乐播放模式


左/右耳机操作

暂停/播放: 双击 (左耳/右耳) 触摸功能键
 上一曲/下一曲: 三击 左耳 (L) 触摸功能键 上一曲
 三击 右耳 (R) 触摸功能键 下一曲

音量设置

左/右耳机操作

加音量: 单击 右耳 (R) 触摸功能键 音量加
 减音量: 单击 左耳 (L) 触摸功能键 音量减



来电模式

 
左/右耳机操作

接听来电: 双击任一耳机
 结束通话: 双击任一耳机
 拒接来电: 长按任一耳机2秒

开启语音助手: 长按左/右 (L/R) 耳机功能键约2秒
 关闭语音助手: 长按左/右 (L/R) 耳机功能键约2秒
 此功能只支持自带语音助手功能的设备

恢复出厂设置

如果当耳机无法相互配对, 或者无法与其他设备配对时, 将两只耳机开机后断开所有连接设备, 分别5击左/右耳机直到关机, 再放入充电仓重置所有数据。

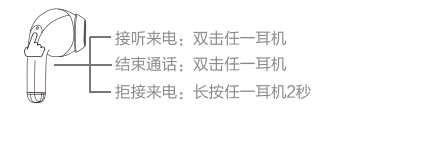

产品中有害物质名称及含量

部件名称	有害物质					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
印刷电路板组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。
 ○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。
 ×: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572 规定的限量要求。
 表中标记“X”的部件, 皆因全球技术发展水平限制而无法实现有害物质的替代。

印刷电路板组件*: 包括印刷电路板及其零部件, 电子元器件等, 根据产品型号不同, 您所购买的产品可能不会含有以上所有部件

在中华人民共和国境内销售的电子产品必须标识此标志, 标志内的数字代表在正常的使用状态下的产品的环保使用期限。

保修声明

免责声明
 本使用手册没有任何形式的担保、立场表达或其他暗示, 本使用手册所提到的产品、规格及信息仅供参考, 内容亦会随时更新于网页, 恕不另行通知。

保修声明:
 就本产品附随的产品做如下保证: 如产品在您购买日起十二 (12) 个月 (“保修期”) 内, 在正常使用情况下因质量问题发生损坏, 能修理的, 免费修理; 经厂家确认无法修理的, 免费更换; 修理或更换后的产品, 在剩余保修期 (最短不少于30天) 内继续享有保修。购买日以销售发票日期为准; 如无法确定购买日, 则保修期自产品生产日期起按十三 (13) 个月计算。
 如申请保修, 请先致电产品服务热线, 并按我们指示的方式执行。申请保修时, 您需要提供准确、完整和清晰填写的有效销售发票。以上保证不适用于下列情况:
 1. 超过三包有效期的;
 2. 涂改保修卡、产品编码与产品本体不符;
 3. 因误用、滥用或不适当的运输、使用、维护或保管而导致的故障或损坏;
 4. 因不可抗力 (如地震、战争、火灾等) 或意外导致的故障或损坏;
 5. 拉扯、塔扣因受力过大而损坏;
 6. 因承载过重造成的脱线或断裂;

保修声明


- 任何因尖锐物体造成的损坏;
- 有磨损或水浸迹象的产品;
- 因擅自修改导致的损坏;
- 产品正常使用过程中发生的老化、变色、磨损、破裂和其他损耗。
- 如产品原有标识标签被更改或损毁, 本保证将失效。

产品及随附物料的齐备和外观完好不属于保证范围, 您应在接收产品时当场检验并对任何不符合项提出异议。


以上保证是我们就产品做出的全部保证, 且仅在中国大陆地区境内适用。本文件的任何内容均不影响根据法律规定不能排除或限制的消费者权益。

服务监督热线: 400-812-0102
 售后邮箱: frank@szseisan.cn

“Lenovo”, “thinkplus” 是联想集团所属企业的商标, 提及的其他公司、产品和服务名称可能是其他公司的商标。
 版权所有© 2022联想集团所属企业及其许可方保留所有权利。




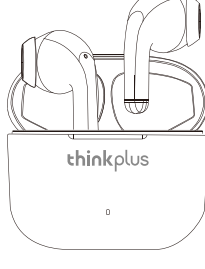


Lenovo thinkplus LivePods LP40pro



Manual
PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE

  Lenovo

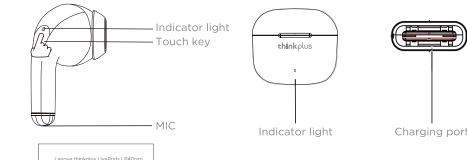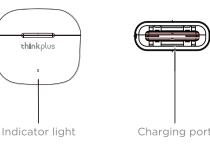Packing list

Manual & warranty card
Charging cable x 1

Reminder

- Please do not disassemble and replace any components of earbuds.
- Don't put the earbuds into the water or any others liquid, the earbuds are not waterproof.
- If any liquid enters the product by accidentally, please disconnect immediately.
- Please make sure that there is no water on your hands when disassemble the product, to avoid electric shock.
- Do not put the product near by the heat source or expose it to the fire source directly.
- Do not put the product in the environment with strong electromagnetic force, otherwise it will cause product malfunction.

Earbuds specification


Transmission distance: > 10M
 Battery capacity: 30mAh
 Playing time: about 5 hours (earbuds)
 Charging time: about 1.5 hours (earbuds)
 Rated input: 5V = 30mA

Charging case specification

Battery capacity: 250mAh
 Charging time: about 1.5 hours
 Rated input: 5V = 300mA
 (All technical information is subject to actual performance)

Charging the box

Charging status: flashing red light
 Charge complete: steady red light
 Low battery: Green light flashes please charge

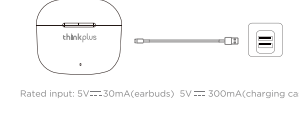


LED light guide

Earbuds	Put the earbuds in the charging box and the earbuds charged automatically	Pairing status: Flashing white Charging status: Steady white Charging completed: Light off Low battery: White light flashes every 2 minutes
Charging case	To charge the case use a type-c cable and 5v adapter	Charging: Red light flashing Charging completed: Red light steady Charging box to charge the earbuds: Green light steady (light off after charging completed)

Product operation instructions

- Turn on
Method 1: Take out earbuds from the charging box and turn on automatically
Method 2: Long press the touch key for 2 seconds to turn on earbuds
- Turn off
Method 1: Put the earbuds back into the charging case and turn it off automatically
Method 2: Press and hold 6 seconds on the touch key to turn off
- Pairing
Take out earbuds from charging box, the earbuds will automatically enter the BT pairing mode, select the name of earbuds on your devices's BT list to connect

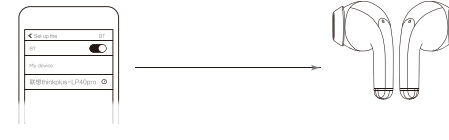

The operation of the touch key

Volume


左/右耳机操作

Volume increase: Tap on right earbuds (R)
 Volume reduce: Tap on left earbuds (L)

Music play mode

左/右耳机操作

Pause/Play: Tap twice on left/right earbuds
 Previous track: Tap three times on left earbuds
 Next track: Tap three times on right earbuds

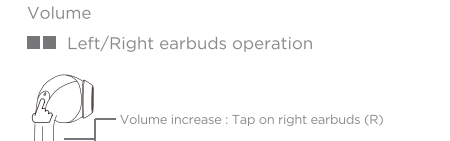

Call mode


左/右耳机操作

Answer calls: Tap twice
 Hang up: Tap twice
 Refuse call: Press and hold on 2 seconds

Turn on the voice assistant:
 Tap and hold on 2 seconds (L/R)
 Turn off the voice assistant:
 Tap and hold on 2 seconds (L/R)
 Supports the devices with the voice assistant function only

Reset

Reset if the earbuds cannot properly pair with each other or with other devices. Take out the earbuds from the charging case, separately tap 5 times until the earbuds turn off, then put earbuds back to charging case and reset successfully, the earbuds can be connected normally.

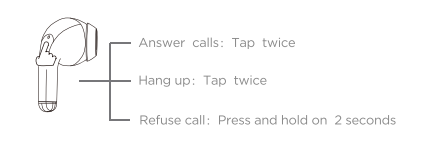

The name and content of harmful substances in the product

Part Name	Harmful materials					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit assembly	○	○	○	○	○	○
Small structural parts such as shell	○	○	○	○	○	○

This form is compiled in accordance with SJ/T 11364.
 ○: Indicates that the content of the hazardous substance in all homogeneous materials of the part is in Below the limit requirements specified in GB/T 26572.
 ×: Indicates that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds The limit requirements specified in GB/T 26572.
 The parts marked with "X" on the form are all harmful due to the limitations of global technological development. Substitution of substances.

Printed circuit board components*: including printed circuit boards and their parts, electronic components, etc., depending on the product model, the product you purchased may not contain all the above components

Electronic and electrical products sold in the People's Republic of China must mark this Logo, the number in the logo represents the product under normal use Environmental protection use period.

Warranty statement

Disclaimer
 This user manual does not have any form of guarantee, position expression or other implication. The mentioned products, specifications and information are for reference only, and the content will also be updated on the webpage at any time, without additional line notification.

Warranty statement:
 The product attached to this document is guaranteed as follows: If the product is twelve (12) months from the date of purchase ("Warranty Period"), under normal conditions of use due to quality defects damaged, can be repaired free; if the manufacturer confirms that it cannot be repaired, free replacement; repaired or replaced product. Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchase date by sale The ticket date shall prevail; if the purchase date cannot be determined, the warranty period shall be 13 Months calculation. If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice. The above guarantee does not apply to the following situations:
 1. The validity period of the three packs is exceeded;
 2. Alteration of the warranty card and product code does not match the product body;
 3. Causes caused by misuse, abuse or improper transportation, use, maintenance or storage/impairment or damaged;
 4. Failure or damage caused by force majeure (such as earthquake, war, fire, etc.) or accident bad;
 5. The zipper and buckle are damaged due to excessive force;
 6. Disconnection or tearing caused by excessive load;
 7. Any damage caused by sharp objects;
 8. Products with signs of burning or water immersion;
 9. Damage caused by unauthorized disassembly;

Warranty statement

- Aging, discoloration, abrasion, rupture and other losses occurred during normal use of the product.
- If the original identification label of the product is changed or damaged, this guarantee will become invalid. The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should Check on the spot and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit.

After-sales service Email: frank@szseisan.cn
 Service supervision hotline: 400-812-0102

“Lenovo”, “thinkplus” belongs to affiliated enterprises of Lenovo Group. Mentioned other trademarks, company names, products or services name may be a trademark of affiliated enterprises of Lenovo Group or another company.
 Copyright © 2022 Lenovo Group and its licensors. All rights reserved.

