


diagram 3

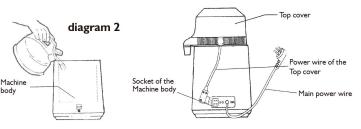





If the water has a taste at the beginning of use ,it is normal,please kindly use citric acid cleaning agent and hot water for immering 12 hours ,after using 7-8times will be normal. (diagram5)

Water Distiller User Manual

HR-1



IMPORTANT NOTES

PLEASE READ BEFORE USE AND FILE FOR FUTURE USE

Before Use

Unpack the water distiller and check all the components are present and undamaged. The box should contain:

I. Distiller

5. Filter

2. Water bottle

6. Main power wire

3. Discharge Cap

7. Chamber cleaning powder

. Bottle Cap

8. Instruction Manual

Set up

- I. Remove storage bottle from inside of water distiller
- Fill tank inside of the machine's body up to the highest water level line be very careful not to overfill tank. (time needed to distill water can be reduced by using already boiled water)
- Place top cover onto machine's body making sure the silicone seal is correctly in place around the entire rim. Check to make sure the unit is on a stable surface. Then connect power cord from the top cover into the machine's body.
- 4. Set up storage bottle as per diagram 1. Connect power cord to power outlet.
- 5. Press 'Starting Button". The fan will come on automatically and the tank will begin to heat, thus starting the distilling process.
- 6. Water will begin to drip into the storage bottle after approximately 30 minutes. It will take approximately 4 hours to distill 4 litres of water. The unit will automatically shut down when the cycle has finished.

Please note: The unit must be allowed to cool down before starting another distillling cycle. (This will prevent injuries from scalding water and prolong the life of the Distiller).

Do not use the first bottle of distilled water. It will take one distilling
cycle for the unit to 'self-clean/. Wipe out tank and rinse/discard water
in storage bottle. Distiller is now ready to create distilled water.

Please note:

- * Use unit in a dry, well ventilated area.
- Keep the body of the unit dry only fill with water using a jug
- * 'Start button' will begin distilling cycle and unit will automatically turn itself off when cycle is finished. To stop unit mid-cycle remove power cord from socket.
- * Leave power cord unconnected when unit is not in use.
- * Do not immerse any part of the unit in water
- * Do not remove cover whilst unit is mid-cycle. Wait until unit has cooled down before removing top.

Cleaning

Rinse and wipe out tank everyday using clean water.

Calcification and scale will build up on bottom of the tank and should be removed every two weeks. Use following instructions:-

- $I. \quad \hbox{Pour in enough hot water to cover scale in the tank}.$
- 2. Pour I-4 teaspoons into tank depending on the amount of scale.
- 3. Leave lid off unit and start up a cycle by pushing 'start button'.
- 4. Let cycle run for 30 minutes, pour out water and wash the inside of tank with clean water.
- 5. If scale is not completely removed repeat the process.
- 6. Replace filter in lid every 2-3 months.