

Trouble shooting		
Phenomenon	Possible cause	Trouble shooting
The product works but no steam comes out after startup	Home circuit failure or fuse blowout	Assign a specialized person to check/repair
	Product circuit failure	Assign a specialized person to check/repair
	There is no water or few water in the water tank	Add water into the water tank
Bottom plate drips	Internal inlet pipe bends or falls off	Assign a specialized person to check/repair
	Heating plate broken	Assign a specialized person to check/repair
	Electromagnetic pump broken	Assign a specialized person to check/repair
Body drips	Heating plate broken	Assign a specialized person to check/repair
	Too much scale in the heating plate	Assign a specialized person to check/repair
Steam comes out of other positions besides the heating plate	Internal inlet pipe or outlet pipe is broken or falls off	Assign a specialized person to check/repair
	Sealing element broken	Recheck whether the sealing element is installed in place Assign a specialized person to check/repair
Abnormal sound	There is no water in the water tank	Add water into the water tank
	Water pump is blocked	Assign a specialized person to check/repair
	Normal phenomenon	Steam comes out normally. Water pump has a certain sound
Water tank leaks	Filler cap is not fixed properly	Fix the filler cap
	Water tank might be broken due to falling off	Replace it with a new machine
Less steam	Voltage too low	Avoid using this product during power consumption peak hours

Since the large airflow generated by the steam strikes the panel, there might be a "puff" sound at the panel which is a normal phenomenon. Please rest assured to use. When the temperature regulator in the body is working, there might be a phenomenon of less steam sometimes. When the temperature is stable, the steam will restore to normal volume. Sometimes due to high room temperature or interior light reason, steam may not be seen.

Environmental protection list							
According to the Rules on the Restriction of Hazardous Substances in Electrical Appliances and Electronic Products of the People's Republic of China, the name and content of hazardous and toxic substances or elements that may be included in electrical appliances and electronic products are listed in the table below:							
Name of Electronic Product: Handheld Ironing Machine							
Component name	Hazardous Substances or Elements						
	Pb	Hg	Cd	Cr (VI)	PBB	PBDE	
Body	○	○	○	○	○	○	○
Water tank	○	○	○	○	○	○	○
Power cord bushing	○	○	○	○	○	○	○
Water pump	×	○	○	○	○	○	○
Internal wire	○	○	○	○	○	○	○
switch	×	○	○	○	○	○	○
Thermostat	×	○	○	○	○	○	○
Filler plug	○	○	○	○	○	○	○
Electrical heating tube	×	○	○	○	○	○	○
Thermal fuse	×	○	○	○	○	○	○
Power cord assembly	×	○	○	○	○	○	○
Screw	○	○	○	×	○	○	○

This form is prepared according to SJ/T 11364.

○: means that the content of the hazardous substance in all homogeneous materials is under the limit specified by GB/T 26572.

×: means that the content of the hazardous substance in at least a certain homogeneous material of the component exceeds the limit requirement specified by GB/T 26572.

(Components with "×" indicate that, though the complete replacement of hazardous substances or elements with environmental friendly substances or elements can't be achieved at present due to limited global technological level, this situation will be improved gradually along with subsequent technological improvement.)

Note: Our products try to use non-toxic and non-hazardous materials as far as possible. The above components with toxic and hazardous substances or elements are used because the complete replacement of hazardous substances or elements with environmental friendly substances or elements can't be achieved at present due to limited global development level and present technological level of the industry. Technologies and materials might be updated without further notice.

**Special statement:**  
All the content in this instruction has been checked carefully. Product technology or software upgrading will be stated in new instruction version. The appearance, color and performance of this product might be changed. Please refer to the actual product.

Warranty certificate						
Please fill in this warranty certificate carefully						
Customer name		Address				
		Tel.		Postal code		
Date of purchase		Place of purchase		Mail telephone		
Model		Product barcode		Warranty period	One year	

Date of delivery	Date of maintenance	Failures and measures	Maintenance Department	Maintenance personnel	Maintenance cost	Change/return certificate

1. Under normal use conditions, the warranty period of the whole machine is one year. For use in a business premise, the free warranty period is half a year (The gifts are out of the warranty scope.)  
2. The starting date of the warranty period is subject to the starting date given on the invoice. Please show your invoice when maintenance.  
3. The customer may select to return, change or repair the product within 7 days from the date of sale in case of performance failure; the customer may select change or repair the product within 15 days from the date of sale in case of performance failure.  
4. Under any of the following circumstances, the product can't enjoy the free warranty within the warranty period:  
• Product failure caused due to non-compliance with this instruction;  
• Product failure caused because the customer repairs the product without authorization;  
• Product failure due to natural disaster, falling off, collision, improper voltage;  
• shabby appearance formed in the process of use;  
• Non-general family use (product failure caused because the product is used in places with severe conditions or used on a vehicle or a ship).  
5. We will offer you dedicated service even when the warranty period expires or the product is out of the free warranty scope.  
**Special statement:** 1. This product may undergo technological change in the future without further notice. 2. The appearance and color of the product may be changed. Please refer to the actual product. In case of any after-sales problem, please call the service hotline, we will offer you dedicated service

Manufacturer: Ningbo Hexu Electric Appliance Co., Ltd.  
Address: No. 418, Kaifa East Road, Zhouxiang Town, Cixi, Ningbo, Zhejiang, China

Executive standards:  
GB-4706.2-2007 GB4706.1-2005  
GB17625.1-2022 GB4343.1-2018

Operating instruction

Handheld ironing machine  
Operating instruction

Table of contents	
Cautions	1
Product introduction	2
Usage	3
Cleaning and maintenance	4
Trouble shooting	5
Environmental protection list	6
Warranty certificate	7



- The product appearance is for reference only. Please refer to the actual product.
- Please read this instruction carefully before use
- The company reserves the right of interpretation of this instruction
- The product may undergo technological or software upgrading without further notice.

**Cautions**  
To ensure safe use of the product and avoid damages to you and others and financial loss, please observe the following safety cautions.  
Nonobservance of the safety warning and misuse of the product may cause accidents.  
The product doesn't take the following circumstances into account:  
① Used by unattended children and the disabled  
② Children playing with the product


- Anti-scald prompt, High temperature sign. Be careful to avoid scald.
- Do not connect the appliance to a DC power supply directly.
- Do not use other high-power appliance on the same socket to avoid circuit overload.
- Do not attempt to disassemble the product. Nobody other than a specialized person shall disassemble or repair the product, otherwise accidents such as fire, electric shock and personal injury may be caused.
- Please go to the after-sales repair outlet specified by the company to repair the product.
- Children should not operate and use this product independently. Keep all accessories of this product out of reach of children or incapacitated persons to prevent dangers such as electric shock and scratch.
- Please check the plug and the power cord carefully before connecting the power supply. If the power cord is broken, it must be replaced by a specialized person of the manufacturer, the maintenance department or other similar departments. The plug must be dry before use.
- Pull out the plug while adding water or cleaning.
- Do not use this product for other purposes other than ironing clothes and fabric.
- The user shall not go away when the appliance is connected with the power supply.
- Do not use steam to iron when there isn't enough water in the tank.
- When the appliance is connected with the power supply, attention shall be paid to danger arising from steam spouting. Do not put the bottom plate (the heating plate) against any person so as to avoid scald.
- When the appliance is connected with the power supply, the heating plate will get very hot. Do not touch it so as to avoid scald.
- When the appliance is connected with the power supply, high-temperature steam will be generated to cause discoloration and deformation of clothes with poor heat resistance (e.g., leather clothing). Do not use it in this case.
- The electric iron must be used and placed on a stable surface. When the electric iron is placed on its support, it must be ensured that the support is placed on a stable surface.
- If the electric iron has a visible sign of damage or leakage after falling off, the electric iron shall not be used.

**Cautions during use**  
When the appliance is connected with the power supply, do not bring the power cord into contact with the heating surface of the appliance such as the bottom plate.  
**Cautions after use**  
Please pull out the power plug after use.  
Grasp the plug with hand while pulling out it. Do not pull the power cord or grasp with wet hand. Before putting this product into storage, cool the appliance to room temperature and drain the water inside the appliance.  
**Abnormalities or failures**  
The power cord and the plug abnormally hot during use.  
There is water mist inside the buttons and the bottom of the appliance leaks.  
In case of any abnormality or failure, stop using this product immediately, so as to avoid fire, electric shock and injury.

To avoid the clothes being damaged under high temperature, please check the fabric label before ironing and make sure that the fabric is suitable for ironing (Fabrics that are not suitable for ironing include silk and some special fabrics. Do not bring the heating plate into direct contact with the fabrics while ironing)



Technical parameters	
Product name	Handheld ironing machine
Product model	HX-6198
Voltage rating	100-120V~
Frequency rating	60Hz
Power rating	800-1150W
Water tank capacity	100mL

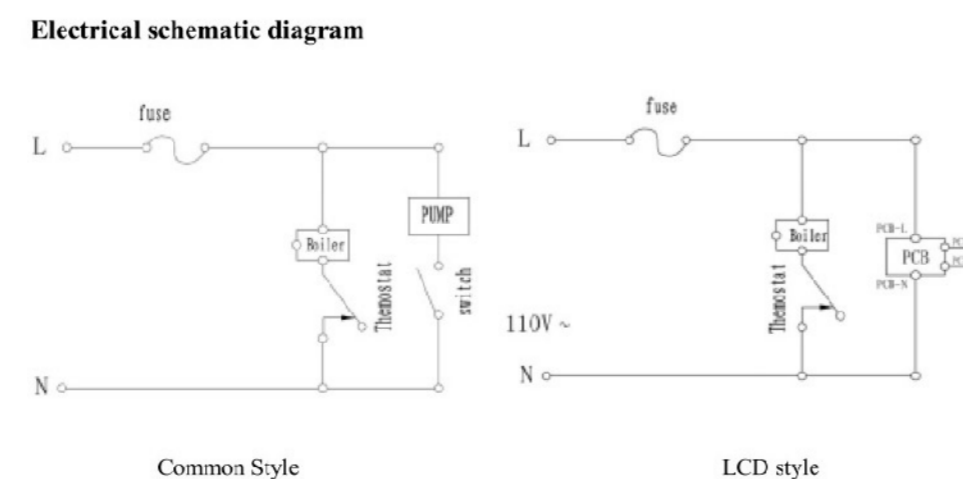

**Usage**  
1. Add water into the water tank. Remove the filler plug and add an appropriate amount of water into the water tank. (\* In order to prolong the service life of the machine, pure water is recommended).  
2. Put the filler cap on the water tank to seal it.

**3. IRON**  
In the process of vertical ironing, a better ironing effect can be obtained by rotating the ironing head 180° anticlockwise; this method can also be used in the process of horizontal ironing, or the ironing head can be retracted, depending on personal habit.

**4. CONNECT THE POWER SUPPLY**  
1) Plug in power, the heat light will turn on, and wait the light turn off, press the steam button, steam comes out, press the steam button again, will turn off the steam, that is a cycle (Common Style)  
2) Plug in power, the power light flick slowly for 20 seconds, until the 9 seconds will become countdown model; until 0, the heat process finished, new touch the power table, can select different steam amount, level. the steam big and small signal be lighted meantime. (LCD style)

**Cleaning and maintenance**  
**Cleaning, maintenance and storage**  
1. Turn off the steam switch and pull out the plug. If there is water in the water tank, drain out the residual water. After the machine cools down, clean the body.  
2. Clean the product panel with a soft cloth. Wipe the points with stain or scale with the cloth dipped in neutral detergent.  
3. Withdraw and store the power cord properly according to the figure.

**Notes:**  
1. Do not wash the machine with water or immerse it in water since this may cause electric shock, short circuit, fire or machine failure, etc.  
2. Never pull out the plug with wet hand.  
3. Do not clean and maintain the machine with any diluent, chemical agent, steel brush or other articles that may cause damage or failure to the machine. Never operate with wet hand.  
4. When the product is not in use, pull out the plug and make sure that there isn't residual water for the whole machine. Keep the machine clean, tidy it up and place it at a well-ventilated place.