Skip to content

Manuals+

User Manuals Simplified.




ANKER PowerConf S3 User Manual



Contents [hide

- 1 At a Glance
- 2 Connecting
- 3 Powering On/Off
- **4 Button Controls**
- 5 Status LED
- 6 Audio Output
- 7 Soundcore App
- 8 Specifications
 - 8.1 File Downloads
- 8.2 Related Manuals

At a Glance

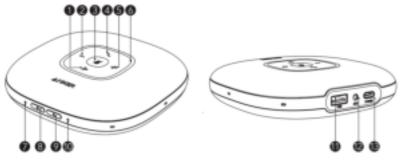

| 1 | Multi-function button | 8 | Power button |
|---|-----------------------|----|----------------------------------|
| 2 | Volume down button | 9 | Bluetooth button |
| 3 | Mute button | 10 | Bluetooth LED |
| 4 | Phone call button | 11 | USB port (Type-A) for charge-out |
| 5 | Volume up button | 12 | Audio output port |
| 6 | Status LED | 13 | USB port (Type-C) for charge-in |
| 7 | Power LED | | |

Connecting

a) Connect to your PC by using a USB-C cable



b) Connect to your PC or mobile device via Bluetooth pairing When powered on for the first time, PowerConf S3 will automatically enter the Bluetooth pairing mode.





- Each time you power on PowerConf S3, it will automatically connect with the last successfully connected device if available.
- To disconnect Bluetooth, press the Bluetooth button again.

Powering On/Off

Press and hold the power button for 2 seconds to power on. The status LED will light on clockwise and then fade out. To power off, press and hold the power button for 2 seconds.



- PowerConf S3 will automatically power on once connected to your PC.
- PowerConf S3 will automatically power off after 30 minutes of inactivity or no source.

Button Controls

| +/- | Press or press and hold | Volume up/down |
|------------------|------------------------------|--------------------------------|
| • | Press | Answer/End a call |
| \ | Press and hold for 2 seconds | Reject a call |
| Ź | Press | Mute or restore the microphone |
| \triangleright | Press | Play/Pause music |

Status LED

Lights up white for 2 seconds Connected to power or PC

Breathes green Coming call


Partially lights up blue Sound direction detected

Lights up blue clockwise or counterclockwise Increase/Decrease volume


Turns red Muted

Lights up green Press Power button to check the battery level

Charging a) Charging PowerConf S3

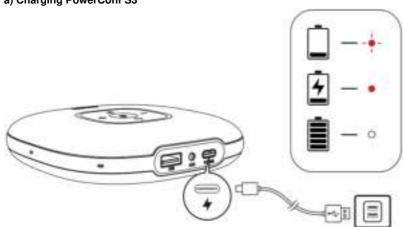

b) Charging an external device

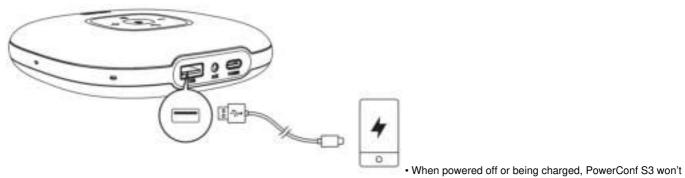


charge out.

• When the remaining battery is less than 30%, the charge out current will be 5V = = 1A; if less than 10%, PowerConf S3 won't charge out.


Audio Output

Connect an external speaker to the AUX OUT port of PowerConf S3 by using an AUX cable (not provided). The audio will be played through the speaker.

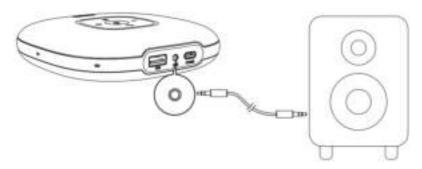

Soundcore App

Download the Soundcore App for software updates.

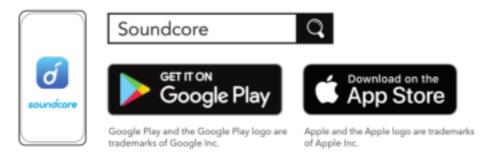

Specifications

Specifications are subject to change without notice.

Charge input5V = = 2ACharge out5V = = 2.1ARated output power3W RMSBattery capacity6700 mAhCharging time4 hoursTalktime24 hours

 $\begin{array}{ll} \text{Driver size} & \text{1 x 1.75" (full range)} \\ \text{Frequency response} & \text{20 Hz} - \text{20 kHz} \end{array}$

Bluetooth version V 5.0
Bluetooth range 10 m / 33 ft

service@soundcore.com

 $\underline{ support.mea@soundcore.com} \ (For \ Middle \ East \ and \ Africa \ Only)$

+1 (800) 988 7973 (US) Mon-Fri 9:00 - 17:00 (PT)

File Downloads



Related Manuals

- 1. ANKER PowerConf User Manual Anker PowerConf User Manual At a Glance 1 Multi-function button...
- 2. Anker PowerConf A3301 User Manual USER MANUAL Anker PowerConf A3301 Anker Innovations Limited. All rights...
- 3. Anker Anker Soundcore Liberty 2 User Manual Anker Anker Soundcore Liberty 2 Product specification Product number :...
- 4. ANKER PowerPort User Manual ANKER PowerPort User Manual Attention Read all the instructions before...
- 5. Anker SoundCore Boost User Manual USER MANUAL How to Use
- 6. ANKER PowerPort III User Manual PowerPort III USER MANUAL Power port III 65w pod Read...