

BUTURE

USER MANUAL



BUTURE JR400 Stick Vacuum cleaner
sales@ibuture.com

[Read this user manual carefully before first use.
Keep this manual for further guidance in case.]

INTRODUCTION

Thank you for purchasing the BUTURE JR400 stick vacuum cleaner.

Please read the user manual carefully before using the product and take safety protection measures to avoid malfunctions caused by accidental operation. If the product is given to another person, please make sure to also include this user manual.

The product provides a free 2-year warranty, please activate the warranty card in time. If you have any questions, please contact **sales@ibuture.com**.

WARNING

Personal Safety

1. Store it indoors in a dry place and out of the reach of children.
2. This product is suitable for children 10 years old and above. Users with reduced physical functions, sensory or intellectual abilities, or lack of experience and knowledge are advised to use the product safely supervision or guidance and to be aware of the hazards involved.
3. Please pay attention to safety when children or pets near the vacuum cleaner.
4. Children should not clean or use the product without supervision.
5. Use only manufacturer's recommended attachments as described in this manual; misuse or use of any accessory or attachment other than those recommended may present a risk of personal injury.
6. Take extra care when cleaning stairs.
7. Keep the appliance and accessories away from the hot surface.
8. Do not block the appliances' openings or hinder airflow, keep openings free of any objects including dust, lint, clothing, fingers (and all parts of the body).

Electrical Safety

1. Only use batteries and chargers supplied by the manufacturer.
2. Never modify the charger in any way.
3. Do not pull the cord to disconnect it from a socket, grasp the plug and pull to disconnect it.
4. Keep the charger cord away from hot surfaces and sharp edges.
5. The supply cord cannot be replaced. If the cord is damaged the charger should be discarded and replaced.
6. Do not handle the charger or the appliance with wet hands.
7. Do not store, or charge the appliance outdoors.
8. The charger must be removed from the socket before removing the battery, cleaning, or maintaining the appliance.

Battery Safety

1. This appliance includes Li-ion batteries, do not incinerate batteries or expose them to high temperatures, as they may explode.
2. Liquid ejected from the battery may cause irritation or burns.


3. In an emergency contact professional help immediately.
4. Leaks from the battery cells can occur under extreme conditions. Do not touch any liquid that leaks from the battery. If the liquid gets on the skin, wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention. Wear gloves to handle the battery and dispose of it immediately in accordance with local regulations.
5. When the battery pack is not in use, keep it away from paper clips, coins, keys, nails, screws, or other small metal objects that could make a connection from one terminal to another.
6. When you dispose of the appliance remove the battery and dispose of the battery safely in accordance with local regulations.

CONTENT OF PACKAGE

Please check and confirm the accessories and parts according to the following sheet before using.

Part Name	Quantity
Main Body	1
Battery Pack	1
Telescopic Aluminum Alloy Tube	1
Electric Brush Head	1
Hard And Soft Bristle Integrated Brush (Installed)	1
Crevice Nozzle	1
Round Brush	1
Wall Mount Stand	1
Charger	1
Filter Cleaning Brush Tool	1
Air Filter (Installed)	1
Hepa Dust Filter (one is installed in the main body)	3
Screws set (Used to install wall mount stand)	1
User Manual	1

KNOW YOUR PRODUCT

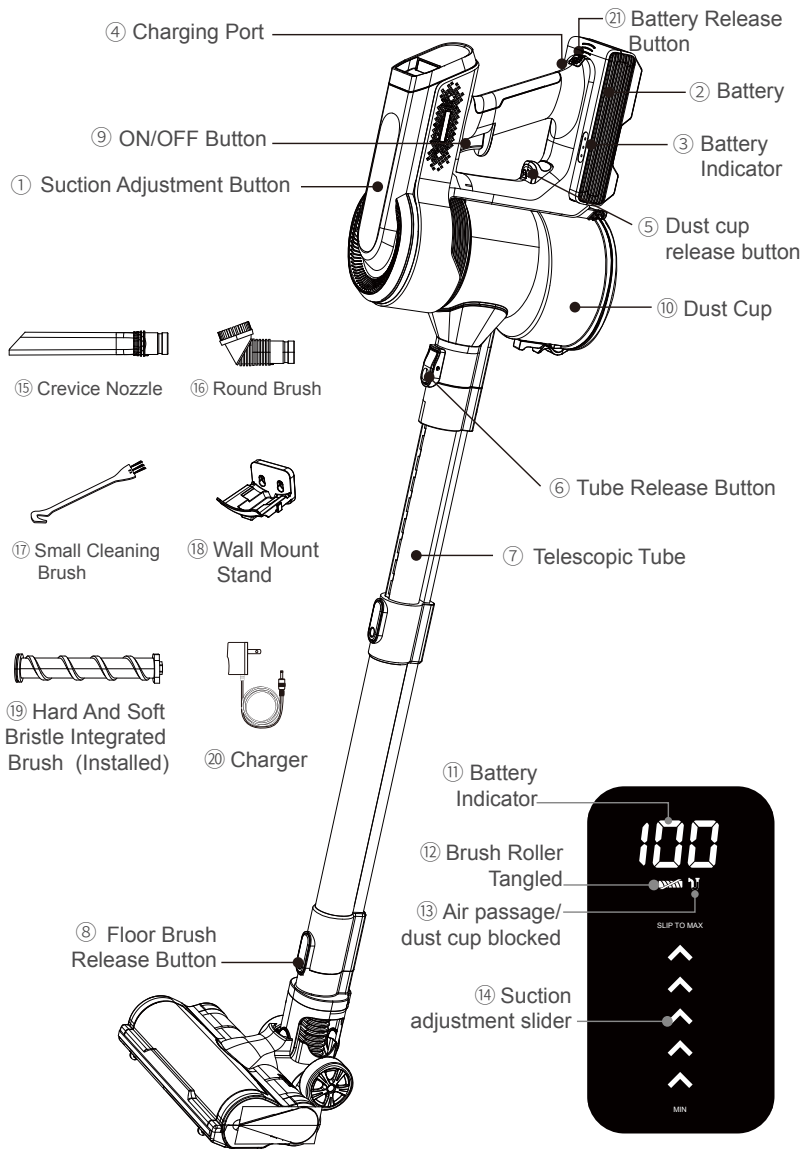

Number	Name	Introduction
①	Control Panel	To control speed, and indicating battery power, and having a reminder that the floor brush/dust cup is clogged
②	Battery	/
③	Battery Indicator	To indicate battery power
④	Charging Port	/
⑤	Dust cup release button	To release dust cup
⑥	Tube Release Button	To separate the telescopic tube from the main body
⑦	Telescopic Tube	Adjust the length according to different needs
⑧	Floor Brush Release Button	To separate the floor brush from the telescopic tube
⑨	ON/OFF Button	Turn on/off the vacuum cleaner
⑩	Dust Cup	/
⑪	Battery Indicator	To indicate battery power
⑫	Brush Roller Tangled	Remind that the floor brush is blocked, the prompt light will flash 6 times and then the floor brush will stop working, indicating that the floor brush needs to be cleaned.
⑬	Air passage/dust cup blocked	The indicator light flashes slowly to remind that the telescopic tube/dust cup is clogged and needs to be cleaned. When the telescopic tube/dust cup is blocked to the limit, the screen display goes out and the vacuum is turned off.
⑭	Suction adjustment slider	To change suction power
⑮	Crevice Nozzle	Remove dust in a hard-to-reach area, such as window gaps, the bottom of beds, sofa crevice, drawers, etc.
⑯	Round Brush	Clean keyboards, desktops, cabinets, lamps, etc.
⑰	Small Cleaning Brush	Sweep away the dust on brushes and dust cup
⑱	Wall Mount Stand	Installed on the wall for easy storage of the vacuum cleaner
⑲	Hard And Soft Bristle Integrated Brush (Installed)	Used on hard or soft surfaces, such as wood floors, cement floors, carpets, and sofas
⑳	Charger	Battery charging adapter
㉑	Battery Release Button	To release battery



CHARGING




Turn off the power before charging.

Only charge with the original charger to avoid damage to the vacuum cleaner. During over-current protection and over-voltage protection, the battery indicators flash at the same time, and the screen goes out.

1. One end of the charger is connected to the power supply and the other end is connected to the battery charging port.

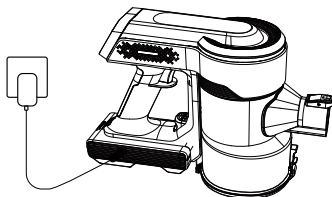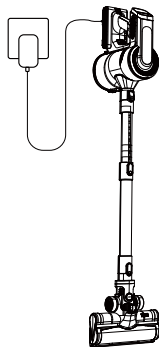


2. During the charge if the battery level shows 100, means it is fully charged and ready to use.

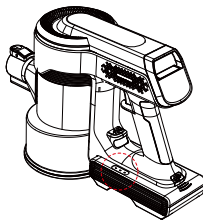

ASSEMBLING


1. Connect the telescopic tube.

 • Insert the telescopic tube into the main body and make sure it is secure. Press the release button, the telescopic tube can be removed.




2. Connect brush heads.

 - To clean sofas and beds, a brush head can be assembled with the main body without a telescopic tube.



- To clean floors, stairs and high places, it's suggested to connect with telescopic tube.

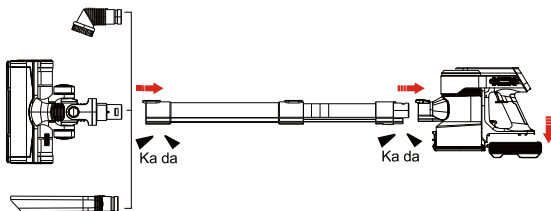


USING




Do not exceed the "MAX" dust collection capacity of the dust cup.

Please keep the suction nozzle unobstructed and avoid blockage. Otherwise, the motor will overheat and cause danger.


1. Choose a brush head according to your needs.

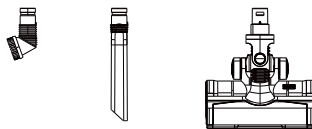

2. Aim the suction port of the vacuum cleaner at the surface of the object to be cleaned.

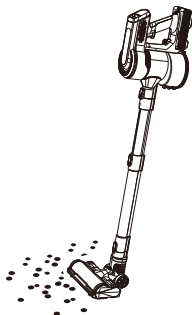


3. Press the ON/OFF button to start work.

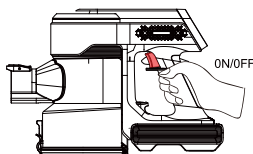


4. Adjust suction power.

- There is a suction slider on the host control panel, which can be slid to any position of the slider to adjust the suction. Stepless suction adjustment, easy sliding, convenient for your operation.
- The remaining power value will be displayed on the control panel, and there are also 3 power indicator lights on the battery. When the battery is turned on, when the battery power is less than 10%, the light on the battery will turn on red as a charging reminder. **(Note: The battery indicator will not light up when shutting down)**

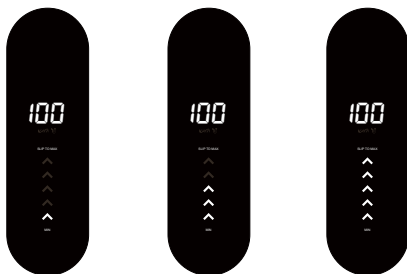

5. According to different needs, the length of the tube can be adjusted.

 When you need to extend the tube, press the button behind the tube and extend the tube at the same time. When you need to shorten it, press the button and pull the tube back.




CLEANEING


1.Clean the dust cup.

To maintain good suction power, please empty the dust cup and clean the filter after each use.


- Press the release button on the dust cup to open the dust cup lid, dump out the trash.

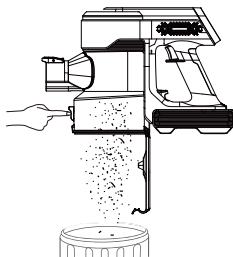

- Press vertically the dust cup release button of the main body, grasp the bottom of the dust cup, and take out the dust cup.

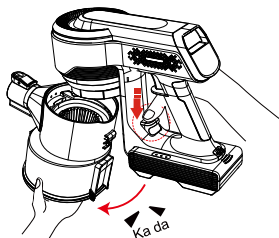


- Pull out the HEPA filter. Then open the bottom cover of the dust cup, rotate the stainless steel filter and take it out.

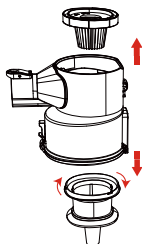

- Clean the filter and dust cup with water, and allow to dry naturally for 24 hours before refilling in the dust cup.




Do not use cleaning equipment to clean the filter, do not use drying equipment to dry the vacuum cleaner, natural drying only.

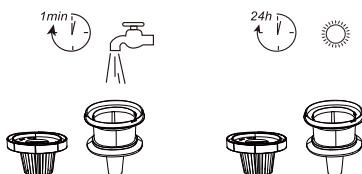


Reinstallation


- Put the stainless steel filter from the bottom of the dust cup and rotate it tightly (There are 3 small protrusions on the stainless steel filter's edge corresponding to the 3 small grooves on the dust cup).
- Put the HEPA filter from above, and cover the dust container Bottom cover Bottom.

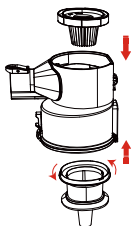

- Align the convex part of the handle with the concave part of the dust cup and insert it, and then press the release button of the dust cup to completely close the dust cup and the handle.

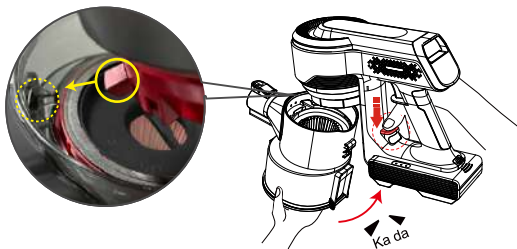

Note: The function of the air filter element is to allow the device to dissipate heat and dredge the air more effectively during operation, without frequent cleaning. If necessary, press the air filter release button to remove the air filter.

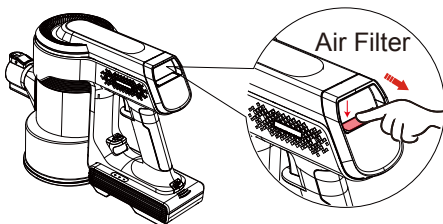


2. Clean the brush.



Ensure the appliance is disconnected from the charger before removing the roller brush. Be careful not to pull the ON button.


- Push up the switch to the “unlock” side, remove the plug, then take out the roller brush.

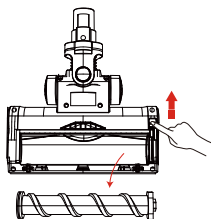


- Use the small cleaning brush to sweep away the trash on the roller. The knife side used to remove the tangled hairs from brush roller.



- Clean the roller brush with/without water.

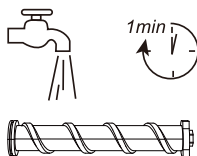

- Push in gently to install the roller brush. Before replacing, make sure the brush is completely dry.

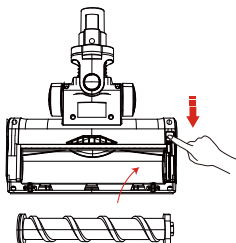

MAINTENANCE

1. The filter can be cleaned with warm water. After cleaning it must be thoroughly dried before putting it back into use. Do not immerse the main unit in water or any liquid.
2. Clean the Hoover casing only with a soft, slightly damp cloth. Do not allow any liquid substances to enter the Hoover.
3. Do not use any corrosive chemicals or abrasives.
4. It is recommended to change the Hepa filter every 2 months (depending on use) to ensure optimum performance. Do not use the filter when it is damaged or worn out.

TROUBLESHOOTING

Common Trouble	Possible causes	Solutions
Vacuum can not work	<ol style="list-style-type: none"> 1. Low battery power 2. Battery damaged 3. The floor brush is blocked with hair or other debris 	<ol style="list-style-type: none"> 1. Charge before use 2. Change a battery 3. Remove blockage in suction inlet
Suction reduced	<ol style="list-style-type: none"> 1. The dust cup is full of dust 2. The filters are full of dust 3. The telescopic tube or brush inlet blocked 4. Low battery power 	<ol style="list-style-type: none"> 1. Empty the dust cup 2. Clean or change the filter 3. Remove blockage in tube and brush inlet 4. Charge before use
Battery indicator does not light up	<ol style="list-style-type: none"> 1. Battery damaged 2. Screen damaged 3. Adaptor incorrectly connected or damaged 	<ol style="list-style-type: none"> 1. Change a battery 2. Change the motor unit 3. Change the adaptor or fully insert the charging terminal into the battery charging terminal
Insufficient use time after charging	<ol style="list-style-type: none"> 1. Insufficient charging time 2. Battery aging 3. The dust cup is full of dust 4. The filters are full of dust 5. The telescopic tube or brush inlet blocked 	<ol style="list-style-type: none"> 1. Recharge the battery 2. Change a battery 3. Empty the dust cup 4. Clean or change the filter 5. Remove blockage in tube and brush inlet
Roller brush can not work	Blocked with hair, pebbles, or other debris	<ol style="list-style-type: none"> 1. Clean the roller brush 2. Avoid picking up large rubbish, such as pebbles
Display turns black and shows E1 in the middle	Over temperature protection	Prompt that the current battery temperature is high . Stop using/charge the vacuum cleaner until the battery temperature is normal (wait about 45 minutes)
Display turns black and shows E2 in the middle	Abnormal charger voltage	When the adapter voltage is too high or too low, the display will flash "E2" quickly, and a red light will flash quickly on the battery. The machine will automatically shut down after flashing for 10 seconds. In this case, please contact sales@ibuture.com

Display turns black and shows E3 in the middle	Battery failure	When the battery fails, the display will flash "E3" quickly, and a red light will flash quickly on the battery. The machine will automatically shut down after flashing for 10 seconds. In this case, please contact sales@ibuture.com
Display turns black and shows E4 in the middle	Negative Temperature Coefficient connection abnormal	When the Negative Temperature Coefficient is abnormal, the display will flash "E4" quickly, and the red light on the battery will flash quickly. The machine will automatically shut down after flashing for 10 seconds. In this case, please contact sales@ibuture.com
Display turns black and shows E5 in the middle	Host overcurrent protection	In order to protect the quality of the host, there is a reminder of over-current protection. When the host is used over current, the display will flash "E5" quickly, and a red light on the battery will flash quickly. At this time, temporarily stop using the vacuum cleaner and wait for a while before using it again

WARRANTY

If there is any problem or malfunction during use, please send your question and order number to our email.

We will provide you a good after-sales service within 24 hours.

E-mail: sales@ibuture.com