User Manual

playbird

Kegel ball training beginner



Thank you for using our products please read this carefully before use


Made In China

Product description

It is the elegant appearance and perfect touch that gives you an array of options. It has super strong vibration and multiple vibration modes. You'll have the anticipation of the most dynamic stimulation. The products also provide a sense of safety and environmental protection which is a part of our design philosophy. We hope this culminates in a superior experience for the user. This product is destined to be an extraordinary product.


- 1.Model:10 different vibrations
- 2.Material: Food-grade silicone
- 3.Max noise: ≤50db
- 4.Battery:170mAh rechargeable lithium battery and 3V 2032 Button cell
- 5.Power: USB 5V 150mA DC charging ,charging time about 1.5H,use time about 2H.
- 6. Waterproof Rating: IP65.


Instruction

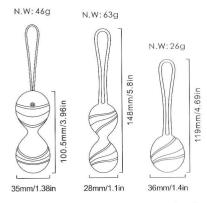

 PS: Each Kegel ball weight error estimate value $\pm 3g$.



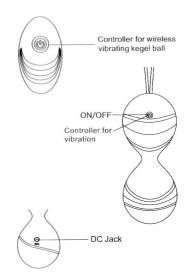




Steps for usage

Level 1



one ball 26 g,30 minutes per day, for 1-2 weeks.

 Level 2



Vibrating ball 46 g, 30 minutes a day, for 2-3 weeks.


Level 3



Double balls 63 grams, 30 minutes a day, 1 month.

Direction for use

- 1. When product is received, please charge at once(Refer to charging guide).
- 2.Press button **b** 1.5 seconds to open /off the product ,press button **b** again change vibration mode.
- 3. Press button a Controller for wireless vibrating kedel ball.
- 4.Press b 1.5 seconds to stop vibrating.

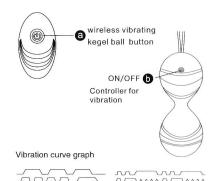

Charging Guide



Put the DC charging plug into the hole of product to charge. Then insert the USB charging plug into the USB port of your computer or other charger.(output:5V=1A or 5V=1.5A).



2

When product is charging, the LED will be flashing



0

When a solid light appears, charging is complete.

※ When charging, the toy must be in a shutdown state, make sure products cannot be used while charging.

Attention

- 1. You must charge the toy in a safe place.
- 2.Massage oil or hand cream could not be used as lubricant.
- 3.Stop using it if you feel uncomfortable or you find the toy is no longer smooth or has sharp edges.
- 4. Not recommended used in depth of one meter pool.
- 5.After use, the toy should be cleaned immediately. Warm water and soap can be used to clean the toy, with special detergent, disinfectant or 75% alcohol sometimes. Long term use is not recommended.
- 6.Can't be immersed in water,wash thoroughly with clean water flow.Not recommended to use boiled water to disinfect.
- 7. Air dry and avoid direct sunlight.
- 8. Store it well beyond the reach of children.
- 9. The product contains a lithium battery. Please put in the recycle appropriately.





