

AREBOS

Slow Juicer 200W stainless steel

AR-HE-SJ200E



Please follow all security measures in this user's manual to ensure a secure use.



Thank you for trusting in AREBOS.

List of contents

1. Safety instructions	3
1.1 Symbols	3
2. Packaging Contents	3
3. Assembling	4
4. Usage	4
5. Cleaning	5
6. Troubleshooting	5
7. Technical Data	6
8. Disposal Instructions	6
8.1 Disposal of the packaging	6
8.2 Disposal of waste equipment	6
8.3 Meaning of the "dustbin"	6
EU Declaration of Conformity	7

Please read and save these instructions. Read through this user's manual carefully before using this product. Protect yourself and others by observing all safety information, warnings and cautions. Failure to comply with instructions could result in personal injury and/or damage to product or property. Please retain instructions for future reference.

1. Safety instructions

1.1 Symbols



By means of a CE marking, it can be recognized that a product complies with the legal requirements of European legal standards and therefore may be traded within the European Community.



This product **must not** be disposed of with household waste!



Warning! Read the safety instructions carefully. Failure to follow the safety precautions could result in serious injury or damage. Keep the operating instructions in a safe place.



Warning of electrical voltage!

2. Packaging Contents

1. Fruit pusher
2. Top cover
3. Rotor
4. Filter
5. Filter rack
6. Chamber with Exit
7. Main Product
8. Juice/Pulp Cup



3. Assembling

1. Position the chamber properly on the product body.
2. Position the filter and filter rack with the Triangle mark inside the chamber.
3. Install the Rotor firmly inside the slow juicer's chamber. Ensure that it has been firmly positioned inside.
4. Place the Top Cover on top of the chamber while aiming for the UNLOCK MARK on the Main Unit.
5. Fasten the Top Cover to the LOCK MARK to hold it firmly in place.

4. Usage

Simply follow the instructions provided below when using the machine.

1. After assembly correctly, please turn on the machine to run several seconds for warm up and make sure in good condition.
2. Best use with fresh fruits which is rich in water and nutrition.
3. Wash and cut fruits in sizes that can fit into the tube.
4. Remove the pits and hard core from the fruits.
5. Put food materials into feeding tube and slightly press down slowly using the fruit pusher.

When the machine is stopped during juicing:

1. Did you use more than 15mins? If Yes, wait for 5 minutes for the slow juicer to cool down. Press and hold the "R" button for 2-5 seconds to push the fruits upwards.
2. Press on to resume juicing.



NOTES:

- Do not force in the fruits during juicing to prevent damage to the Auger and Micro-Mesh Filter.
- This machine is not suitable for juicing cereal and sugarcane.
- Do not juice continuously for more than 15mins.

5. Cleaning

1. Simply follow the instructions provided below in cleaning the machine.
2. Turn ON the machine and pour in water, this will immediately push out the
3. remaining residue left in the chamber and Auger.
4. Turn OFF the machine and unplug the power adapter from the power outlet.
5. Rotate the top cover (See package contents) to the UNLOCK MARK and remove the top cover.
6. Lift and remove the chamber, the filter, and the filter rack separately, then wash them with water until clean.

6. Troubleshooting

Please check the details below before calling our Technical Support for repair or service.

Machine does not start

Check if the device is plugged properly to a power outlet.

Check the parts of machine and make sure that each component is assembled and attached correctly.

Machine's juice output yield is low

Ensure that the rubber at the bottom of chamber is plugged tightly and firmly to the chamber.

Fresh fruits give the highest level of juice content.

Machine stops working

Check if you have put excessive food materials in the machine.

Check food material composition (e.g. cords, hard fruit core) that may have caused blockage.

Press the REV Button for 3 to 5 seconds, and then press the ON button. If the machine is still not working, simply turn it OFF and the chamber".

Machine emits sound while juicing and vibrates

It is normal for the machine to produce some sound as it squeezes the fruits or vegetables into marsh.

Depending on the type of ingredient, hard ingredients (such as carrot, potato, beetroot, radish and etc.) may cause the machine to emit louder than soft ingredients.

7. Technical Data

Name	Slow Juicer 200W stainless steel
EAN	4260627425044
Rated voltage	220-240V AC
Rated Frequency	50/ 60 Hz
Motor speed	60 rpm
Protection Class	I
Degree of Protection	IP20
Capacity Juice Container	0,6 L
Capacity Pulp Container	0,6 L
Cable Length	120 cm
Net Weight	3,9 kg

8. Disposal Instructions

8.1 Disposal of the packaging

- Please make reference to the guidelines and standards for appropriate disposal of the packaging valid in your region. In part, the package may consist of plastic bags - watch this respect, with special care to ensure that this is not out of the reach of children. There is a risk of suffocation!

8.2 Disposal of waste equipment

- Equipment must be disposed of in accordance with the rules and regulations of the local waste disposal.
- At the end of the long life of your article, please dispose of the valuable raw materials for proper disposal so that proper recycling can take place. If you are not sure how to proceed, the local waste disposal companies or recycling centers are happy to help.

8.3 Meaning of the “dustbin”



Protect our environment; electrical appliances do not belong in household waste. Use the provided for the disposal of electrical equipment collection points and enter your electrical and electronic equipment that you no longer use. They help ensure that the potential effects of incorrect disposal on the environment and human health to be avoided. So, do your part to recycle, recycling and other forms of recovery of waste electrical and electronic equipment. Information on where the device is disposed of, please contact your local authorities or local Governments.

Our customer service number: +49 (0) 931-45232700

EU Declaration of Conformity

We,

Canbolat Vertriebs GmbH, Gneisenaustraße 10-11, 97074 Würzburg, Germany,

Hereby declare that the product named below, seen its design and construction as well as according to our sales, has been complied with the relevant and basic health and safety EU-requirements.

Name of the product: Slow Juicer 200W stainless steel

Art. Nr.: 4260627425044

Model Nr.: AR-HE-SJ200E

If the product has any modification not allowed by us, this declaration loses its validity.

Tested acc. to:

LVD 2014/35/EU

EMC 2014/30/EU

ROHS 2015/863/EU

EU Standard:

EN 60335-2-14:2006 +A1:2008 +A11:2012 +A12:2016

EN60335-1: 2012 +A11:2014 +A13:2017

EN 62233: 2008

EN 55014-1:2017

EN 55014-2:2015

EN 61000-3-2:2014

EN 61000-3-3:2013

Date/Manufacturer Signature/Location:

Würzburg, June 23, 2020



Identification of the signatory:

Korhan Canbolat, head of the company

Authorised representative for the technical documentation:

Korhan Canbolat

Office address:

Canbolat Vertriebs GmbH

Gneisenaustraße 10-11

D-97074 Würzburg

Return address can be found in the imprint: <https://www.arebos.de/impressum/>

VAT identification number: DE 263752326

Court of the Commercial Register is Würzburg, HRB 10082

WEEE Reg.-No. DE 61617071