

Rechargeable Hair Curler



ZF-1886

USB充电美发器

USB cordless Hair Straightener

 


ZF-1886

简体中文

Product introduction 产品介绍

ZF-1886 充电美发器是一款采用新型合金发热材料，配合智能电脑芯片主板构成的充电式美发产品...

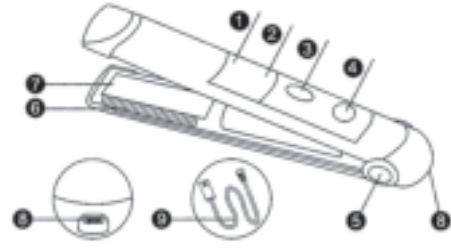


一般说明

General descriptions

- 1. 温度指示灯
2. 电量指示灯
3. 温度调节键
4. 电源开关
5. 按钮
6. 按钮
7. 浮动加热板
8. USB充电线
9. USB充电线

 *本产品不支持边充边用！
*本产品可作为充电宝为手机等移动设备应急充电！

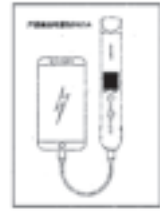

Attention 注意事项

使用产品前，请仔细阅读本说明书，并妥善保管以备日后参考。

- 1. 充电时，将USB充电线插入电源插头再使电源或电脑USB接口充电。
2. 定期检查电源线的状况。如果电源线或产品本身已损坏，请勿再使用本产品。
3. 建议用布包裹USB充电线。
4. 切勿将电源线缠绕在产品上。
5. 请不要让本产品与水接触！不要在湿气的浴池、浴室或淋浴上方或附近使用本产品。
6. 有关其他保护措施，建议在带电线路中安装额定剩余工作电流不超过30mA的漏电保护器（RCD）有关建议，请向安装人员。
7. 使用产品时，如电源线将会持续发热，切勿在此时触摸发热或高温产品或接触其他物品，切勿让儿童接触本产品。
8. 产品只能用于干燥。
9. 本产品只能充电时使用。
10. 警告：保持通风干燥。
11. 不要使电源线接触到产品的灼热部分。
12. 保持产品清洁，无灰尘、无异物。定期进行清洁，切勿将产品与尖锐物体或尖锐物体接触。
13. 请勿将本产品发热的部分碰到身体，尤其是眼睛、耳朵、面部或颈部。
14. 如果产品已打开，请使产品远离易燃材料，不可在产生腐蚀性或爆炸性气体等特殊环境使用。
15. 当产生火灾时切勿在其表面放置任何物品（如毛巾或衣服），也不能将开着的产品的盖子打开。
16. 当产品用于超过过热的头发时，可能会使头发上色。
17. 本产品不可作为儿童的玩具。
18. 本产品不可作为成人指导使用。
19. 幼儿、残疾人需要成人指导使用。
20. 本产品只可作为家用电器，不可作为工业用途。
21. 本产品不可作为医疗用途使用。
22. 将产品完全冷却后再存放。
23. 出于安全考虑，本产品在通电40分钟后会自动关机，若要继续使用则需要重新启动。并持续15秒内未选择温度会自动关机。

Preparation for Using 使用准备

想要获得专业的美发效果，必须做好造型前的准备。请先使用吹风机吹干头发，并使用发梳将头发梳理整齐不打结。

Using this product 使用本产品

TA-1809 USB充电美发器是高效率的造型工具，应小心使用。

此款美发器最高温度可达到205℃，为了防止您的头发受损，请选择与您发质较为适宜的温度，产品使用过后可选择适宜护发产品对头发进行护理。

- 1. 长按电源开关2秒，并持续按住不发热，电源指示灯亮，按下温度调节键选择温度，温度指示灯亮起并闪烁，夹板开始加热。温度达到当前显示数值，闪烁停止。
2. 开机后长按温度调节键选择温度，默认温度165℃。共165℃、185℃、205℃三档温度可选。
3. 电量指示：满电时，设置电量指示灯区域呈全亮，当仅亮一格指示灯时请及时充电。电量耗尽时，三档指示灯同时闪烁三次后，装置自动关机。
4. USB充电接口采用Micro-USB，兼容市场普通手机充电器、车载充电器、充电宝，充满电时约需4小时。
5. 在直发器闭合的状态下，将按钮自内向外推，直发器处于闭合锁定状态；将按钮向内推，直发器张开，即解除锁定状态。
6. 给手机等其他移动设备充电时，使用USB充电线，一端插在USB的输出接口上，另一端连接待充电的设备，无需其他操作，即可给外部设备充电。

Operation Guidelines 产品使用说明

- 1. 梳理头发使其顺滑无缠绕。
2. 用发梳将头发分为数股，用发夹夹起，并将最下一层头发分为数股。
3. 长按电源开关开机。
4. 选择适宜温度，将直发器放于干燥、平坦的桌面，等待预热至所需温度。
5. 从后脑勺开始，选择最下层的一缕头发，发量不宜过厚，将其放在直发加热板之间，握紧夹板，从发根滑至发梢，中间不要停顿，防止部分过热，最下层头发造型完毕之前，再取上一层头发继续造型。
6. 如有需要可以重复操作至理想程度。
7. 使用后完毕，长按开关2秒即可关机，等待产品冷却之后再储存。

适宜温度与头发类型

165℃适宜偏软发质
185℃适宜普通发质
205℃适宜硬发质

Charging Instructions 充电方法

将电源线插入美发器手柄底部，将USB插入电源插头再使电源或电脑USB接口充电。

锂电池容量：2600mAh
充电时间：4小时

本产品内部设置一个锂电池，为了更好的保护锂电池，延长使用寿命，请在电量低时及时充电再使用。应尽量避免长时间连续充电（<24小时）否则可能缩短锂电池使用寿命。充满电后可持续充电40分钟（205℃）。

Reduce static electricity and loose hair 减少静电和乱发

浮动发板板，减少对秀发的摩擦，可随不同力度和方向上下浮动，使头发在夹板之间快速滑动，让每一缕发丝都受热均匀。两边的梳齿能够更加轻易的夹住头发，有效方式卡住发丝避免发丝脱落，极大的增加了直发效果。

Cleaning and storage 清洁与存放

始终保持产品关闭和电源断开。请将它放在一个安全的地方并将其冷却。切勿用水冲洗产品。切勿将电源线缠绕在产品上。将本品存放在安全干燥的地方。

Environmental protection 环保

购置产品时，请不要将其与一般生活垃圾堆放在一起。应将交回指定回收中心，这样有利于环保。

Warning 警告

不要在流水的浴缸、淋浴间、洗脸盆或其他潮湿处使用本产品

The warranty and service 保修与服务

故障排除

Troubleshooting

如果产品出现问题，并且利用以下信息无法解决，请联系本国家/本地最靠近的客户服务中心。

产品完全无法工作

The product completely unable to work

- 1. 可能出现电源故障或插座没电。请检查家中的其它电源是否工作。如果工作，请通过连接其它产品检查插座是否有电。
2. 检查产品的电源线是否损坏。

售后服务卡

保修细则：

产品1年质保！（质保1年时间从快递签收日起算）质保期间，出现非人为损坏的质量问题，我公司承诺免费维修。
1.收到您的产品后，技术检测进一步的质量认定。
2.从检测结果出来后，如非人为损坏，是产品本身质量问题，我公司会即给予维修，若无法维修，我们将为您更换同款产品。如果同款产品已经不再销售，更换产品的市场价格不高于以前产品的市场价格。

如下情况，不属于质保范围：

- 1.产品错误使用，或自行拆装修理和造成损坏；
2.人为致产品损坏；
3.因不可抗力造成损坏。

售后服务回执单

 
购买ID号：_____ 客户姓名：_____
联系方式：_____ 购买产品：_____
购买日期：_____
购买订单编号：_____
您的处理意见：退换货 退货口 换货口
退换货原因：_____
其他建议或意见：_____

邮寄产品请采用快运方式，我们不接受一切邮包包裹。顺丰或货到付款的邮方式，敬请留意！



General descriptions

1. Temperature indicator light
2. Charging status display
3. Temperature control button
4. ON/OFF button
5. Lock button
6. Comb
7. Hair
8. USB connection
9. USB cable

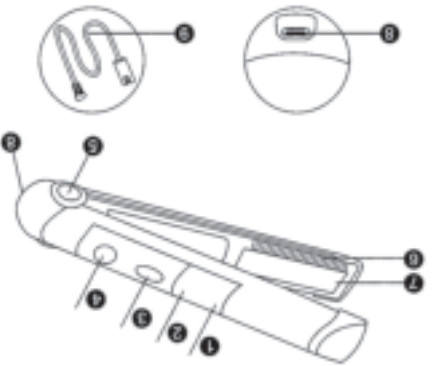

Product Introduction

English

ZF-1886

product.
your desired temperature when the light reach the data

Press the start/top button to adjust the temperature to 220°C-230°C.
Lithium battery:2600mAh
Charge time:4h
This product is equipped with a lithium battery. In order to better protect the lithium battery, please do not use the product for a long time continuously.

Before plug in the power socket, insert the USB charging cord into the power supply and then connect with the power supply or computer USB interface to charge.
Insert the USB charging cord into the power socket.
Before plug in the power socket, insert the USB charging cord into the power supply and then connect with the power supply or computer USB interface to charge.

1 After washing, squeeze excess water out of the hair with your hands and then towel-dry the hair. Use a comb to separate hair gently from the roots to the tips.
2 Divide the hair into sections by means of clips inward.
3 When using this appliance you may notice a residual current warning (RC) with a red residual current device (RCD) with a rated residual current (RCC) of 30mA in the electrical circuit supplying the bathroom. Ask your installer for advice.
4 Keep this product near or over water contained in baths, washbasins, sinks etc.
5 For additional protection, we advise you to install a residual current device (RCD) with a rated residual current (RCC) of 30mA in the electrical circuit supplying the bathroom. Ask your installer for advice.
6 Keep the appliance out of the reach of children.
7 The plastic parts near the plates or children.
8 Do not leave the plates in your hair for more than a few seconds at a time as this may cause damage to your hair.
9 Do not leave the plates in your hair for more than a few seconds at a time as this may cause damage to your hair.
10 Keep the appliance and never cover the appliance with anything (e.g. towel or clothing) when it is hot.
11 Cordless for use.
12 Keep the appliance clean and free of dust.
13 Do not wind the mains cord round the appliance.
14 Do not wind the mains cord round the appliance.
15 Keep the appliance clean and free of dust, dirt, styling spray and gel. Never use the appliance in combination with styling mouse, styling spray, gel or other styling products.
16 Do not leave the unit unattended when it is plugged in or switched on.

17 A close supervision is needed for children, disabled and incapacitated persons; children should be supervised to avoid they treat the product as toy.
18 Please do not use this product for any other purpose which did not mentioned in this instruction.
19 Slove this appliance away from direct sunlight where it is well-ventilated and dry. Do not use this appliance in your hair for styling with a hairdryer to ensure a professional, smooth finish.
20 This item can not be used as a medical appliance, cosmetic or explosive gas and other special appliance.
21 Warning: Please keep the appliance dry.

After approximately one hour the unit will automatically shut itself off to reactivate the unit press the ON/OFF switch.

Drying

Automatic safety shut-off
After approximately one hour the unit will automatically shut itself off to reactivate the unit press the ON/OFF switch.

Operation Guidelines

1. Separate a bunch of hair and comb them neatly. Place the hair section in the middle of the working face. Fold straight hair device until fluctuation working face can contact each unpluged.
2. Let the appliance cool down, completely on a heat-resistant surface. Never wind the mains cord round the appliance.
3. Clean the appliance with a damp cloth.

Cleaning

1. Make sure the appliance is switched off and unpluged.
2. Let the appliance cool down, completely on a heat-resistant surface. Never wind the mains cord round the appliance.
3. Clean the appliance with a damp cloth.

Guarantee&service

If you need information or if you have a problem, please visit the Pritech website at http://www.pritech.cn or contact the Pritech Customer Care Centre in your country. If there is no Customer Care Centre in your country, turn to your local Pritech dealer or contact the Service Department of Pritech Domestic Appliances and Personal Care B.V.

Troubleshooting

If problems should arise with your flat iron and you are unable to solve them by means of the troubleshooting guide below, please contact the nearest Pritech service centre or the Pritech Customer Care Centre in your country.

Problem

The appliance does not work at all.
1. Perhaps there is a power failure or the socket is not live. Check if the power supply is working. If it is not live, check whether the socket is live by plugging in another appliance.
2. Check if the mains cord of the appliance is damaged. If the mains cord is damaged, it must be replaced by Pritech, a service centre authorised by Pritech or similarly qualified persons in order to avoid a hazard.

Environment

Do not throw the appliance away with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. This product is equipped with a lithium battery. By doing this you will help to preserve the environment.

Charging instructions

Before plug in the power socket, insert the USB charging cord into the power supply and then connect with the power supply or computer USB interface to charge.
Insert the USB charging cord into the power socket.
Before plug in the power socket, insert the USB charging cord into the power supply and then connect with the power supply or computer USB interface to charge.

Storage

1. Make sure the appliance is switched off and unpluged.
2. Let the appliance cool down, completely on a heat-resistant surface. Never wind the mains cord round the appliance.
3. Clean the appliance with a damp cloth.

Washing

1. When washing your hair, wet your hair thoroughly for 30-60 seconds.
2. Pour some shampoo into the palm of your hand. Spread it between your hands and distribute evenly through the hair.
3. Gently massage your hair and scalp. Do not rough up the hair or pull it out on top of the scalp.
4. Massage you scalp with your fingers. This combination with styling mouse, styling spray, gel or other styling products.
5. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
6. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
7. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
8. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
9. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
10. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
11. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
12. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
13. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
14. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
15. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
16. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
17. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
18. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
19. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
20. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
21. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
22. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
23. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
24. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
25. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
26. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
27. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
28. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
29. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.
30. Rinse your hair thoroughly with a cool rinse for extra hair cuticles.

执行标准: GB 4706.1-2005
GB 4706.15-2008
GB 4343.1-2018
GB 17625.1-2012

检验员: _____

出厂日期: 2020年8月

合格证 CERTIFICATE