



AirKing

16" (40cm) Stand Fan with Remote Control Instruction Manual

AKSF-40BK



WARNING To reduce the risk for fire, electric shock or personal injury

- Do not use this fan with any solid-state speed control device.
- Unplug the fan before cleaning or servicing.
- To reduce the risk of electric shock and injury to persons, do not use in window.

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

This fan is for residential use only. It is not intended for use in commercial or industrial settings.

Important instructions

Read and save these important safety instructions before using this fan, when using electrical appliances, basic safety precautions should always be followed including the following:

WARNING - To reduce the risk of fire or electrical shock, do not use this product with any solid state speed control device. To reduce the risk of fire or electric shock and injury to persons, do not use in a window.

- Use this fan only as described in this manual. Other uses not recommended may cause fire or electric shock.
- This product is intended for HOUSEHOLD USE ONLY and not for commercial, industrial or outside use. To protect against electrical shock, do not place fan in window, immerse unit, plug or cord in water, or spray with liquids.
- Unplug the fan from the outlet when not in use, when moving fan from one location to another and before cleaning.
- **Do not** operate the fan in the presence of explosive and/or flammable fumes.
- **Do not** place the fan or any parts near an open flame, cooking or other heating appliance.
- Avoid contact with moving fan parts.
- To disconnect, grip the plug and pull it from the wall outlet. Never yank the cord.
- The use of attachments is not recommended and may cause hazards.
- Always use on a dry, level surface.
- **Do not** operate if the fan housing is removed or damaged.
- Discard fan or return to an authorized service facility for examination and/or repair.
- **Do not** run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances.

 
 
 
 
- Arrange cord away from traffic area and where it will not be tripped over.

Assembly

1. Place the **base** on a flat surface. Remove the **locking mechanism** from the pole and insert the pole onto the base.
2. Turn over the base with the pole inserted and secure by turning the **locking mechanism** clockwise until completed fastened.
3. Place the **motor assembly** and **control panel** onto the **extension pole** and secure by turning the **assembly knob** clockwise.
4. Remove the **rear grill mounting nut** by turning it counter-clockwise.



5. Place the **rear grill** onto the **motor housing** aligning the 3 raised knobs on the top of the **motor housing** with the 3 holes on the grill.
6. Place the rear **grill mounting nut** and tighten turning clockwise.
7. Align the **blade** onto the **shaft** and secure it by tightening the **blade knob** counter-clockwise.
8. Fix the front grill and the rear grill with the circlip and fasten the ring around the grill. You will hear a click sound around the grill.
9. Then use the fasten clip to tighten the fan grill.
10. Secure further with the screw and tighten with a screw driver.

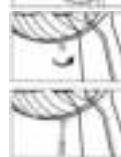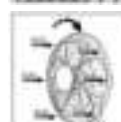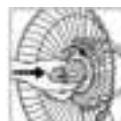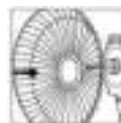

How to operate

1. Make sure that the fan is on a firm, level surface.
2. Making sure the speed control is at OFF position.
3. Plug the power cord into the socket.
4. Plug the cord set into the outlet.

**On/Off:**

To turn fan on, press the Power button.

**Sound Level/Speed Control:**

Press the Fan button repeatedly to change level. This fan has up to five speeds to select from.

**Auto-off Timer:**

This setting will automatically turn your fan off after 2, 4, or 8 hrs.

1 hour: Press one time

2 hours: Press two times

4 hours: Press three times

8 hours: Press four times

Turn Timer off: Press five times or press power button

5. Oscillation can be activated by pushing the bar downward and the fan can be made to operate in a stationary position by gently pulling the knob.

Remote control

1. Install batteries (not supplied) as shown. The battery is size "AAA".
2. All the functions performed with the Remote-Control work identically to the Manual Controls.
3. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel- cadmium) batteries.
4. DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.



Cleaning

1. Be sure your fan is in the OFF position.
2. Unplug the fan before cleaning.
3. Use only a soft, damp cloth to gently wipe the fan.

Description of parts

1. Front grill
2. Grill protective ring
3. Blade knob
4. Blade
5. Rear grill mounting nut
6. Rear grill
7. Shaft
8. Motor assembly
9. Oscillating pin
10. Remote storage
11. Control panel
12. Inner pole
13. Height adjuster
14. Outer pole
15. Base
16. Base locking mechanism
17. Remote control
18. Fasten clip

Technical Specifications

Model: AKSF-40BK

Power Supply: 220-240V~ 50Hz

Rated Power: 50W

Class II



Conforms to all relevant
European Directives.

