



Our Roosly Puzzle Mat is the perfect play environment for kids! This versatile and colorful mat provides a soft and safe space for play, learning, and creativity. The puzzle pieces are easy to assemble and disassemble, allowing you to customize the mat to fit your space and your child's needs. With its durable and easy-to-clean design, this puzzle mat is a must-have for every family!

Boundless play for children. Our versatile and modern toy collection fosters children's imagination and creativity, while our contemporary design complements any interior. We prioritize quality, fun, and sustainability, aiming for a positive impact on families and future generations.

Made in China



Wiekenweg 44C, 3815KL,
Amersfoort, The Netherlands
info@roosly.nl www.roosly.nl

CLOUDSOFT PLAY MAT

Infinite creativity with funs



MODEL : SAND BEIGE

- Mat Size: 150 x 200 x 3 cm
- Weight: 3900 grams
- Storage Bag Size: 47 x 16 x 40 cm
- Number of Parts: 1 pieces
- Material: High-quality polyester
- Colors: Beige
- Suitable for: All children from 0 years old.



come say hello and share the fun



Nederlands / Waarschuwing: Geschikt voor kinderen vanaf 0 jaar. Ouderlijk toezicht aanbevolen. Regelmatig reinigen voor hygiëne.

Engels / Warning: Suitable for children from 0 years old. Parental supervision recommended. Regular cleaning for hygiene.

Duits / Warnung: Geeignet für Kinder ab 0 Jahren. Elterliche Aufsicht empfohlen. Regelmäßige Reinigung für Hygiene.

Frans / Avertissement: Convient aux enfants à partir de 0 ans. Surveillance parentale recommandée. Nettoyage régulier pour l'hygiène.

Nederlands / gebruiksaanwijzing: Na het uitpakken kan de speelmat lichte vouwen vertonen. Dit is normaal en verdwijnt vanzelf. Leg de mat 48 tot 72 uur plat op een vlakke ondergrond zodat deze zijn oorspronkelijke vorm terugkrijgt. Eventuele lichte vouwen kunnen voorzichtig worden verwijderd door de mat op middelmatige temperatuur te strijken, altijd met een doek ertussen. Gebruik geen stoom en laat het strijkijzer niet onbeheerd achter. Strijken dient buiten bereik van kinderen te gebeuren.

Engels / instructions for use : After unpacking, the play mat may show light wrinkles. This is normal and will disappear on its own. Lay the mat flat on a level surface for 48 to 72 hours so it can return to its original shape. Minor wrinkles can be carefully removed by ironing on medium heat, always using a cloth between the iron and the mat. Do not use steam and never leave the iron unattended. Ironing should be done out of reach of children.

