



KPC-1363

02/25



FR

Cet appareil, ses
cordons, ses accessoires
et ses batteries sont
recyclables

À DÉPOSER
EN MAGASIN



OU

À DÉPOSER
EN DÉCHÈTERIE



 
Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1. Warning: This product includes lithium polymer batteries.
2. Warning: Adult supervision required. Keep camera away from toddlers under 3 years old and pets to avoid chewing and swallowing. Discard broken buttons or parts at once.
3. Product operating and storage temperature is from 0 degree Celsius to 40 degree Celsius. Under and over this temperature might affect the function.
4. Never open the product other than for changing print paper rolls. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.
5. Do not expose to heat, water, moisture, direct sunlight!
6. The unit is not waterproof. If water or foreign objects enter the unit, it may result in fire or electric shock. If water or a foreign object enters the unit, stop use immediately.
7. Only charge with supplied USB cable.
8. Do not use non-original accessories together with the product as this can make the product functionality abnormal.

LOCATIONS OF CONTROLS

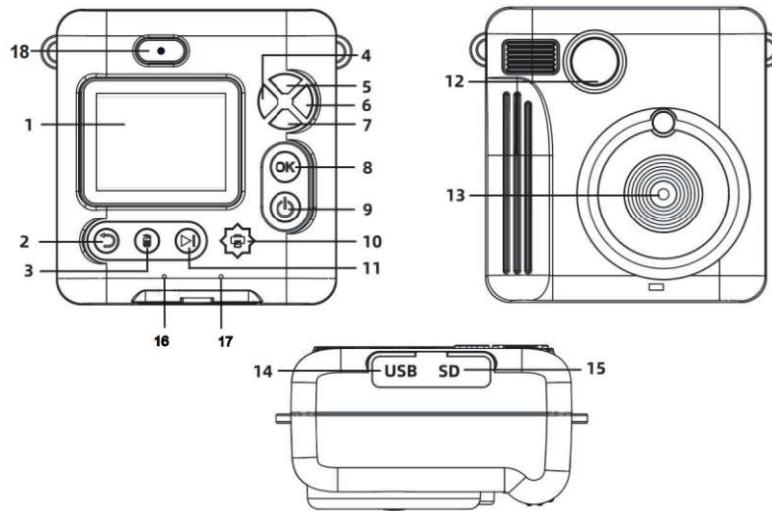

- 1.Screen 2.Return Button 3.Delete button 4.Left button 5.Up button 6.Right button
7.Down button 8.OK button 9.Power button 10.Print button 11.Browsing button 12.LED Light
13.Front Lens 14.USB slot 15.SD slot 16.Charging Indicator 17.MIC 18.Rear Lens

PREPARATION

1.Power

- Power on: Press and hold the power button  to turn on the camera
- Power off: Press and hold the power button  to turn off the camera.

 
2.SD Card

*Note:

- Make sure the device is powered off before inserting or replacing the Micro SD card.
- Make sure the Micro SD card is facing the correct direction when inserting it.
- Do not force the card in, as this may damage the card or the device. If the card does not fit easily, check that the card is facing the correct position.
- When the capacity of the memory card is higher than 32GB, you need to format the memory card on the camera before using it (the format MUST be FAT32).


How to format micro SD cards over 32 GB on the camera:

- Press  button to select the settings icon, press  button to enter setting mode.
- Press  button to select "Format", press  button to enter format micro SD cards, as shown below:

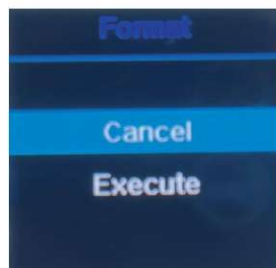

- Press  button to select "Execute", press  button to confirm.
- The screen will appear: "Please Wait..", as shown below:

 -When the "Please Wait..." prompt disappears from the screen, the SD card has been formatted successfully.

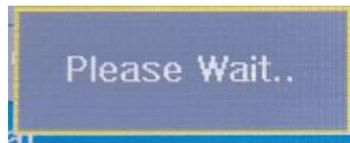


- Support up to 128GB(FAT32), to remove or replace the card with a new one, proceed as follows:
- To remove the memory card, gently press the card until you hear a "click" and then remove the card.
- Reinstall or replace the card. Insert the card (or any new Micro SD card) into the Micro SD card slot with the contacts facing the displayside.



3. Battery charging

*Note: Recommended for adults.

 - Plug the supplied TYPE-C USB cable (small end) into the camera's USB port.
- Plug the large end of the TYPE-C USB cable into your computer or a standard USB power outlet adapter.
- Please charge your camera before using it. It takes approximately 2 hours to fully charge the battery.
- When the battery level is low, a message will appear on the screen: Low Battery.

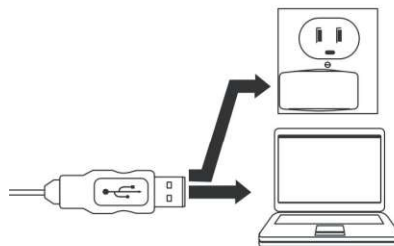

- After successful connection, the charging indicator lights up red.
- When the battery is fully charged, Charging indicator red off.
- Once the battery is fully charged, unplug the charger from the power outlet, then unplug the camera from the charger cable.

Battery level indication, please refer to the illustration:



OPERATION

1.Photo mode

*Note:

The Camera supports printing without SD card.Adjust the "Print Density" in the settings menu to adjust the printing effect, different kind of printing paper will have different printing effect.

-Short press  button to select photo icon, press  button to enter photo mode.



-Short press the  button to take a picture.

-In photo mode, press the  button briefly to turn on /off the flash function.

The icon  appears at the top of the screen when the flash is on.

-In the photo mode, press the  button to switch printing on/off.

If the print function is on,the print  icon will appear at the top of the screen,the photo will be printed instantly when the photo is taken.

-In the photo mode, short press  button to switch different photo frames and special effects;

-Long press  button to set the zoom function.

-Long press the  button to switch front and rear lens.

-Press  button to exit photo mode and enter the main interface.

2.Video mode

-Short press  to Select video icon, press  button to enter the video mode.



-Short press  button to start recording, short press  button again to stop recording.

-Long press the  button to switch front and rear lens.

-Press  button to exit video mode and enter the main interface

3.Playback

-Short press  button to select the playback icon, press  button to enter the playback mode. Or press  button to enter playback mode.



-Short press  button to select previous or next photo/video

-Press  button to play/pause the video.



-In playback mode, press button to delete photos/videos.

press button to confirm.



-Printing photos in playback mode

① Press the buttons consecutively functions in the following order: greyscale printing, dot matrix printing, switching off the print function.

② Press the button to select a photo.

③ Press the button to print the photo.

④ Press button to exit browsing mode and enter the main interface.

*Note:

-Video in playback mode cannot be printed.

-When camera is low power, the photos cannot be printed.

-Printing photo is not allowed when the camera is charging.

-When there is no paper available, the screen will indicate: Paperless.

-When the printer is overheating, the screen will prompt: high temperature and printing will be paused, wait a few minutes before using the printing function.

4.Setting

-Short press button to select setting mode, press button to enter the setting mode.



-In setting mode, you can set:

Photo Size: 20M, 12M, 8M, 5M, 3M, 2M, 1M;

Video Resolution: 1080P, 720P, VGA;

Print Density: 0, 1, 2, 3, 4;

Loop recording: Off, On;

Language:12 languages;

Time Stamp: Off,On;

Screen bright:8,7,6,5,4,3,2,1;

LCD Off:Off,1Min,2Min,3Min;

Auto Off:Off,3Min,5Min;

Format;Date time;Sys.Reset;Version

-Short press ⏸ to select setting item, press ⏹ button to enter the sub-menu.short press ⏸ button to select the setting item that needs to be changed,

 
Short press ⏹ button to confirm the change.

-Short press ⏮ button to exit the setting mode.

5.Game mode

-Short press ⏮ button to select game icon,Press ⏹ button to enter the game mode;

-There are 4 built-in games

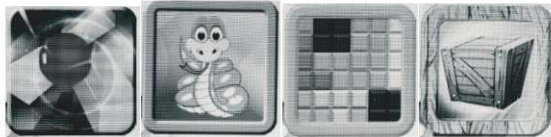

-Short press ⏮ button to select the game; press ⏹ button to start.

-After selecting the game, press ⏮ button to control the direction.

-Short press ⏮ button to exit the game mode.

6.Music Mode

*Note:Music files in MP3 form at should be copied to the SD card first

Adult operation is suggested.

-Short press ⏮ the button to select music mode, press ⏹ button to enter the music mode.



-In the music mode

Short press ⏮ button to select the previous song.

Short press ⏭ button to select the next song.

Short press ⏹ button to play/Pause music

Short press ⏮ button to increase the volume.Volume can be adjusted in 15 steps: 1~15.

Short press ⏭ button to decrease the volume.

7.Device Reset

*Note:

Adult operation is recommended.

There is a small hole on the right side of the SD port. If the device dies, insert a sharp object into the small hole to reset the device.

8. Installing the Print Paper

1. Open the paper slot in the direction of the arrow



2. Insert the print paper correctly in the direction indicated by the sticker on the camera.



3. The first time you install the paper, you need to extend the paper beyond the print slot about 1cm; each time you tear off the printed photo without re-installing the paper



9. USB Mode

-No card connection machine will enter the PCCAM function, the machine is equipped with micro SD card will enter the U disk function.

Note:

When the camera is switched off and connected to a computer, the camera is in charging mode; only when the camera is power on and connected to a computer will the camera enter USB mode.

Product Specification

Image Sensor	1 mega pixel CMOS sensor
Display	2.0 inch LCD display
Lens	Fixed Lens
Memory Card	SD card, supports up to 128GB
Photo Formats	JPG
Video Format	AVI
Video Resolution	1080P /720P/ VGA
Photo resolution	20M,12M, 8M, 5M, 3M, 2M, 1M,
Battery	Built-in DC  3.7V, 1200mAh (4.44WH) Rechargeable Li-ion Battery Recharge by DC  5V through the Type-c Port

Please notice - All products are subject to change without any notice. We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu



Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denver.eu