 
 
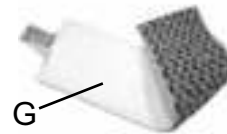 
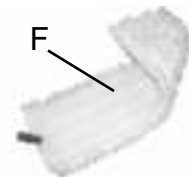 
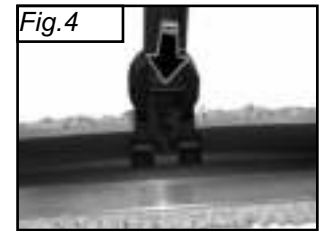 
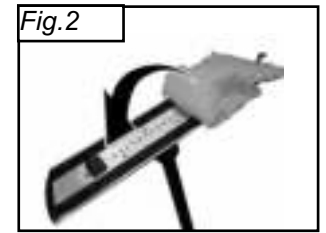 


STEAM MOP

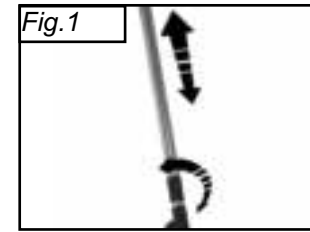

CE

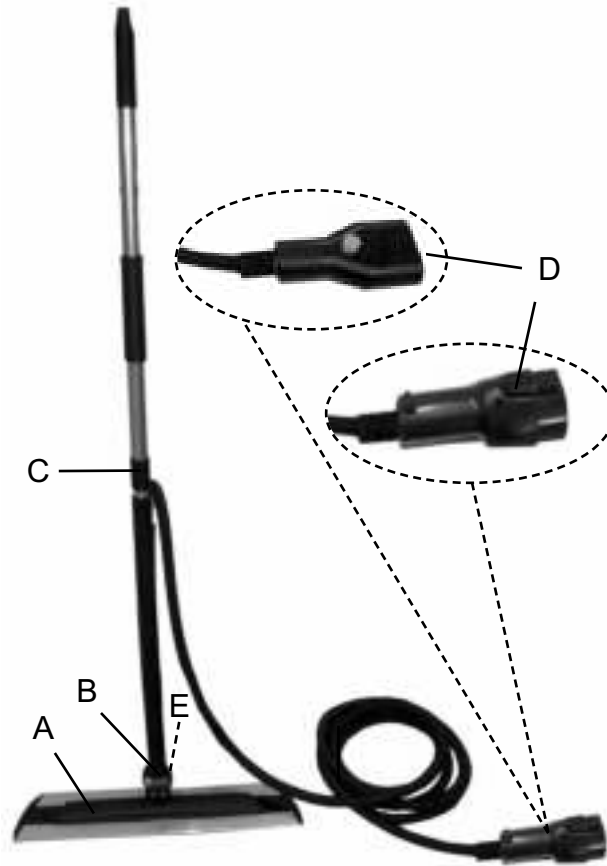

**Politi**
INNOVATIVE BY NATURE.

ENGLISH



Read these instructions carefully before using the appliance.

GENERATOR

- A) Brush
- B) Brush joint
- C) Handle extension ring nut
- D) Monoblock
- E) Joint lock
- F) Cloth for smooth surfaces
- G) Cloth for rough surfaces

This appliance conforms with Directive 2004/108/EC (EMC) and Directive 2006/95/EC (low voltage).

Polti S.p.A. reserves the right to change equipment or accessory specification without prior notice.

ATTENTION

For precautions for use, correct product use and information on product disposal (WEEE), please refer to the user's manual for the product to which this accessory is connected.

PREPARATION

- Connect the monoblock (D) to your steam generator, as described in the user's manual for the generator.
- Unscrew the tube extension ring nut and lengthen the tube as required (fig. 1).
For best use, brush length should be the same as the user's height.
Fasten the ring nut.

USE

- Switch on your steam generator as described in the user's manual.
- Should your generator have a flow regulator, regulate steam to medium.
- Before using the cloth supplied, steam the surface to be treated with the brush for 15-20 seconds in order to stabilise the appliance operating temperature.
- The jet of steam is activated by gently pressing the brush on the surface to be treated.
- Apply the cloth to the brush using the Velcro on it (fig.2).
Cloth (F) is suitable for cleaning smooth surfaces. Its special composition means that it dries surfaces well.
Cloth (G) is instead suitable for cleaning rough surfaces, such as terracotta, and cleans more thoroughly.
- You can begin use according to the advice given in the next pa-

graph.

- After particularly intense use, the cloth may be soaked in dirt and steam. If so, replace the cloth with a clean one.

ADVICE ON USE

- Please pay careful attention when cleaning wooden surfaces and treated terracotta flooring as prolonged use of steam may damage the wax, polish or colour of the surfaces to be cleaned. We therefore recommend only steaming these surfaces for short periods of time, or cleaning using a previously steamed cloth.
- To clean efficiently, start from the corners of the rooms, moving backwards to clean the surface.
- Always supply steam when pushing the brush forwards, then pick up the dirt, pulling the brush backwards (without supplying steam).
- For a more efficient collection, pull the brush towards you in an "S" shape (fig. 3).

CLEANING VERTICAL SURFACES

WARNING: surfaces must be treatable, such as tiled walls of kitchens and bathrooms. DO NOT USE on painted walls or surfaces not suitable for steam use.

- To clean the vertical surfaces, lock the brush in order that the joint remains fixed.
To do so, simply lower the lock as shown in figure 4.
- To release the joint, restore the lock to its original position.

It is also useful to lock the joint when resting the brush during storage.

CARE OF YOUR APPLIANCE

- **Before attempting any maintenance operation, make sure to always disconnect the appliance from the mains.**
- To clean the body of the appliance, simply use a moist cloth.
- To clean the cloths, follow the instructions given on them.