

QUICK RELEASE



- 1. UNLOCK**
Rotate thumbscrew to release.
- 2. PUSH/PULL PIN**
Push down on pin or pull shaft below to disengage stopper.



- 3. SLIDE**
Slide camera and plate toward rear. This action unplugs lens from mattebox.



- 4. REMOVE**
Camera can be lifted directly up off Quick Dovetail.

PATENT PENDING



Quick release action unplugs lens from mattebox and allows camera to be removed from studio accessories.

Ideal for compact camera systems, run and gun style shooting, and quick setup and tear down of gear.



Quick Release plate utilizes ARRI standard dovetail shape. Allows easy attachment to 2060 Dovetails, Safety Dovetails, and all third party ARRI standard dovetails.

