

LELO

**SORAYA WAVE™**

USER MANUAL



**Wave hello to the best orgasm of your life. Enjoy it wisely, often and with care.**

Congratulations on acquiring SORAYA WAVE™. Before getting more closely acquainted with it, please take a moment to look through this user manual.


**IMPORTANT:** For adult use only. Those who may be pregnant, have a pacemaker, diabetes, phlebitis, thrombosis or any other condition, should consult with a medical professional regarding the risk of blood clots before using any personal massage product.

The appliances must only be supplied at SELV.

## GETTING STARTED

- Before first use, charge your SORAYA WAVE™ for 2 hours.
- Unlock by pressing and holding the + and - buttons simultaneously for 3 seconds until the light turns on.
- Press + button to turn on; press again to increase the vibration strength.
- Press ( ) button to switch between the 8 vibration patterns. WaveMotion™ patterns vary from mode to mode.
- Press – button to reduce vibration strength.
- Press and hold ( ) or - button to turn off.

## GETTING TO KNOW YOUR SORAYA WAVE™

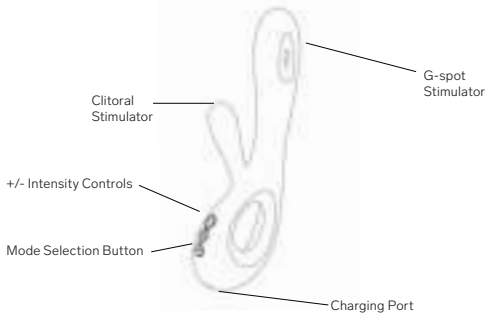

### **WaveMotion™**

LELO's patented WaveMotion™ technology is inspired by the caress of a lover's fingers, and can be turned on or off according to the mode you select. WaveMotion™ technology surges in a 'come-hither' motion, placing direct pressure on your G-spot while rising and falling inside you. In doing so, WaveMotion™ ensures SORAYA WAVE™ reaches your G-spot with ease, so you enjoy a consistently gratifying massage.

## USING SORAYA WAVE™

- How to hold



**Tip:** For an even more pleasurable sensation, apply a liberal amount of LELO Personal Moisturizer to your body and to SORAYA WAVE™ before and during use.



## CHARGING YOUR SORAYA WAVE™

Insert the DC plug into the DC port at the base of your SORAYA WAVE™.

Insert the mains plug into a wall socket. The LED on the interface of your SORAYA WAVE™ will pulse to indicate it is charging. When it is fully charged (after c. 2 hours), the LED will emit a steady glow. When the battery is running low, the LED on your SORAYA WAVE™ will emit a blinking white light.



**Only use original chargers provided by LELO with your SORAYA WAVE™.**

## **CLEANING, STORAGE, AND SAFETY**

Using SORAYA WAVE™ with hand creams or silicone-based lubricants may make the silicone permanently tacky.

SORAYA WAVE™ is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow to dry.

Always clean your SORAYA WAVE™ thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol or acetone.

Avoid leaving your SORAYA WAVE™ in direct sunlight and NEVER expose it to extreme heat. Store your SORAYA WAVE™ in a dust-free place and keep it away from products of other materials.

## **TROUBLESHOOTING**

### **The LED on your SORAYA WAVE™ does not pulse when the charger is connected:**

- The battery is drained and will require several minutes to acknowledge that it is being charged.
- The charger is not properly connected. Check wall and DC sockets.

### **Your SORAYA WAVE™ does not activate when the center button is pressed:**

- The battery is empty. Recharge your SORAYA WAVE™.
- The interface of your SORAYA WAVE™ is locked. Hold down + and – for 5 seconds.

If you experience any other problems with your SORAYA WAVE™ or if you have any questions regarding operation, please contact: **customer@lelo.com**



## SPECIFICATIONS

<b>MATERIALS</b>	Body-safe silicone, ABS
<b>BODY COLORS</b>	Midnight Blue, Deep Rose, Black
<b>INTERFACE</b>	3-button
<b>SWITCH OFF</b>	Automatic
<b>FREQUENCY</b>	120HZ
<b>BATTERY</b>	Li-Ion 850mA 3.7V
<b>CHARGE TIME</b>	2h at 5.0V 750mA
<b>USER TIME</b>	Up to 2 hours
<b>STANDBY TIME</b>	Up to 90 days
<b>SIZE</b>	218 x 72 x 46 mm / 8.58 x 2.83 x 1.81 in
<b>INSERTABLE LENGTH</b>	110 mm / 4.3 in
<b>WEIGHT (ONLY PRODUCT)</b>	185 g / 0.40 lb

## **REGISTER WARRANTY**

To activate your 1-Year Limited Warranty, register the number provided on the LELO Authenticity Card at [LELO.COM/SUPPORT](http://LELO.COM/SUPPORT).

## **1-YEAR WARRANTY**

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty. If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge. Claims under warranty must be supported by reasonable evidence of the date of claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period. To claim your warranty, you must log in to your account at [LELO.COM](http://LELO.COM) then select the option to make a warranty claim. Shipping costs are non-refundable. This undertaking is in addition to consumer's statutory rights and does not affect those rights in any way.

## DISPOSAL INFORMATION

**Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):**

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for recycling of electrical and electronic equipment.



**Disclaimer:** Users of this product do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this product. Changes or Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

**Model may be changed for improvements without notice.**

© 2020 LELOi AB. ALL RIGHTS RESERVED.

DESIGNED AND DEVELOPED BY LELO SWEDEN

MANUFACTURED FOR LELO IN CHINA

**WEBSITE:** [WWW.LELO.COM](http://WWW.LELO.COM)

**SUPPORT:** [CUSTOMERCARE@LELO.COM](mailto:CUSTOMERCARE@LELO.COM)

**[www.lelo.com](http://www.lelo.com)**