

DOUXE

S3 Active Stylus Pen



Universal



Windows



Apple



Android



Instruction Manual

1. Introduction

Thank you for choosing our Douxe product! Please always follow the instructions for safe usage.

Do you use tablets often and are in need of an active stylus pen to help you make notes or maybe to coordinate on the touchscreen? The S3 Active Stylus Pen from Douxe is the ideal product to unleash your creativity on your tablet. With the 1.5mm copper point, the stylus pen moves accurate and smooth on your screen.

Please read the instruction manual before usage.

2. Warnings and Safety Instructions

- ⚠ Please ensure that the packaging is kept out of the reach of children! Risk of suffocation!
- ⚠ Make sure to keep this user manual. Read the manual carefully before using your active stylus pen!
- Be aware of the risks and consequences resulting from misuse of the active stylus pen. Misuse of the active stylus pen can result in personal injury, or destruction of the device and of the installations.
- Use the active stylus pen only for purposes described in this user manual.
- If the active stylus pen malfunctions, is dropped or (appears to be) damaged in any manner, do NOT use the active stylus pen and contact Customer Service.
- The active stylus pen is designed and intended for private, non-commercial use only.

- Do not put objects in the slots on the exterior of the device, by doing this you can hit parts that are carrying live voltage. This can cause a fire or an electric shock.
- This device should NOT be used by persons (including children) with physical, sensory, or mental disabilities, or persons (including children) with lack of experience with and knowledge of the device, unless they are supervised or have been given instruction concerning the use by a person responsible for their safety.
- Keep the active stylus pen away from children when using and storing.
- Do NOT reconstruct, repair, or disassemble the active stylus pen. This can damage the device. For safety reasons, these parts may only be replaced by authorized service personnel. In order to prevent hazards, always send the active stylus pen to the service center for repairs.
- Make sure your outlet supplies the correct power voltage to avoid damage to the active stylus pen.
- Always check the device for signs of damage before using the active stylus pen. Do NOT operate the active stylus pen if the device is damaged. A damaged device must be repaired by a qualified person in order to avoid damages and personal injuries.
- Do NOT use the active stylus pen in or near a bath, shower, or over a basin filled with water.
- Make sure to prevent any contact with water. Do NOT submerge the active stylus pen in water. If water does get inside the casing, turn the active stylus pen off immediately and contact our customer service.
- Do NOT operate the device with damp or wet hands.

- Place the active stylus pen in such a way that the cables connected to it cannot be damaged.
- Keep the active stylus pen away from moisture, heat and in or close to areas where the surrounding temperature is relatively hot (e.g., stoves or other sources of heat).

3. Receiving Your Shipment

When receiving your shipment, make sure that the contents are consistent with the packing list. Notify your distributor of any missing items. If the equipment appears to be damaged, file a claim immediately with the carrier and notify your distributor at once, giving a detailed description of any damage. Save the damaged packing container to substantiate your claim.

4. Contents of Package

1. Douxe S3 Active Stylus pen
2. Charging cable

5. Product Features



6. Technical Data

Size Length x Diameter	14,5 x 0.89 cm
Weight	16 gr
Colour	Black
Material	Copper, steel, plastic and aluminum
Cable Length	24 cm
Power Supply USB 3.0 port	Up to 7.5W (5V/1.5A)
Max charging speed power delivery port	87W, 20V, 3A
Input Port	USB-A
Output Port	Micro USB

Operating temperature	0°C to +45°C
Operating humidity	10% to 85% R (no condensation)
Storage temperature	-10°C to +70°C
Storage humidity	5% to 90% RH (no condensation)
Compatible with	<p>Android: Sketchbook, SketchMaster, Evernote, etc.</p> <p>iPads/iPhones: ProCreate, SketchBook, Paper, ArtSet, PDF expert, MedibangPaint, oneNote, GoodNotes, Noteshelf, Goodreader, Notability, Notes Plus.</p>

7. Product Features

- Use the Active Stylus Pen to coordinate on your touchscreen device.
- Use the Active Stylus Pen to take notes on your touchscreen device.
- Easy to use and carry.

8. Operating Instructions

1. Press the on button and immediately start using the active stylus pen on your touchscreen device.
2. When you are done using the active stylus pen, press the off button.
3. When empty, make sure to attach the charging cable to the active stylus pen.
4. Plug the charging cable in to the outlet.

9. Maintenance and Cleaning

Clean the active stylus pen with a clean, dry cloth. Do not use detergents and make sure that the active stylus pen does not get wet.

10. Storage

Store the active stylus pen in a clean and dry place. Do not store the device in extremely high or extremely low temperatures.

11. Disposal - Recycle

Contribute to a cleaner living environment! Do not dispose of the active stylus pen with the household waste. For proper recycling, please contact your local authority or your household waste disposal service for further details on your nearest designated collection point.

12. Service and Warranty

Doux provides a 1-year warranty on its products. To get service during the warranty period, the product needs to be returned with a proof of purchase. Product defects must be reported within 1 year from the date of purchase. This warranty does not cover: damages caused by misuse or incorrect repair; parts subject to wear; defects that the customer was aware of at the time of purchase; damages or defects caused by customer neglect; damages or defects caused by third parties.

13. Disclaimer

Changes reserved; specifications are subject to change without stating grounds for doing so.