Bluetooth Karaoke Microphone Instructions

I. Basic Button Operation

1. 0

Long Press : ON/OFF

Short Press: Mode switching

2. ^

Press: the previous song

3. ~

Press: the next song

4. MI

Short Press: Play/Pause.

Long Press: Turn on/off LED lights.

5. 10

Short Press: Mic ON/OFF

Long Press: change different magic sounds (Under karaoke mode).

6. " VOL + "

Increase music volume

7. " VOL - "

Decrease music volume

8. " MIC + " and " MIC - "

Gradually push to adjust the sound of mic

9. REMIX

Gradually push to make your voice better

II. Multi-function Operation

Wireless Karaoke

- Turn on the power: long press power button ⁽¹⁾ to turn on the microphone.
- Bluetooth connection: Open the Bluetooth of the mobile phone, click it to connect "WS-858L", and the prompt sound appears to indicate successfully connection.
- Turn on the music on your phones or Pads. (Don't need to download a special App, just use some normal audio software, such as Spotify, iTunes, YouTube etc..)
- Start Karaoke and adjust some setting according the Basic Button Operation

Bluetooth Speaker Function

- Plug the TF card with music and play music, the microphone can be used as a Bluetooth speaker.
- 2. P/O Short press to switch the music modes (Original sing / Accompaniment).

> Recording with mobile phone

- Connect the recording wire: Insert the Micro cable of the recording wire into the Micro interface of microphone, and plug the 3.5mm jack into the earphone jack of the mobile phone.
- Open the Karaoke software with recording function in the mobile phone, record the song according to the the instructions of Karaoke software, then select your favorite song and star singing,
- 3. Test and save the song: According to the instructions of Karaoke software.

> Selfie function

- 1. Short press the button U to switch from Bluetooth mode to selfie mode.
- Connect the Bluetooth in the mobile phone, search Bluetooth "shutter", click it for connection.

Note: This microphone can support both Android mobile phone (Above Android 4.2.2) and iPhone IOS system (Above IOS 6.0). It doesn't support the mobile phone which has a separate physical button to take photos.

> Radio Mode

- 1. Short press the button U to switch from selfie mode to Radio mode.
- 2. Long press the button | to search FM Channel automatically.

Technical Parameters

- Output Power: 5W
- Frequency Range: 100HZ~10KHZ
- Max Sound Pressure Level: >115DB 1KHZ TDH<1%
- Reverberation Mode: sound effect reverberation
- Power Supply: Built-in 18650 Li-Battery
- Battery Capacity: 1800mAh
- Charging Power: DC 5V