

ELYSIAN

E

**INSTRUCTION  
MANUAL**

# THANK YOU FOR YOUR PURCHASE!

THE COMPANY IS YOUNG AND STILL GROWING. WE STRIVE FOR HIGH QUALITY WATCHES AT AN AFFORDABLE PRICE. OUR MAIN GOAL IS TO SATISFY OUR CUSTOMERS.

WE HOPE YOU WILL ENJOY YOUR ELYSIAN WATCH AS MUCH AS WE DO. PLEASE FEEL FREE TO CONTACT US IF YOU HAVE ANY FEEDBACK, WE HIGHLY APPRECIATE IT.



[hello@elysianwatches.com](mailto:hello@elysianwatches.com)

FOLLOW US ON SOCIAL MEDIA!




[@elysianwatches](https://www.facebook.com/elysianwatches)



[@elysianwatches](https://www.instagram.com/elysianwatches)

# THE DUAL-TIME WATCH

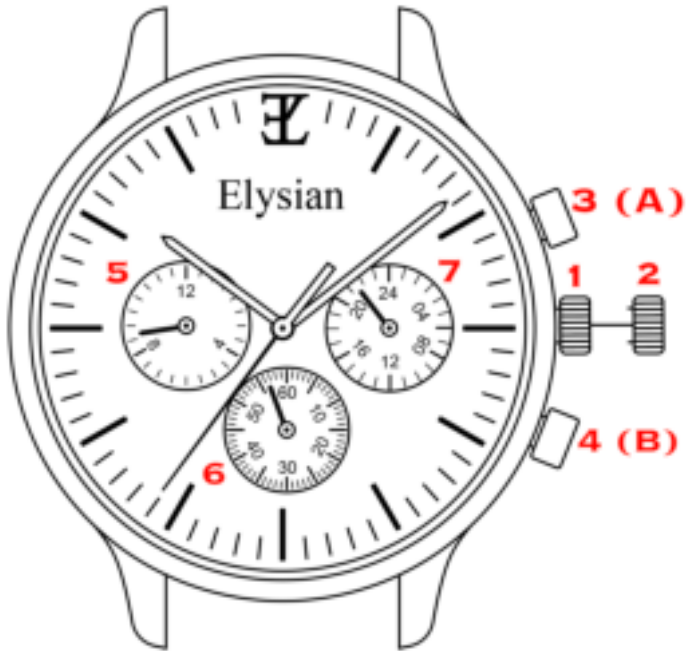

1. CROWN AT NORMAL POSITION
2. CROWN PULLED OUT FOR ADJUSTING THE TIME
3. BUTTON A (FOR ADJUSTING THE DUAL TIME)
4. BUTTON B (FOR ADJUSTING THE DUAL TIME)
5. DUAL HOUR SUBDIAL
6. DUAL MINUTE SUBDIAL
7. 24 - HOUR SUBDIAL

# **HOW TO ADJUST THE LOCAL TIME**

- 1. PULL OUT THE CROWN FROM THE ORIGINAL POSITION WHEN THE SECOND HAND IS AT THE 12' O'CLOCK POSITION.**
- 2. TURN THE CROWN TO SET THE HOUR AND MINUTE HANDS TO THE CORRECT TIME. MAKE SURE THE 24-HOUR HAND IS SET CORRECTLY AS WELL.**
- 3. PUSH THE CROWN BACK INTO THE NORMAL POSITION AND ENJOY YOUR TIMEPIECE.**

# HOW TO ADJUST THE DUAL TIME

YOU HAVE THE POSSIBILITY TO USE A SECOND TIMEZONE ON THE DUAL-TIME WATCH.

## HOUR ADJUSTMENT:

1. LEAVE THE CROWN AT THE NORMAL POSITION.
2. ADJUST THE TIME BY PRESSING BUTTON A OR B.

BUTTON A: -1 HOUR

BUTTON B: +1 HOUR

## MINUTE ADJUSTMENT:

1. PULL OUT THE CROWN FROM THE ORIGINAL POSITION.
2. ADJUST THE TIME BY PRESSING BUTTON A OR B.

BUTTON A: -1 MINUTE

BUTTON B: +1 MINUTE

3. PUSH THE CROWN BACK INTO THE NORMAL POSITION.

# HOW TO ADJUST THE MESH STRAP



- 1. OPEN THE TOP CLASP.  
INSERT THE ADJUSTMENT  
TOOL IN THE SLOT AND  
LIFT IT UP.**




- 2. SLIDE THE BUCKLE IN  
THE DESIRED POSITION.**



- 3. INSERT THE ADJUSTMENT  
TOOL BACK INTO THE  
SLOT AND LOCK IT DOWN  
TOWARDS THE STRAP.**

# HOW TO ADJUST THE LINK STRAP

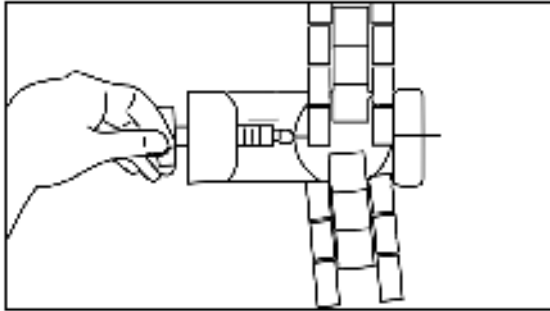

- 1. PLACE THE STRAP INTO THE LINK REMOVAL TOOL.**
- 2. PLACE THE PIN OF THE LINK REMOVAL TOOL GENTLY INTO THE PINHOLE AND TURN CLOCKWISE.**
- 3. PERFORM THIS ACTION AGAIN UNTIL ENOUGH LINKS ARE REMOVED.**
- 4. AFTER RESIZING IS DONE, PLACE THE PIN BACK IN THE LINK HOLE. YOU CAN USE THE PIN OF THE LINK REMOVAL TOOL TO FIRMLY SECURE IT BACK INTO PLACE.**

# **WATER RESISTANCY**

**IF YOUR WATCH IS NOT MARKED, USUALLY ON THE BACK OF THE CASE, WITH EITHER THE WORDS “WATER RESISTANT” OR A DEGREE OF WATER RESISTANCE (5ATM), PLEASE AVOID ALL CONTACT WITH WATER.**

## **WATER-RESISTANT 5ATM:**

**THIS MEANS THAT THE WATCH IS SUITABLE FOR LOW-VELOCITY AND SHALLOW WATER ACTIVITIES, SUCH AS SWIMMING AND SHOWERING. DO NOT EXPOSE THE WATCH TO WATER MOVING WITH FORCE OR WATER MOVING AT A HIGH VELOCITY INCLUDING DIVING, SURFING, WAVES, JET SKI’S, .... CONTACT WITH HIGH-TEMPERATURE WATER SUCH AS SAUNAS, STEAM ROOMS, JACUZZIS OR SALT WATER CAN CAUSE DAMAGE TO THE WATCH. WATER LEAKAGE AND OR DAMAGE CAUSED UNDER THESE CIRCUMSTANCES ARE NOT COVERED BY THE WARRANTY. IF YOUR WATCH IS DROPPED OR RECEIVES AN IMPACT, THE WATER-RESISTANT FEATURES MAY BE DAMAGED.**



# **WARRANTY**

**YOUR WATCH HAS A LIMITED TWO-YEAR WARRANTY BEGINNING FROM THE DATE OF PURCHASE. THIS WARRANTY COVERS MANUFACTURING DEFECTS. THIS MEANS THE INNER PARTS (MECHANICS) OF THE WATCH. THE WARRANTY DOES NOT COVER THEFT, ABUSE, WATER DAMAGE, BATTERIES, GLASS DAMAGE, STRAP DAMAGE, AND NORMAL WEAR AND TEAR.**

**SHOULD YOUR WATCH DISPLAY MANUFACTURING DEFECTS, PLEASE CONTACT OUR SUPPORT TEAM. YOU CAN EMAIL US AT [SUPPORT@ELYSIANWATCHES.COM](mailto:support@elysianwatches.com) OR VISIT OUR WEBSITE FOR MORE INFORMATION. PROOF OF PURCHASE IS ALWAYS REQUIRED FOR ALL WARRANTY CLAIMS.**