
Assembly Instructions

Warnings: You must read this before you proceed.

FIREPIT

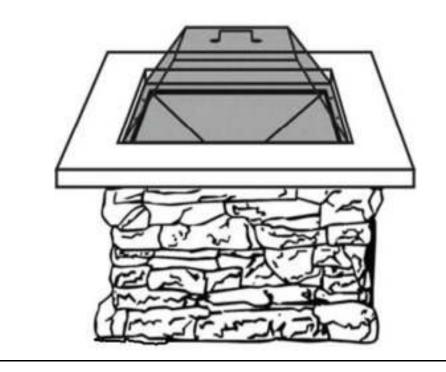

Parts List

Part NO.	Picture	Description	QTY
А		Spark Safeguard Screen	1 PC
В		Log Grill	1 PC
С	b b	Separate Fire Bowl Handle	2 PCS
D		Fire Bowl	1PC
E		Fire Pit Main Frame	1PC
F		Hook Tool	1PC
н		Touch-up Paint and Small Brush	1PC

REMARK:PLS use the brush dip into the touch-up paint to brush the small scratch on the product surface.

Assembly Preparation

Before Beginning Assembly:

Unpack all the parts for a clear overview.















· Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-


Assembly Steps

Step 1

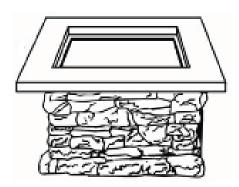


Unpack all components carefully from the package. Put the Fire Pit Body on a hard, level and non-combustible surface.

Step 2

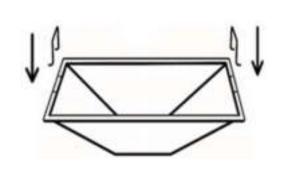


Insert Bowl Handles into the holes on the inside Fire Bowl wall, as depicted in the picture.

Step 3

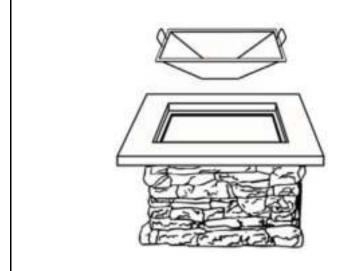


Put the Fire Bowl into the Fire Pit opening as shown in Step 3 above. Make sure it sits evenly in the frame housing.

Step 4

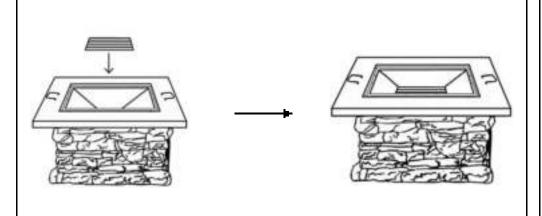

Take out the Handles after the Fire Bowl is placed inside the Fire Pit Main Housing. Place the Log Grill into the Fire Bowl.

Step 5

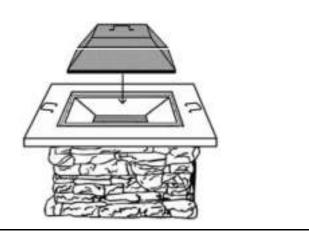

Put the Spark Safeguard Screen onto the top opening of the Fire Pit Body and make sure it sits into it evenly. The Firepit is ready for use.

Operating Instructions:



WARNING FOR YOUR SAFETY

Before using this outdoor fire pit, make sure you have read, understood and are following all information provided on page 1 of this manual. Failure to follow those instructions can cause death, serious injury or property damage.

Lighting:

- 1. Make sure there is only a small amount of ash (1/2" thick) at the bottom of the metal bowl.
- 2. Place a layer of dry kindling or a natural fire starter onto the center of the log rack.
- 3. Place above that layer the dry seasoned hardwood that is cut to lengths no more than 12"
- 4. Use a match to light kindling or fire starter.
- 5. Replace the safeguard spark screen when the kindling or fire starter is lit.

Tending the Fire

You may need to shift and/or add logs for an ideal experience.

Reminders:

- Always wear protective gloves or a pot holder when tending a fire.
- Wait until glowing wood have developed before adding any additional wood.
- <u>Do NOT</u> add gasoline, kerosene, diesel fuel, lighter fluid or alcohol to relight or enhance an existing fire.
- 1. Use a long handled fire pit tool to carefully take away the spark screen.
- 2. Use the long handled fire pit tool to shift the logs to allow additional airflow.
- If additional wood is required, place wood on top of the burning log. Be careful not to shift ashes.
- 4. Replace the safeguard spark screen.

Extinguishing

- 1. Allow fire to burn itself out.
- Do NOT use water to extinguish as this is dangerous and can cause damage to this outdoor fire pit.

Maintenance Instructions:

Inspecting

This outdoor fire pit should be inspected on a regular basis to ensure product safety and longer product life.

Check all parts to make sure they are secure.

Cleaning

This outdoor fire pit should be cleaned on a regular basis to promote safer experiences and longer product life.

Note: After repeated use, a slight discoloration of the finish may occur.

Reminders:

- ★ Do NOT attempt to clean this outdoor fire pit until the fire is COMPLETELY out.
- ⊞ Do NOT use oven cleaner or abrasive cleaners as they will damage this product.
- ★ Do NOT clean any part of this outdoor fire pit in a self-cleaning oven as it may damage the finish.
- 1. Wipe exterior surfaces of the metal parts with a mild dishwashing detergent or baking soda.
- 2. For stubborn surfaces on the metal parts, use a citrus based degreaser and a nylon scrubbing brush.
- 3. Rinse clean on the metal with water.
- Use a soft dry brush to wipe away the dust on the faux stone fire pit body. Never use water or other liquids to clean the faux stone top.

Storage

<u>Do NOT</u> move or store this outdoor fire pit until the fire is COMPLETELY out.

- 1. Once the fire is out, logs are cold and outdoor fire pit is cool to the touch, remove ashes and properly dispose.
- 2. Store assembled in a location away from children and pets.

Note: If you do not use a cover, store this outdoor fire pit in a dry location free from rain.