



REDRAGON
FIZZ RGB
 WIRED MECHANICAL GAMING KEYBOARD



Please scan here to download user manual

Wired Mechanical Gaming Keyboard
 Operating Instructions

US UK

Dear user

Thank you for choosing our **REDRAGON** product. To protect your rights and for better customer service, we ask that you note our warranty rules.

1. Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty.

OS support

Windows XP/Vista/Win7/Win8/Win10

How to plug in

Plug type C cable to USB cable with keyboard and PC, keyboard is plug and play, no need driver.

Key Function Introduction

FN key work with other keys

1. FN + [1!] = F1
2. FN + [2@] = F2
3. FN + [3#] = F3
4. FN + [4\$] = F4
5. FN + [5%] = F5
6. FN + [6^] = F6
7. FN + [7&] = F7
8. FN + [8*] = F8
9. FN + [9()] = F9
10. FN + [0)] = F10
11. FN + [-_] = F11
12. FN + [=+] = F12
13. FN+ [(I)] =Insert
14. FN+ [I)] = DEL
15. FN+ [;:] =Home
16. FN+ ['"] =End
17. FN+ [.>] =PgUp
18. FN+ [/?] =PgDn
19. FN+ [A] = Left arrow key
20. FN+ [W] =Up arrow key

21. FN+ [S] = Down arrow key
22. FN+ [D] = Right arrow key
23. FN+ESC Press and hold for 3 seconds for back to factory setting.

Backlight setting

FN+ [Alt_R] : Go with the stream, Clouds fly, Winding Paths, The trial of Light, Breathing, Normally on, Pass without Trace, Ripple Graff, Swift action, Digital Times, Flowers blooming

FN+ [M] : Adjust lighting brightness (Total 5 levels).

FN+ [,<] : Adjust lighting speed (Total 5 levels).

FN + [Spacebar] : Entering backlight color selecting mode by pressing FN + [Spacebar], [Spacebar] will keep flickering between all RGB colors. If not, then this backlight mode is not supported (The Trial of Light & Flowers Blooming are not available for this DIY mode). Next, press the key of the color you want to set. Then, all backlight modes will be in that color.

FN+WIN: To Lock Windows key, repeat to unlock.

FAQ

1. If the keyboard doesn't respond, please check if the keyboard's USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please remove keyboard's USB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.



FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



REDRAGON
FIZZ RGB
 WIRED MECHANICAL GAMING KEYBOARD



Please scan here to download user manual

Wired Mechanical Gaming Keyboard
 Operating Instructions

ES

Estimado usuario

Gracias por elegir **REDRAGON** Lite. Para proteger sus derechos y obtener un mejor servicio al cliente, le pedimos que preste atención a las reglas de la garantía.

1. Dentro del período de garantía, la reparación está garantizada por fallas debido a problemas en el circuito eléctrico. Los daños causados por el hombre, como desmontaje, impactos fuertes, inmersión en agua, conexión a una corriente o a un voltaje incorrecto y los daños causados por desastres naturales como incendios, inundaciones o terremotos no están incluidos.
2. Las partes consumibles (tal como un bastón) y el reemplazo de repuestos no está incluido en nuestra garantía.

Soporte técnico

Windows XP/Vista/Win7/Win8/Win10

Cómo enchufar

Conecte el cable tipo C al cable USB del teclado y de la PC. El teclado es plug and play y no necesita un controlador.

Introducción a las funciones de las teclas

Las teclas de funciones FN funcionan con otras teclas

1. FN + [1!] = F1
2. FN + [2@] = F2
3. FN + [3#] = F3
4. FN + [4\$] = F4
5. FN + [5%] = F5
6. FN + [6^] = F6
7. FN + [7&] = F7
8. FN + [8*] = F8
9. FN + [9()] = F9
10. FN + [0)] = F10
11. FN + [-_] = F11
12. FN + [=+] = F12
13. FN+ [(I)] =Insert
14. FN+ [I)] = Supr

17. FN+ [.>] = RePág
18. FN+ [/?] = AvPág
19. FN+ [A] = Tecla de flecha izquierda
20. FN+ [W] = Tecla de flecha arriba
21. FN+ [S] = Tecla de flecha abajo
22. FN+ [D] = Tecla de flecha derecha
23. FN+ESC = Manténgalas pulsadas durante 3 segundos para volver a la configuración de fábrica.

Ajuste de la retroiluminación

FN+ [Alt_R] : Ir con la corriente, vuelo en las nubes, caminos sinuosos, prueba de la luz, intermitente, normalmente encendido, pasar sin dejar rastro, ripple graff, acción rápida, tiempos digitales, flores que crecen

FN+ [M] : Ajusta el brillo de la iluminación (5 niveles en total).

FN+ [,<] : Ajuste la velocidad de la iluminación (5 niveles en total).

FN+ [Barra espaciadora] : Modo de retroiluminación personalizado, pulse FN + [Barra espaciadora] para configurar los colores en las teclas, la [Barra espaciadora] ahora es su paleta, pulse FN + [→] para cambiar de color, hay 9 modos que incluyen 8 opciones de colores y un modo de apagado de luz, 3 indicadores [Num, Mayús, Despla] destellan al mismo tiempo durante la personalización. Pulse la tecla deseada para configurar los colores. Pulse FN + [Barra espaciadora] para guardar la configuración.

FN+WIN: Para bloquear la tecla de Windows, repita para desbloquear.

Preguntas y respuestas

1. Si el teclado no reacciona, por favor controle que la interfaz esté correctamente insertado en el puerto USB correspondiente de la computadora, o intente insertar la interfaz del teclado en otro puerto USB de la computadora.
2. Si derrama un líquido sobre el teclado por error, por favor extraiga la interfaz del teclado de la computadora inmediatamente, limpie el líquido derramado en el teclado y deje secar el teclado al sol hasta que el líquido se haya evaporado por completo para poder utilizarlo.

