

REDMOND

PERSONAL BLENDER
Instruction Manual



BL019 NA
Model NO. DZ-1803

THANKS FOR PURCHASING OUR PRODUCTS!

We hope you'll be satisfied with our products and service. All **REDMOND** products are covered for FREE under a 12-month warranty. If you have any problems with our products, please feel free to contact us via email cs@redmond.shop
Backup email: cs.appliance@outlook.com

READ ALL INSTRUCTIONS BEFORE USE

IMPORTANT SAFEGUARDS

WARNING – To avoid the risk of electrical shock, always make sure the product is unplugged from the electrical outlet before assembling, disassembling, relocating, servicing, or cleaning it.

WARNING – To reduce the risk of fire, electric shock, or serious personal injury:

When using electrical appliances, basic safety precautions should always be followed including the following:

- Always ensure the product is unplugged from the electrical outlet before relocating, assembling, disassembling, or cleaning it. Always unplug the product from the electrical outlet when it is not in use.
- Keep the product out of the reach of children and pets. This product is not intended for use by children. Close supervision is necessary when using this appliance near children.
- Do not leave the product unattended while it is in use, especially when children are present.
- Do not immerse the power cord, plug, or product in water or other liquids. If the product falls into water, immediately unplug it from the electrical outlet. Do not touch or reach into the water.
- Keep the Power Cord and product away from heated surfaces.
- The use of attachments, including canning jars, not recommended or sold by the product manufacturer may cause a risk of injury to persons.
- Handle the Blades with care as they are extremely sharp. Use caution when attaching or detaching the Blades.
- Do not touch moving parts (e.g., the Blades) while the product is in use.
- Keep hands and utensils away from the moving Blades while operating the product. A scraper may be used but only when the product is not operating.
- Do not plug/unplug the product into/from the electrical outlet with a wet hand.
- To disconnect the product from an electrical outlet, pull directly on the plug, do not pull on the power cord.
- Always operate the product with the cover in place.

- When blending hot liquids, remove the center piece of the two-piece cover after initially starting the blending process.
- Never place the Blade Assembly on the Base unless attached to the Jar.
- Do not put any stress on the Power Cord where it connects to the product, as the Power Cord could fray and break.
- Do not operate the product if it has a damaged or cut Power Cord or plug, if wires are exposed, if it malfunctions, or if it is dropped or damaged. This product has no user-serviceable parts. Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform any servicing; take the product to the appliance repair shop of your choice for inspection and repair.

CAUTION -- To reduce the risk of personal injury or product/property damage:

- This product is intended for indoor, non-commercial, non-industrial use in processing foods for human consumption. Do not use the product outdoors or for any other purpose.
- Always operate the product on a flat, stable surface.
- Do not attempt to open any part of the Motor Housing.
- Do not let cord hang over edge of table or counter where it may be tripped over or pulled.

SPECIAL INSTRUCTIONS:


A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. Extension cords are available and may be used if care is exercised in their use:

- The marked electrical rating must be at least as great as that of the product.
- If the product is of the grounding type, the extension cord must be a grounding-type 3-wire cord.
- Do not plug/unplug the product into/from the electrical outlet with a wet hand.
- Do not plug/unplug the product into/from the electrical outlet with a wet hand.
- To disconnect the product from an electrical outlet, pull directly on the plug, do not pull on the power cord.
- Always operate the product with the cover in place.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE


PRODUCT INTRODUCTION

Parts: 1(Fig.01)

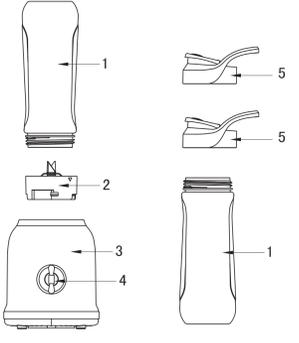

1. 600ml sport bottle
2. Blade assembly
3. Blender base
4. Knob
5. Lid

Parts: 2
Speed control panel

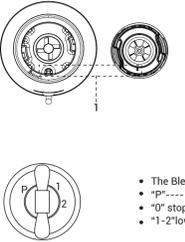

1. Interlock switch

- The Blender has 2 speeds
- "P".....Pulse
- "0" stop.
- "1-2" lower speed...higher speed

封面

USING THE APPLIANCE

To Assemble


1. Before using the product for the first time, wash all the parts except the Main Body in warm, soapy water, and then rinse and dry thoroughly.

CAUTION: Never immerse the Main Body in water or other liquids. Never use abrasive cleaners on any part of the product. Do not place any parts into a dishwasher or extremely hot water.

2. Place the blade assembly on the blade base and then screw it tightly.


CAUTION: Do not forget to place the clutch in.

3. Place the blade base and blade assembly on the cup base.

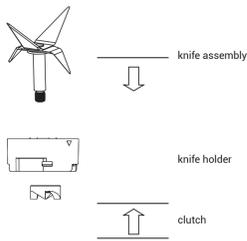

knife assembly
knife holder
clutch

4. Place the Main Body on a flat, stable surface, and then place the assembled Cup in the top of the Main Body and turn clockwise until it is firmly in place.

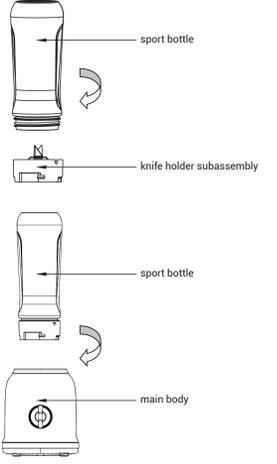

sport bottle
knife holder subassembly
sport bottle
main body

TO USE THE BLENDER

CAUTION: Do not operate the product until it is properly assembled.

1. Ensure the product is unplugged from the electrical outlet.

2. Pour liquid ingredients into the Pitcher.

3. Wash all solid ingredients and cut them into pieces small enough to fit into the Cup.

The Pitcher has 600 milliliter capacity. Do not over-fill it.

CAUTION: Do not use the product for mashing or grinding heavy foods (e.g., potatoes or meats) or to stir thick mixtures (e.g., dough).

4. After filling the Pitcher with ingredients, place the Lid with measuring cup securely onto the Cup.

5. Plug the product into a standard 120 volt AC electrical outlet.

6. Turn the Dial to the desired speed 1-2 (lowest or highest) or hold the Dial in the "Pulse" position for Pulse.

CAUTION: Never operate the product if it is empty.

NOTE: If the Blades are not operating smoothly, stop the product and add some liquid, or reduce the contents in the Cup.

7. Turn off the product by turning the Dial to the "0" position, and then unplug the product from the electrical outlet.

WARNING: Always unplug the product when it is not in use or will be left unattended.

8. When the Blades have stopped, the Cup can be removed from the Main Body.

CARE AND MAINTENANCE

WARNING: Always ensure the product is unplugged from the electrical outlet before relocating, assembling, disassembling, or cleaning it.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

CAUTION: Before disassembling the product for cleaning, ensure the Blades have completely stopped and use caution when attaching or detaching them, as they are extremely sharp.

- Always clean the product immediately after each use. Wash all parts except the Main Body in warm, soapy water and then rinse and dry thoroughly. Never immerse the Motor Housing in water or other liquids. Never use abrasive cleaners on any part of the product. Do not place any parts into a dishwasher or extremely hot water.
- To disassemble the Cup for thorough cleaning, turn the Blade Base counterclockwise and remove it, and then remove the Blades and the Gasket from the Pitcher. Use a small brush (not included) to remove particles of food lodged underneath the Blades. To reassemble, replace the clutch and the Blades into the bottom of the Cup, and then turn the Blade Base clockwise to tighten onto the Cup (refer to the Parts illustration).
- Store the product in a cool, dry place.

FOLLOW US

[@redmond.usa](#) [@redmond.usa](#) [redmond.usa](#)

Customer service email: cs@redmond.shop
Backup email: cs.appliance@outlook.com

WHAT YOU WILL GET

- Healthy and tasty recipes
- Latest news about REDMOND
- Kitchen hacks and ideas
- Free gifts and coupon info
- Amazing stories about food, life and love...

REDMOND

成品尺寸: 140x210mm
 材质: 157g铜版纸
 印刷: 单色(黑色) 印刷 装订