

## Manual for TM-O62 Wireless Headphone

### 1. Product description:

Wireless Headphones with high quality stereo for wireless music and calling. Beautifully designed and ideal for enjoying music anytime and anywhere. It provides perfect sound quality for your computer, digital music players, mobile phones and other audio-visual products.

### 2. Function features:

[Playing wireless]: Supports pairing with wireless devices to play music from mobile phones, tablets and TV.

[Handsfree calls]: Supports handsfree calls with high sensitive built-in microphones.

[iOS battery display]: Real-time battery display for iOS devices.

[Smart power-off]: If the headphone is not connected in wireless mode, it will turn off automatically after 5 minutes.

[MP3 player]: Plays directly MP3 files from a TF card.

[FM radio]: Digital FM stereo radio with automatic search and memory radio.

[Audio input]: Audio input ports. Easily connect the computer, digital music player, mobile phone and other audio-visual products.

[Rechargeable lithium electricity]: Built-in rechargeable lithium battery. Beneficial for the environment.

[Intelligent charging]: With USB charging cable.

### 3. Button features:

1. Power switch: turn the switch ON. It will automatically enter into wireless mode. The indicator light flashes red and blue. Switch OFF to turn off the headphones. Indicator light turns off.

2. TF card and mobile phone music: short press to play previous song. FM radio: short press to select stored radio stations. Long press to turn the volume down in any mode.

3. TF card and mobile phone music: short press to play next song. FM radio: short press to select stored radio stations. Long press to turn the volume up in any mode.

4. TF card and mobile phone music: short press to play and short press to pause. FM radio: short press for automatic channel search and store the channel. When you store channels for the first time, make a full channel searching operation which will take 1 minute. Press **↵** or **↶** to save the radio station. Answering calls: short press to answer and hang up calls. Long press to decline calls. Press two times to redial the previous number.

5. M: Short press to switch between radio, wireless connection and TF card mode.

6. [Micro USB charging ports]: Connect the USB charging cable to a computer or a power adapter to charge.

7. [Audio input]: For a non-wireless connection use the audio cable to connect your phone or other digital music player.

8 [TF card slot]: Insert the TF card in the slot to play files from the card.

### 4. Wireless pairing

The indicator light flashes red and blue in wireless mode when it's pairing. Search for the corresponding wireless device name on your phone. When pairing is successful you'll hear "Connect successfully". The indicator light turns blue.

### 5. Play music with cable

Insert the 3.5mm audio jack into the audio input port. The wireless connection automatically turns off to save battery power.

### 6. Charging

Insert the micro USB cable in the USB port to charge. The indicator light is red when charging and turns off when it's fully charged.

### 7. Low battery

When the battery is low you'll hear "Low battery please charge" and automatically turns off. If the headphones aren't used for a long period of time, charge at least once a month to extend the battery life.

### 8. Auto power off

If not connected in wireless mode, the headphones turn off automatically after 5 minutes.

### Technical specifications:

1.	Charging voltage:	Micro USB 5V
2.	Working current:	25-40mA
3.	Wireless working range:	10m
4.	Output power:	2*20mW
5.	Frequency range:	2.401-2.480GHZ
6.	Distortion factor:	<1%
7.	SNR:	>95dB
8.	Frequency response:	20Hz-20KHz
9.	Support TF card:	128MB-32GB
10.	Radio frequency:	87.5-108MHz
11.	Normal working time:	4h
12.	Charging time:	Less than 2 hours