


MANUAL STROBO FLASH LAMPS L1893

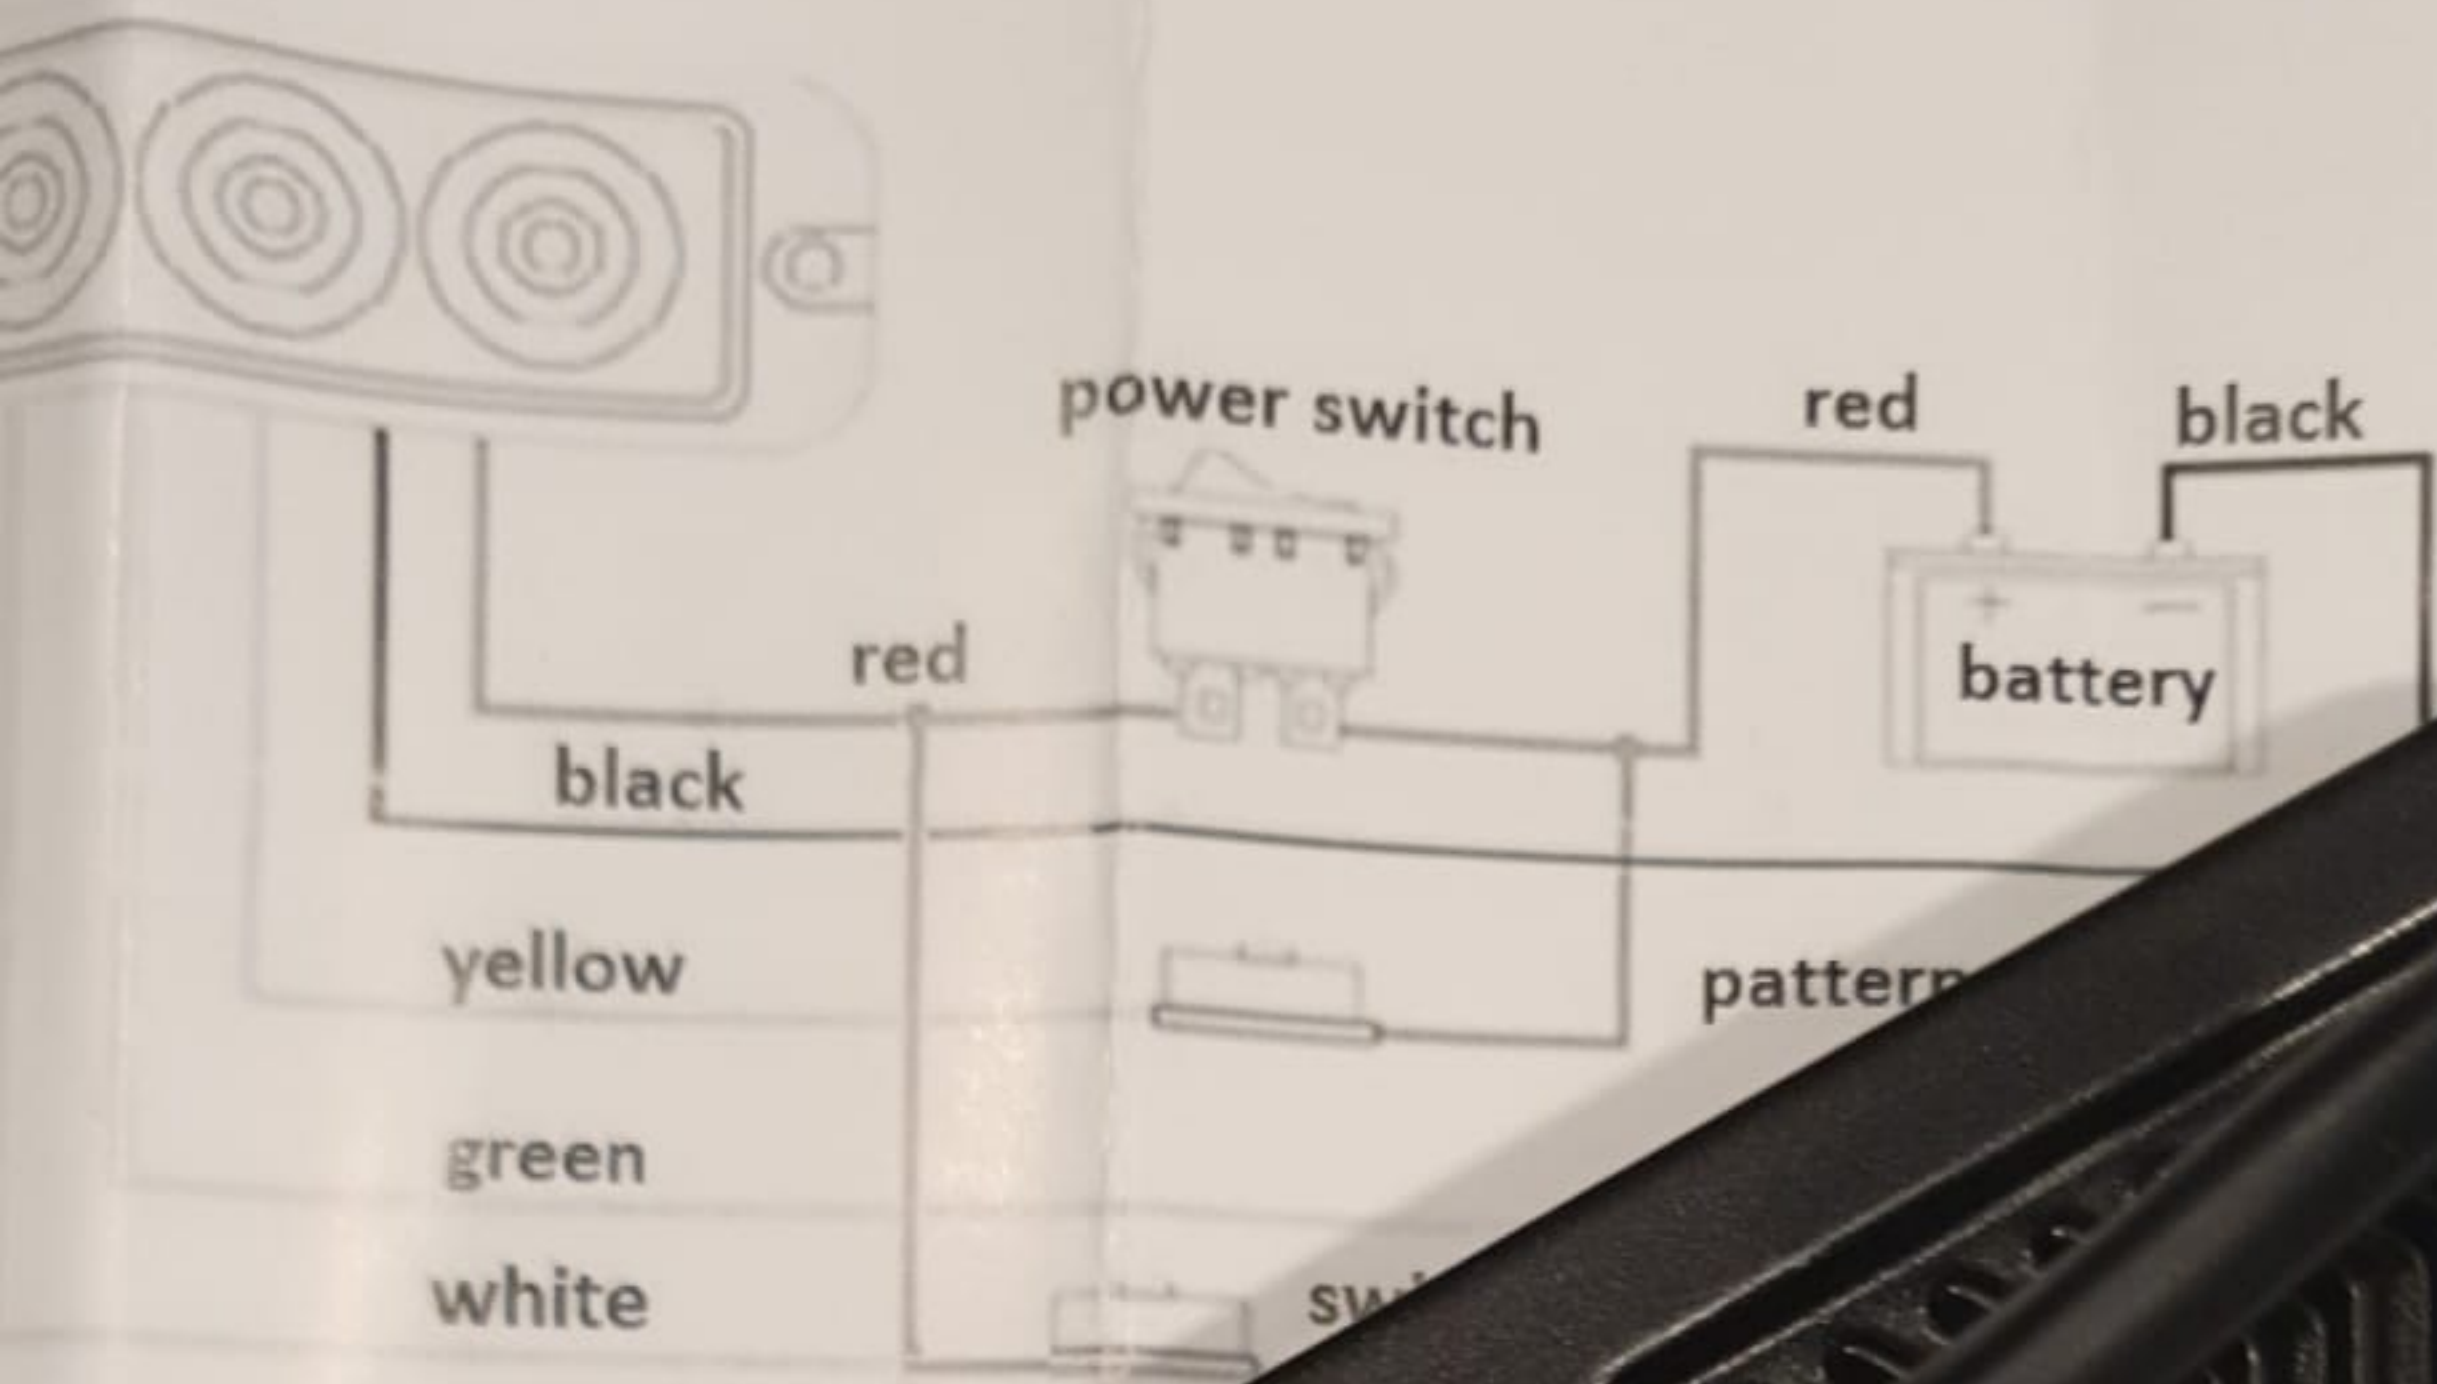

White wire connects to the Black wire or suspension in synchronous mode.
Red wire connects to the Red wire and works asynchronously.

Yellow wire touch to the red wire 1 second, the display mode is changed.
Green wire touch to the red wire and hold it for more than 3 seconds.

White wire touch to the red wire 1 second, the display mode is changed.
After disconnection, work in the first mode.

When the green and black wires are connected together, the green wire touch to the red wire for 1 second, the display mode is changed to the first mode or night pattern.

Use only in accordance with UNECE regulations (for use as a
used electrical and electronic equipment)

The related texts indicates that it should not be disposed of with other household waste at the end of its useful life. To protect the environment and human health by uncontrolled disposal, please separate the product from another type of waste and recycle it. Please contact your retailer where they purchased the product. Users in companies should contact their supplier and check the technical data sheet. The product should NOT be disposed of with other commercial waste.

