


INSTRUCTION MANUAL

BLUETOOTH WIRELESS STEREO HEADSET WITH MICROPHONE

- FEATURES:**
1. ENJOY STEREO MUSIC WIRELESSLY.
 2. LOVELY UNICORN DESIGN WITH BLING RHINESTONES.
 3. DELICATE, ADJUSTABLE DESIGN, MAKING IT EASY TO CARRY.
 4. HAND-FREE AND TANGLE-FREE DESIGN.
 5. PINKY COLOR MAKES IT A GREAT GIFT FOR LITTLE KIDS.
 6. COMPATIBLE DEVICES: ANY DEVICES WITH BLUETOOTH FUNCTION.

- PACKAGE LISTS**
- WIRELESS BLUETOOTH HEADSETS
 - INSTRUCTION
 - USB CHARGING CABLE

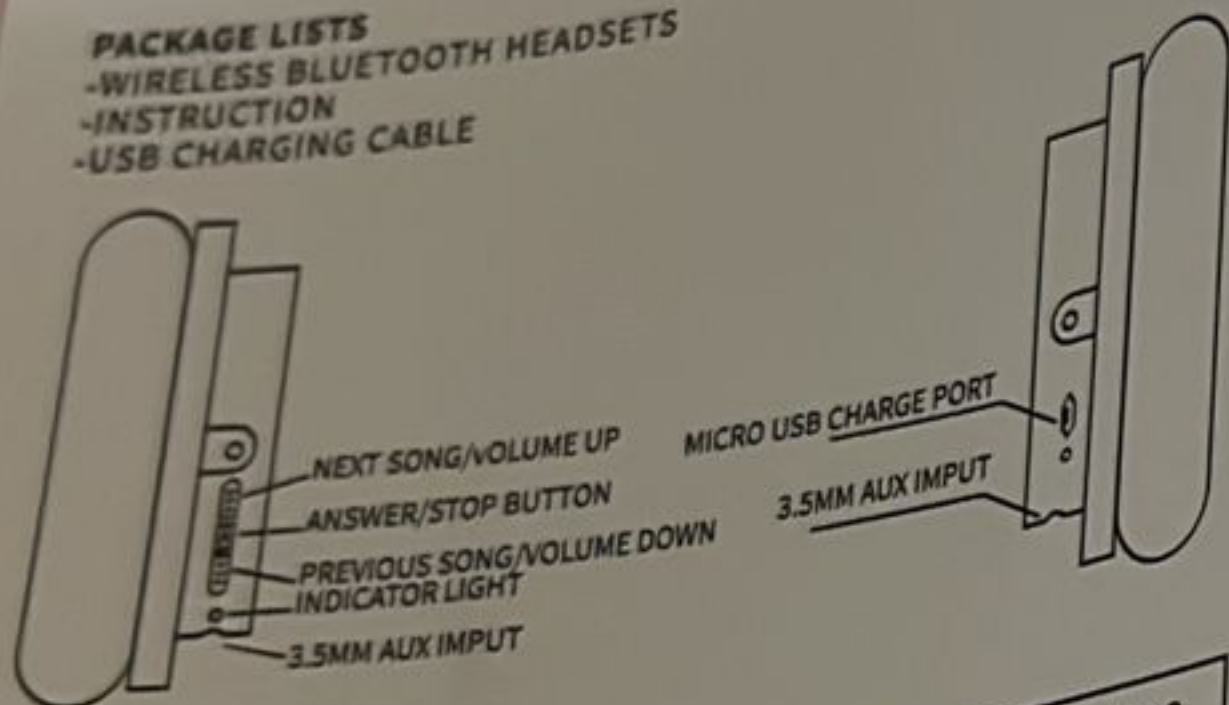

FUNCTIONS OF THE BUTTONS

POWER ON	PRESS ON/OFF BUTTON FOR ABOUT 3 SECONDS, YOU WILL HEAR "BLUETOOTH MODE", WHICH MEANS POWER IS ON.
POWER OFF	LONG PRESS ON/OFF BUTTON FOR ABOUT 3 SECONDS, YOU WILL HEAR "POWER OFF".
STANDBY STATUS PROMPT	IN STANDBY MODE, BLUE LIGHT FLICKERS WHEN POWER IS SUFFICIENT, AND RED LIGHT FLICKERS WHEN POWER IS TOO LOW.
CHARGING STATUS PROMPT	PRESS ON/OFF BUTTON ONCE TO ANSWER AN INCOMING CALL AND AGAIN TO HANG UP THE CALL.
ANSWER/HANG UP	PRESS ON/OFF BUTTON ONCE TO ANSWER AN INCOMING CALL AND AGAIN TO HANG UP THE CALL.
VOLUME	LONG PRESS "VOLUME +" OR "VOLUME -" TO ADJUST VOLUME.
STOP/PLAY	PRESS ON/OFF BUTTON ONCE TO PAUSE THE MUSIC, AND THEN AGAIN TO CONTINUE.
PREVIOUS/NEXT	PRESS THE VOLUME "+" OR VOLUME "-" BUTTON ONCE TO PLAY THE PREVIOUS OR NEXT SONG.

BLUETOOTH VERSION	4.2
SUPPORT AUDIO FORMAT	MP3, AAC, SBC
IMPEDANCE	16Ω
DRIVER UNIT	13MM
FREQUENCY BAND	20KHZ-20KHZ
FREQUENCY RANGE	20KHZ-20KHZ
BATTERY SPECIFICATION	20HZ-20KHZ
TRANSMISSION RANGE	3.7V/300 MAH
CHARGING TIME	≤10M
CHARGING MODE	1.5-2.5H
CHARGING CURRENT	MICRO USB 5V
CONTINUOUS SERVICE TIME	300MA
STANDBY TIME	4-6H
MAX VOLUME	>2 MONTHS (POWER OFF STATE)
	105db

CONNECTION METHOD:

- 1) LONG PRESS THE ON/OFF BUTTON FOR 3 SECONDS, YOU WILL HEAR "BLUETOOTH MODE" VOICE, AND THEN A SOUND-DINGDONG, WHICH MEANS THE POWER IS ON, YOU CAN CONNECT YOUR BLUETOOTH. MEANWHILE, THE BLUE LIGHT FLICKERS. OPENING THE BLUETOOTH ON YOUR MOBILE, TABLET, OR ANY DEVICES WITH BLUETOOTH. FIND THE BLUETOOTH NAMED "JC-1", THEN PAIR THEM UP.

CONNECTION LOST?

- IF PAIRING THE HEADPHONE DOES NOT WORK, TURN OFF THE HEADPHONE AND REPEAT THE STEPS AGAIN IN "PAIRING YOUR HEADPHONE".
- MAKE SURE YOUR HEADPHONE IS WITHIN RANGE OF YOUR SMART DEVICE.
- IF YOU HEAR A LONG BEEP, YOU NEED TO RECHARGE YOUR HEADPHONE. CONNECTION MAY BE LOST DUE TO LOW BATTERY.
- WHEN CHARGING YOUR HEADPHONE, ONLY USE THE INCLUDED USB CABLE.

WARNING

- PLEASE STORE AND USE THE PRODUCT AT ROOM TEMPERATURE.
- DO NOT EXPOSE THE PRODUCT TO RAIN OR HUMIDITY.

- DO NOT THROW, TO AVOID PRODUCT DAMAGE DUE TO DROP.
- DO NOT DISASSEMBLE, REPAIR OR MODIFY THE PRODUCT BY YOURSELF.
- DO NOT WIPE THIS PRODUCT WITH CHEMICAL SOLVENT.
- PLEASE KEEP THE HEADPHONES AWAY FROM FIRE.



AFTER-SALE SERVICE:

- IF YOU HAVE ANY PROBLEMS WITH THIS HEADPHONE, PLEASE CONSULT THE INSTRUCTIONS IN THE MANUAL.
1. WE STAND BY OUR PRODUCTS. THAT IS WHY WE GUARANTEE THEM FROM ANY FUNCTIONAL DEFECTS FOR SIX MONTHS FROM THE ORIGINAL DATE OF PURCHASE. ANY PROBLEM DURING THAT TIME, CONTACT US, WE WILL TRY OUR BEST TO HELP.
 2. WE ARE NOT RESPONSIBLE FOR DAMAGES CAUSED BY HUMAN, SITUATIONS INCLUDED BUT NOT LIMITED, SUCH AS DISASSEMBLING, BREAKING AND SCRATCHING.

EMAIL: