



1. remove the back cover



2. add cleaning solution



3. screw on the back cover



1. remove the piston



2. inject cleaning fluid



3. press the piston