

Product features

- The keyboard is made of solid materials and the keys are responsive.
- RGB light bars on both sides of the keyboard, fashionable and cool.
- Key cap and gap backlight, with uniform color. There are 29 RGB lamp effects and 30 off effects in the main key area.
- FN+↵ The combination key switches 19 RGB lamp effects and turns off 20 lamp effects in total: drifting with the waves (restoring the default rear lamp effect), shadowy, sinusoidal light wave, left and right scanning, rotating windmill, colorful waterfall, blooming wealth, rotating storm, back and forth collision, turning off, always on mode, breathing mode, dreamy rainbow, instant, walking in the rain, rainbow wheel, button ripple, stars, snow without trace, endless stream.
- The RGB light effect with music rhythm is matched with the drive, and there are 10 light effect modes available under this light effect.
- Cooperate to drive the user-defined function of each key belt and macro definition. The driver can customize more than 16 million colors.
- The user-friendly design of the keyboard, together with Fn, adds a series of commonly used shortcut function keys.
- Fn+CTRL=the first row of numerical areas switches to area F (for example, 1 switches to F1, see the table).
- Fn+Space long press for three seconds=restore the default.
- Fn+Esc short press=` • Fn+Shift+Esc short press=~.
- Fn+Enter=/, right ALT, APP, right CTRL are interchangeable with ↑↔↵ (4 direction keys).
- Fn+"=light brightness increases, • Fn+;:= The light brightness decreases (five gear brightness adjustment).
- Fn+{=light speed decreases • Fn+}=light speed increases.
- Fn+TAB=switch light effect color.
- Fn+left WIN=lock/open the left WIN window key (indicated by the red light of the WIN key when the WIN is locked).
- Fn+left ALT=switch WIN/MAC, left ALT is switched with left WIN, and left ALT is indicated by red light.
- Fn + BackSpace = Del • Fn+U = PRTSC • Fn+I = SCRLK
- Fn+O = PAUSE • Fn+J = INS • Fn+K = HOME
- Fn+L = END • Fn+, < = PGUP • Fn+ .> = PGDN
- Fn combined multimedia function: • Fn+A=play/pause,
- Fn+S=previous song,

- Fn+D=Next, • Fn+F=volume down, • Fn+G=Volume increase, • Fn+H=Mute.
- The red light under the CAP key indicates that the size is locked.
- Key wire separation design Type C has more reliable connectivity and more stable performance.

Product specifications

- Number of keys: 61
- Total stroke: 4.0 ± 0.3mm
- FN key multifunction
- Product size: 298.38×108.19×37.02±0.5mm
- Product weight: about 411g
- Rated voltage: DC 5V
- Rated current: < 100mA
- Applicable system: Windows ALL operating system WIN XP, WIN7, WIN8, WIN10 (under Win95Win98 system, driver may be required).



Standard Edition Shortcut Description

Fn+	Space	Enter	TAB	[[]]
Combination Function	Recover Factory setting(Press)	/, Right ALT, APP, Right CTRL with 4 Arrow key swap	Color switch	Speed-	Speed+
Fn+	↵	CTRL-L	WIN-L	ALT-L	U
Combination Function	Lighting mode switch	Numbers with F zone switch	Lock WIN	WIN and ALT swap	PRTSC
Fn+	I	O	J	K	L
Combination Function	SCRLK	PAUSE	INS	HOME	END
Fn+	,<	.>	::	""	BackSpace
Combination Function	PGUP	PGDN	Brightness-	Brightness+	DEL
Fn+	ESC	Shift+ESC	A	S	D
Combination Function	`	~	Play / Pause	Previous song	Next
Fn+	F	G	H	M	N
Combination Function	Volume-	Volume+	Mute	Side lamp effect Mode switching	Turn off side lights

- Press FN+space to restore the factory default light mode and function.

Restore the default left CTRL red light off, F area function and digital exchange function.

key	1	2	3	4	5	6
Single press	1	2	3	4	5	6
Fn combination key	F1	F2	F3	F4	F5	F6
key	7	8	9	0	_	=+
single press	7	8	9	0	_	=+
Fn combination key	F7	F8	F9	F10	F11	F12

Press FN + left CTRL, the red light of left CTRL is on, and the function of the F area is interchangeable with the number.

key	1	2	3	4	5	6
Single press	F1	F2	F3	F4	F5	F6
Fn combination key	1	2	3	4	5	6
key	7	8	9	0	_	=+
single press	F7	F8	F9	F10	F11	F12
Fn combination key	7	8	9	0	_	=+


Restore the default Enter red light off, /?, right ALT, APP, right CTRL and the 4-direction keys are interchanged.

key	/?	Right ALT	APP	Right CTRL
single press	/?	Right ALT	APP	Right CTRL
Fn combination	↑	←	↓	→

Press FN+Enter, the Enter red light is on, and the /?, right ALT, APP, right CTRL and 4-direction keys are interchanged.

key	/?	Right ALT	APP	Right CTRL
single press	↑	←	↓	→
Fn combination	/?	Right ALT	APP	Right CTRL

Function and Indicator Description

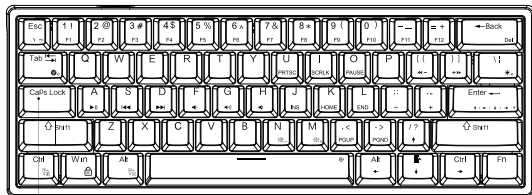

Upper and lower case indication
(LED under CAP key)

Installation instructions

Computer system requirements:

- Windows ALL operating system WIN XP, WIN7, WIN8, WIN10 (drivers may be required under Win95 and Win98 systems).
- USB 1.1 or above port is configured.

Hardware connection

- The keyboard supports hot plug (plug and play).

Warranty notes

Dear users:

Thank you for purchasing tarantula series products! This warranty card is the three guarantee certificate of tarantula products, which is kept by users themselves. With this warranty card, you will enjoy the after-sales service provided by tarantula. This warranty card is one copy for each product. Please keep it properly.

One、 With this card, you will enjoy the following rights and services:

1. Return service: within seven days after the product is sold, if the product has quality problems, according to the national "Three Guarantees service" regulations, the product will be returned to the seller or the place designated by tarantula when the appearance and packaging of the product are complete, and the payment for the product will be returned with the valid certificate at the time of purchase.
2. Warranty service: if the product performance failure occurs within 12 months from the date of purchase, it can be detected and confirmed by wolf spider after-sales service center, and can enjoy free maintenance service.

Two、 The following situations are not within the scope of free service:

1. Beyond the specified warranty period;
2. Unable to show the valid quality assurance certificate of the product or the original serial number label of the product is altered, replaced or torn;
3. There is no serial number on the product or the product model on the warranty certificate is inconsistent with the product;
4. Failure damage caused by abnormal use, maintenance and storage;
5. Failure or damage caused by repair, change or disassembly of products by maintenance personnel not authorized by our company;
6. Failure or damage caused by accident or other force majeure;
7. Services other than the products promised by the sales staff and additional accessories or gifts are not included in the scope of this warranty service;
8. Failure or damage caused by unstable power supply and voltage.