



MENU: Function mode selection, such as DMX312/Master/slave, AUTO strobe, Sound Active Strobe, Constant light on, brightness adjustment
DOWN/UP: previous or next, increase or decrease
Enter: confirm and save the selection

Display menu:

Red laser 1	1r00-1r01
Red laser 2	2r00-2r01
Green laser	1G00-1G01
Blue laser	1b00-1b01
Flash	S000-S000 OFF S001-S004 ON S005-S029 Random flash S030-S255 Flash speed slow to fast
Motor speed	1M00-1M99
AUTO mode	CC01-CC99
Sound flash	SA00-SA99
Sound mode	SC00-SC99
DMX Address (CHT)	RC01-R312

DMX Channel

Mode (CHT)	Channel	
1	Special channel	
2	Red laser 1	000-050 NO 051-100 Sound flash 101-150 Sound mode 151-200 AUTO mode 201-255 NO
3	Red laser 2	000-255
4	Green laser	000-255
5	Blue laser	000-255
6	Flash	000-000 OFF 001-004 ON 005-029 Random flash 030-255 Flash speed slow to fast
7	Motor speed	000-255

Warranty Warnings:

1. Damages caused by the disregard of this user manual are not subject to Warranty. The dealer will not accept liability for any resulting defects or problems.
2. Please consider that unauthorized modifications on the device are forbidden due to safety reasons. Please note that damages caused by manual modifications on the device or unauthorized operation by unqualified persons are not subject to warranty.
3. If this device will be operated in any way different to the one described in this manual, it may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to dangers like short-circuit, burn electric shock, etc.

After trying the above solution you still have a problem, please contact your dealer or our company for service.

Professional Disco Party Light

User's Manual



ATTENTION: Read this manual before using. Do not attempt to open the housing or repair this device by yourself without contact us!