



① find the inlet port



② inflate with PUMP



③ Finish to inflate



④ Auto-seal



① find a straw



② insert straw from inlet port, let air leak



③ press lightly until without air



④ storage