




AYEWAY Handleiding

product structure  
product manual 1

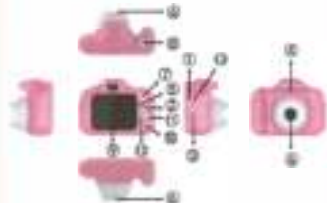

product manual 1

- 1. USB
- 2. Rebuild
- 3. SD card slot
- 4. Speaker
- 5. Indicator light
- 6. Lens
- 7. Power button
- 8. Video button / camera button
- 9. Display
- 10. Down button
- 11. Mode button
- 12. Menu button
- 13. RECALL BUTTON

Button function description

1. USB  
USB data interface, 1 is used to connect PC to transmit data; 2 is used to connect external power supply to charge battery or provide working power;
2. Page up  
In the menu options, select the function key up;
3. SD card slot  
Install the slot of the SD card;
4. Speaker  
Play a sound of a sound video or file;
5. Light charging indicator
6. Lens  
Viewfinder window
7. Power button  
1 for equipment switching machine; 2 charging indicator;
8. Recording button/ camera button  
1 In the camera mode, short press this button to start recording short press again to stop recording;  
2 short press this button to take a photo in the camera mode;  
3 in the menu mode is the confirmation button;
9. Display  
2.0 inch color display;
10. Down button  
In the menu options, select the function key down;
11. Mode key  
The following modes can be switched in standby mode: 1 recording mode. 2 camera mode. 3 video playback and photo browsing mode;
12. Menu button  
Short press this button to call up the function setting menu; press this button again to exit the function setting menu;

Basic operation instructions for camera/photo

1. Power on and off  
Press and hold the power button to turn it on, the blue indicator will light up when it is turned on; Pressing the power button again is off, and the blue indicator is off;
2. Camera mode  
Short press "Mode button" to switch to camera mode, and display the camera resolution and camera icon in the upper right corner of the screen;  
Short press the "Video/Photo" button to start recording, the recording indicator will start flashing, indicating the recording work;
3. Photo mode  
Short press the "Mode button" to switch to the camera mode, and the camera resolution and camera icon are displayed in the upper right corner of the screen;  
Short press the "Video/Photo button" to take a picture. When the picture is taken, the indicator flashes once, indicating that the picture is completed.
4. Video / photo playback  
Short press the "Mode Key" button to switch to the playback mode, and the playback icon will be displayed in the upper right corner of the screen; Short press the "Up" button to select the file upwards;  
Short press the "Down" button to select the file down;
5. Menu settings  
Short press "Menu" to call up the setup menu; By pressing the "Up" button or "Down button", you can cycle up and down in each setting item;  
Select the setting item that needs to be changed, and confirm the change by short pressing the "Video, Camera button";

6. Exit the setup menu  
Short press the "menu button" to exit the setting state;

USB mode

Connect the USB cable to the computer and the digital camera will automatically connect to the USB;  
In this mode, video files or photo files can be read and accessed;

Battery instructions

1. Battery indicator, please refer to the illustration:

Full battery    Lower battery    Low battery    Empty battery

2. There are three ways to charge the battery, and the blue charging indicator will light up during charging.

- 1: Charging with the power adapter
- 2: Charging with PC-USB
- 3: Charging with the car power supply

Remark: When using this product, it may cause the phenomenon of crash due to improper operation. You can remove the battery or press the reset button and then turn it on again to return to normal.

Product specifications

|                  |   |
|------------------|---|
| Image sensor     | GC8388  |
| Display          | color display   |
| Lens             | fixed lens, 100 degree angle  |
| Storage media    | Mini sd card, up to 32G   |
| Photo format     | JPG   |
| Language         | Russian, English, Chinese (Simplified), Chinese (Traditional), Korean, Japanese, etc. |
| Camera format    | JPEG  |
| Resolution       | 1080P: 1440x1080 nOP: 1280x720 VGA: 640x480   |
| TFT display      | 2.0 inch screen (720x320)   |
| Time mark        | off, on   |
| Loop recording   | off, 1 minute, 5 minutes, 10 minutes, 15 minutes                                      |
| Photoframe       | normal, background 1  |
| Format           | Cancel, execute   |
| Charging voltage | 5V  |
| System           | Windows me/2000/2003/XP/vista/lin7; Mscos; linux                                      |
| Frequency        | 50HZ, 60HZ  |
| Reset system     | Cancel, execute   |
| Manufacturer     | D600-0164-3703  |
| Model            | AYEWAY  |