



MASSAGERR



MASSAGE BALL MANUAL

www.massagerr.nl

INSTRUCTIONS

www.massagerr.nl



PRESS POWER BUTTON:

- ONE** Turn on power and charging indicator
- TWO** First speed's vibration (1 speed indicating)
- THREE** Second speed's vibration (2 speeds indicating)
- FOUR** Third speed's vibration (3 speeds indicating)
- FIVE** Fourth speed's vibration (3 speeds intermittent)

CHARGING

www.massagerr.nl

The product can be charged with any charging adapter / power with voltage from **3.7V** to **5.0V**. You may use a laptop or desktop comter, mobile power bank, or cellphone charger.

WHILE THE UNIT IS CHARGING:

- Charging time is 2-4 hours. Actual charging time depends on its remaining power
- The power and standby indicators will be flashing red and bule while charging
- The unit can not be turned on while charging
- When fully charged the indicator light will be red

CLEANING & MAINTENANCE

www.massagerr.nl

- The unit will power off automatically after 10minutes of use (This is to prevent overheating).
- The unit can not be used continuously in the third mode for over 60minutes (This is prevent overheating).
- Please do not drop. throw or slam the product in any case.
- The unit is IP65 Standard Waterproof, please use properly. Do not use if cracked, damaged or other issue.
- Keep unit clean and dry, use storage bag when not using.

SPECIFICATIONS

Net Weight: **372g**

Charging Time: **2-4hours**

Motor RPM: **2000 > First Speed**
4000 > Second Speed
6000 > Third Speed

Motor Temperature: **65°C**

Material: **ABS+silicone**

Betterry: **DC 3.7V 2400mAh**

Working: **Maximum speed**

Time: **60 mins (6 cycles)**
10 mins per cycle

ROPE MESH SACK

www.massagerr.nl

- Carefully insert massage ball into the mesh sack, with front control panel ai one of the openings.
- Pull on rope handles and adjust rope cinch to tighten mesh sack securely around the ball.
- Turn on massage ball and set to desired vibration level.
- Hold rope handles,one in each hand, and then position the ball on your desired soft tissue area.

Warranty excludes:

1. Damage caused by improper or incorrect installation or use.
2. Breakage or damage from mishandling or accidents.
3. Use of product for purposes for which it was not intended, or commercial use.



Follow us on Instagram



Made in China

