

# KIDS SMART WATCH USER MANUAL



## Content

1 Get Started.....	2
1.1 Power On/Off.....	2
1.2 Charging.....	2
1.3 SOS function.....	2
1.4 Installed a SIM card.....	3
2 Functions.....	4
2.1 The Screen display in standby mode.....	4
2.2 Contacts.....	4
2.3 Quick Dial.....	5
2.4 Camera.....	5
2.5 Album.....	6
2.6 Record.....	6
2.7 Alarm.....	7
2.8 Calculator.....	8
2.9 Game.....	9
2.10 Set up.....	11
2.11 Music.....	12
2.12 Tools.....	12
3 Hardware Specifications.....	13
4 Package Contents.....	14
5 FAQ.....	14



\*Note: The function of this product could be subject to change. For the functional modification that will not affect the use of this product, this manual will not be revised. Thank you for your understanding.

-1-

## 1. Get Started

### 1.1 Power On/Off

Power On: Press and hold the power button .  
Shutdown: Press and hold the power button .  
\*Before switching on the watch, make sure that the battery is properly installed in the device.  
\*If the device fails to turn on, this could be caused by low battery. Please check the battery if correct installed and recharging the device for at least 20 minutes.

### 1.2 Charging

Remove the silicone plug on the USB charging port, and then connect the Micro-USB end of the cable to the watch and the other end to the USB charger.  
\*After the charger is plugged to the power socket, the power icon at the top right of the screen will start scrolling, indicating that it is in charging mode. The power icon will stop scrolling with a full battery icon when fully charged.

### 1.3 SOS function

Remove the rear cover and battery of the watch first. Then follow the direction of the symbol and insert the Micro-SIM card into the slot. Finally, install the battery and back cover in sequence.

## 1.4 Installed a SIM card

Remove the rear cover and battery of the watch first. Then follow the direction of the symbol and insert the Micro-SIM card into the slot. Finally, install the battery and back cover in sequence.

 
\*The SIM card must support 2GGSM, otherwise the function of communication will not be available!  
\*This phone watch doesn't support LBS and GPS tracking function, it doesn't need download APP  
\*Remark: Micro SD card and SIM card will be prepared by end users, The watch excludes above both.



-3-

## 2. Functions

### 2.1 The Screen display in standby mode

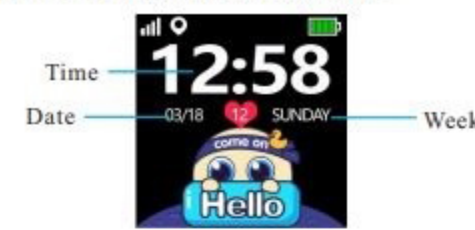

### 2.2 Contacts



-4-

Slide to the left or right in the standby interface to enter the main menu, select contacts and click to enter, you can select Dad, Mother or others, click SET NUMBER, enter the number input interface, enter the corresponding phone number, click Save, then record in the phone book. Click the avatar on the interface to call out the corresponding call.  
Note: maximum 10 contacts can be stored

### 2.3 Quick Dial



In the main menu, select <phone> and click to enter. After entering the number on the dialpad interface, press the dial button to call out the call directly.

-5-

## 2.4 Camera



In the main menu, select Camera and click to enter, you can enter the preview interface, click the left button to take the photo, and click right button to return. The default storage is in <Memory card>.

### 2.5 Album



In the main menu, select <Album> and click to enter, you can view the saved photos.

 
-6-

## 2.6 Record



In the main menu, select <Record> and click to enter, you can record.  
Note: A memory card needs to be inserted.


### 2.7 Alarm

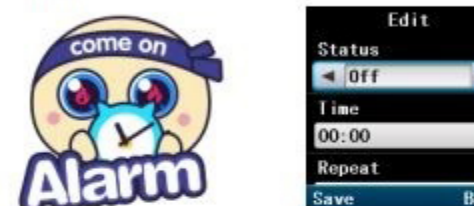

-7-

In the main menu, select <Alarm clock> and click to enter, you can set the alarm, and support up to three different alarms. You can set the switch, time and repeat period.

### 2.8 Calculator

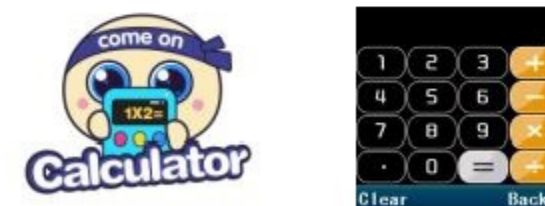 

In the main menu, select the <Calculator> and click to enter, you can use the simple calculator to calculate.

-8-

### 2.9 Game

Seven games are installed in the watch.

#### ◆ 2048

2048 is a popular digital game. How to play: Swipe up, down, left or right to move the tiles across the board. The tiles will slide in the swipe direction; meanwhile a new tile will emerge randomly in the board. When the tiles with the same number meet, they will merge into one tile.

#### ◆ Basketball Shoot master

How to play: Press the basketball to shoot. When the backboard is going to move to the middle, control to shot.

#### ◆ Bee War

Protect your planet from enemy attacks. Destroy them all before they reach your base. How to play: Click on the screen to move the fighter to shoot, you need to hit twice to destroy the enemy, score as much as possible! You have three chances. You can set the "Easy", "Normal" and "Hard" modes to turn music on or off and view scores.

-9-



#### ◆ Pinball Hit Bricks

How to play: Destroy all bricks to progress to the next level. White bricks give a special 3-ball bonus. Blue bricks need to be hit 2 times. Score as many points as you can! You can set the "Easy", "Normal" and "Hard" modes to turn music on or off and view scores.

#### ◆ Car Grab Goods

How to play: Click on the screen to move the car and catch as many airdrops as possible. You have three chances. You can set the "Easy", "Normal" and "Hard" modes to turn music on or off and view scores.

#### ◆ Mario eat gold

How to play: You need to collect as many coins as possible and jump over platforms, Don't fall or hit the columns, or you'll die! Press once to jump, press twice for a big jump. You can set the "Easy", "Normal" and "Hard" modes to turn music on or off and view scores.

-10-

#### ◆ Ultimate racing

How to play: Press and hold the car to move around to switch lanes. The car in front may drop gold coins and eat as much gold coins as possible. To avoid a crash, you only have one chance. You can turn music on or off and view scores.

#### ◆ 2.10 Set up

The following items can be set in the settings

##### ◆ Language

Different languages can be set.

##### ◆ Time And Date

You can set the time and date of your watch.

##### ◆ Call log

You can view the watch's call history.

##### ◆ File manager

You can go to File Management to view the files in your watch.

##### ◆ Silent Profile

The watch will be in silent mode when turned on.

##### ◆ Version Info Summary

The software version number can be queried.

 
##### ◆ Restore settings

The factory settings can be restored

-11-



### 2.11 Music

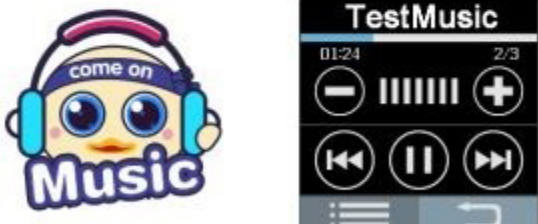

1. Copy songs via USB connection must be in power-off state  
2. Only the music files in "My music" folder can be played.

### 2.12 Tools

1. Calendar.  
2. Stopwatch.  
3. Timer.  
4. File manager.

-12-

## 3. Hardware Specifications

No:	Item	Parameter/Model
1	CPU model	MT6261
2	Communication system	GSM
3	Frequency band	850MHz/900MHz/1800MHz/1900MHz Quad Band
4	Screen	1.54 inch, IPS HD colored touch screen
5	Resolution	240*240
6	Camera	300,000 pixels
7	Battery	480mAh lithium polymer battery
8	Internal memory	32MB
9	Cover material	Plastic (ABS+PC)
10	Strap material	Dow Corning food grade silicone
11	Watch size	52.4mm*40.7mm*13.8mm
12	Watch weight	43g
13	Optional languages	English (default), French, Spanish, German

-13-

## 4. Package Contents

No:	Item	Quantity
1	Cell Phone Watch (with battery)	1
2	USB cable	1
3	Instruction Manual	1

\* Please check the contents in the checklist carefully. If any of them is missing, please contact the seller in time. Thank you for choosing our product!

### 5 FAQ

Q: Is this watch waterproof? Can I immerse it in water?  
A: This watch has an IPX5 water resistant rating, which can withstand water coming from a jet, but you cannot immerse it in water.

Q: What type of SIM card is suitable for this watch?  
A: The watch only supports the SIM card with 2G GSM communication standard. To make a phone call, the voice call service of the SIM card must be enabled. Please contact local communication operator for details.

-14-

Q: Does the watch emit strong radiation? Will it cause harm to health?  
A: The watch has been tested by an authoritative third-party testing agency. The radiation is minimal, which is almost 0 and far lower than international standard. It will not cause any harm to human body. No need to worry about this issue and enjoy it!

Q: Can I use the watch without a SIM card?  
A: If the watch does not have a SIM card, the communication-related functions will be disabled, such as call and SMS.

Q: What are the requirements for the charger?  
A: Please use a standard USB charger for the watch. It is recommended to use a mobile phone charger and avoid charging the device through the USB port of a computer.

Q: How long does it take to fully charge the watch?  
A: It might take about 2 hours to charge the watch. There is a power icon on the watch which indicates the current power. When the power is low, please charge it immediately.

-15-

Q: Will it have any negative impact if the watch hasn't been used for a long time?  
A: The power of the battery will drain completely if watch will not be used for a long time. Before using it again, charge the device for 20 minutes first.

Q: How safe is the battery? Will it explode or cause a fire?  
A: The watch adopts lithium polymer battery, which will not cause any safety issues such as overheating, explosion or fire. Moreover, the stress tolerant structure will ensure the safety of the battery!

Q: Is there any privacy leakage risk such as leaking personal information or location when using the watch?  
A: This children's cell phone watch is different from other watches with the positioning function. It is not controlled by any APP, nor can it be connected to the Internet; therefore it is impossible to be hacked, which will ensure the safety of your personal data.

-16-