



HD Webcam C615



=





+



+




1

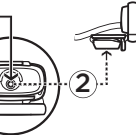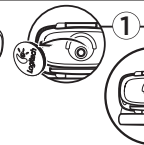


2

Windows® 8

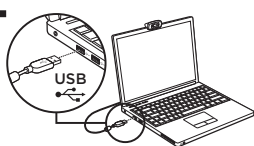

Windows® 7/Windows Vista®

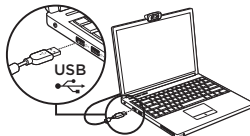


+



Logitech® Webcam Software
www.logitech.com/support/c615



1

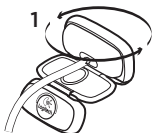

2



3



4



www.logitech.com/support/c615

620-005998.002