

Poly Sync 20/Sync 20+ Series

USB and Bluetooth Smart Speakerphone

 
User Guide








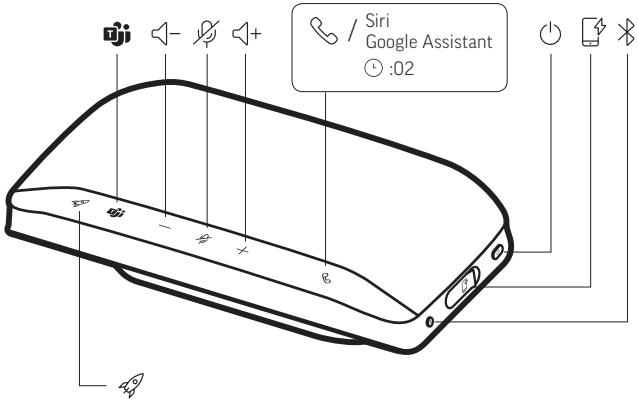

Contents

Controls and status lights	3
LEDs	4
USB Bluetooth adapter (adapter model only)	4
Setup	5
First-time setup	5
Mobile setup	5
Corded setup	5
USB adapter setup (BT600 models only)	5
Configure USB adapter	6
Charge	8
Charge	8
Charge your mobile phone	8
Load software	9
Daily Use	10
Power	10
Answer or end a call	10
Microsoft Teams button (Teams model only)	10
Mute/Unmute	10
Volume	10
Voice assistant (smartphone feature)	10
Customize your speakerphone	10
More Features	11
Attach lanyard	11
Update firmware	12
Device recovery	12
Support	13

 Controls and status lights

A portable speakerphone with mobile and corded connectivity.




	Customize feature in Plantronics Hub / Default is play/pause
	Press to interact with Microsoft Teams (Teams model only, Teams application required)
	Volume down
	Mute/unmute
	Volume up
	Call
Siri, Google Assistant	Default voice assistant (smartphone feature)
	Power on/off
	USB-A phone charge port
	Bluetooth pairing

LEDs

LED bar	What lights mean
Crossing blue pattern	Pairing
Solid blue	Pairing successful (connected)
Flashing green	Incoming call
Solid green	In a call
Solid red	Mute active

NOTE LEDs do not illuminate in standby mode.

 USB Bluetooth adapter (adapter model only)



NOTE Adapter design may vary

Standard LEDs

USB LEDs	What they mean
Flashing red and blue	Pairing
Solid blue	Headset connected
Flashing blue	On a call
Solid red	Mute active
Flashing purple	Streaming media from computer

LEDs when Microsoft Teams* is detected

USB LEDs	What they mean
Flashing red and blue	Pairing
Solid purple	Headset connected
Flashing blue	On a call
Solid red	Mute active
Pulsing purple	Microsoft Teams notification

 
NOTE *Requires Microsoft Teams application

Setup

First-time setup


Important: Your speakerphone is shipped from the factory in a Deepsleep mode to conserve battery. Activate your speakerphone by connecting the USB cable to a power source before first use.

- 1 Connect speakerphone USB cable to a wall charger or computer. When your speakerphone is activated, the LED bar lights up.

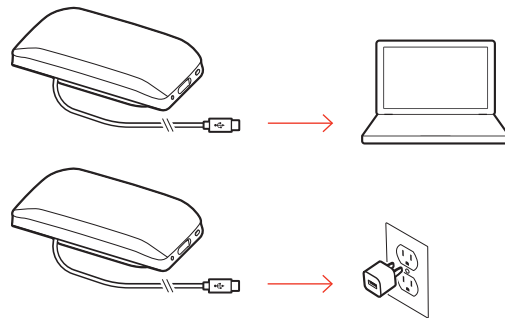

- 2 Connect or pair your speakerphone to take calls or stream media.

 Mobile setup


- 1 With your speakerphone powered on, press the Bluetooth  button for 2 seconds. You hear "pairing" and the LED flashes a crossing blue pattern.



- 2 Activate Bluetooth on your mobile device and set it to search new devices. Select "Poly Sync 20."
- 3 Pairing is successful when you hear "pairing successful" and the LED flashes blue.

Corded setup

 
Connect the USB cable from the speakerphone to the USB port on your computer.

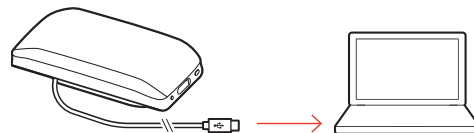

USB adapter setup (BT600 models only)

Your Bluetooth USB adapter comes pre-paired to your speakerphone.

 - 1 Power on your speakerphone and insert the Bluetooth USB adapter into your computer.

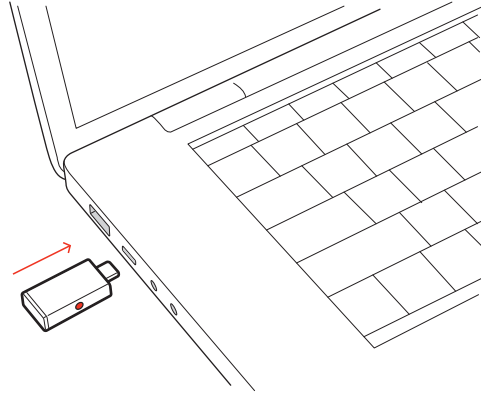


- 2 Connection is successful when you hear "PC connected" and the USB adapter turns solid.
NOTE Adapter design may vary.

Pair USB adapter again

Your USB adapter is pre-paired to your speakerphone. In the event that your adapter is disconnected or if bought separately, manually pair the adapter to your speakerphone.

 - 1 Insert the Bluetooth USB adapter into your laptop or computer and wait for your computer to recognize it.
- 2 Put your speakerphone in pair mode by pressing the Bluetooth button for 2 seconds. You hear "pairing" and the LED bar flashes a blue crossing pattern.
- 3 Put your adapter into pair mode by pressing and holding the recessed pair button with a pen or paperclip until the adapter flashes red and blue.

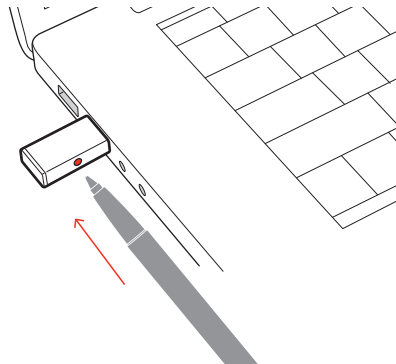

NOTE Adapter design may vary

Pairing is successful when you hear "pairing successful; PC connected" and the adapter LED turns solid.

Configure USB adapter

Your high-fidelity Bluetooth USB adapter comes ready to take calls. If you want to listen to music, you will need to configure your Bluetooth USB adapter.

Windows

- 1 To configure your Bluetooth USB adapter to play music, go to **Start menu > Control Panel > Sound > Playback tab**. Select **Plantronics BT600**, set it as the Default Device and click OK.
- 2 To pause music when you place or receive calls, go to **Start menu > Control Panel > Sound > Communications tab** and select the desired parameter.

 
Mac

- 1 To configure the Bluetooth USB adapter, go to **Apple menu > System Preferences > Sound**. On both the Input and Output tabs, select **Plantronics BT600**.

Charge


Charge

Charge the speakerphone via USB using your computer or a USB AC adapter (not provided). Allow 4 hours for a full charge.

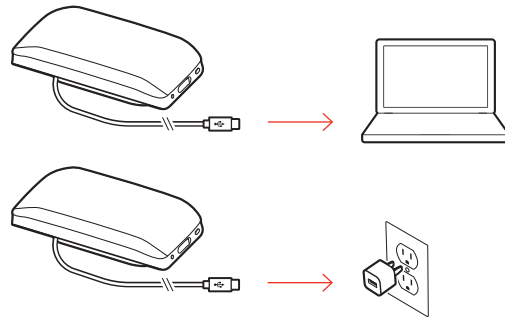

Charge your mobile phone

 With the speakerphone powered on, charge your phone by connecting your phone's charge cable to the speakerphone USB-A port (cable not provided).

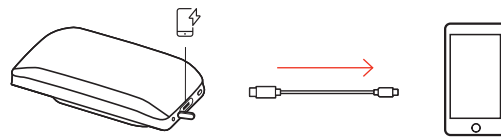

NOTE Speakerphone battery level must be medium or higher.

NOTE Connection provides power only.

Load software

Plantronics Hub is an invaluable tool.






NOTE Some softphones require Plantronics Hub for Windows/Mac to enable device call control (answer/end and mute) functionality.

- Download Plantronics Hub for Windows/Mac by visiting poly.com/software.
- Download Plantronics Hub for iOS/Android by visiting poly.com/software, the App Store or Google Play.



Plantronics Hub	iOS and Android	Windows and Mac
Call control for softphones	available for some softphones	✓
Change headset language	✓	✓
Update firmware	✓	✓
Turn features on/off	✓	✓
View user guide	✓	✓
Battery meter	✓	✓

Daily Use

Power	Press the Power  button for 2 seconds to power on or off. The LED bar illuminates when powered on.
Answer or end a call	Press the Call  button to answer or end a call.
Microsoft Teams button (Teams model only)	Press the Teams  button to interact with Microsoft Teams when not on a call. NOTE <i>Not supported for mobile use.</i> NOTE <i>The Microsoft Teams application must be installed.</i>
Mute/Unmute	During an active call, press the Mute  button to mute or unmute the microphones. Manage mute settings in Plantronics Hub.
Volume	Press the Volume up (+) or down (-) buttons to increase or decrease volume.
Voice assistant (smartphone feature)	Siri, Google Assistant, Cortana Press and hold the Call button for 2 seconds to activate your phone's default voice assistant. Wait for the phone prompt to activate voice dialing, search, and other smartphone voice controls.
Customize your speakerphone	Select your Rocket  button feature in Plantronics Hub. Choose from: <ul style="list-style-type: none">• Play/pause audio (default)• Device status check• Clear trusted device list• Default voice assistant (Siri, Google Assistant)• Redial• Hold/resume call

 
More Features

Attach lanyard


Use the lanyard to carry speakerphone on your wrist.

The lanyard slot is located on the side of the speakerphone.

NOTE Lanyard is included in box.

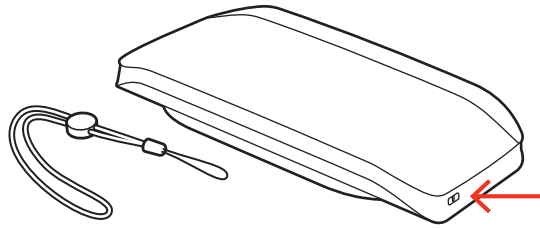

 - 1 Insert the loop through one side of the slot and push through to the other side.

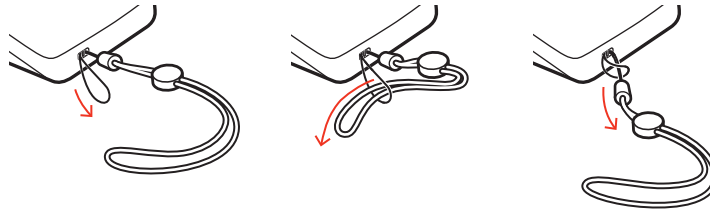

- 2 Thread the lanyard through the loop and pull to secure.

Update firmware

Keep your firmware up-to-date to improve performance and add new features to your Poly device.

Update your firmware using your computer or mobile device with Plantronics Hub. Download at poly.com/software.

While updating firmware:

- Do not use your Poly device until the update is complete.
- Disconnect your Poly device from paired devices such as phones, tablets and computers.
- Do not start a second update from a second device.
- Do not stream media on your smartphone.
- Do not answer or place a call.

NOTE Smartphone: *If you receive a lot of calls, emails or texts, try turning on the Do Not Disturb feature in your smartphone's settings while you update.*

Device recovery

If you have several failed attempts at an over-the-air firmware update, or if your device becomes unresponsive, take the following steps:

- 1 Download and install Plantronics Hub for Windows/Mac at poly.com/software
- 2 Connect your device to your computer using a USB cable
- 3 Open Plantronics Hub, go to Help > Support > Firmware Updates & Recovery and enter your Product ID (PID) to complete the recovery

Find your Product ID (PID). Choose:

- Plantronics Hub app's device recovery instructions
- Plantronics Hub app's home screen

Support

NEED MORE HELP?

poly.com/support

Plantronics, Inc.

345 Encinal Street
Santa Cruz, CA 95060
United States

Plantronics B.V.

Scorpius 171
2132 LR Hoofddorp
Netherlands

© 2020 Plantronics, Inc. All rights reserved. Poly, the propeller design, and the Poly logo are trademarks of Plantronics, Inc. Bluetooth is a registered trademark of Bluetooth SIG, Inc. and any use by Plantronics, Inc. is under license. All other trademarks are the property of their respective owners. Manufactured by Plantronics, Inc.

Model ID: SY20/SY20-M USB-A/USB-C (may be followed by /BT600 or /BT600C)

218453-06 10.20