 



F14 cooling fan

User's Manual

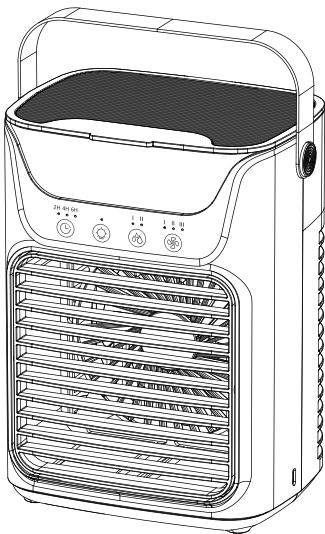


Thanks for purchasing and using our products! Wish you a happy use!
Please read this manual carefully and save it for reference.

 Products:

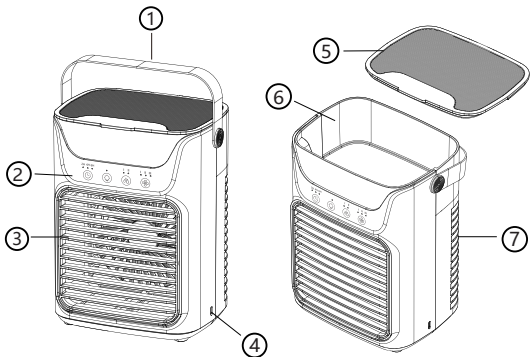

- ① belt handle ② touch zone ③ air outlet ④ Power Input
 ⑤ water tank cover ⑥ water tank ⑦ air inlet

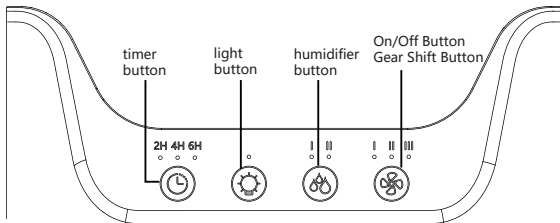


Operating Instructions:

1.Remove the cooling fan from the package.

2.Unscrew the water tank cover, add tap water or mineral water to the water tank (Note: ① Do not add distilled or purified water, otherwise it will cause water mist condensation; ② It is recommended not to exceed the maximum of water level, otherwise it may lead to water overflow.)


3.Take out the Type-C cable, plug one end of the Type-C cable into the fan's power input port, and the other end into the adapter that can output DC 5V/2A.

Note: Be sure to use an adapter with an output voltage of 5V and a current of 2A. Insufficient power will appear the machine can not run normally, the small wind speed and other abnormal phenomena)

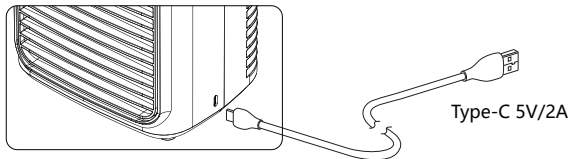


4· Shortly press the  key to start, the first gear wind start tolerantly, the corresponding first gear indicator light up, shortly press again to switch gears: 1 -2 -3 gear, the corresponding gear indicator will show!!!


Corresponding to the first gear indicator lights up, short press again to switch gears: 1 gear - 2 gear - 3 gear, corresponding to the gear When the corresponding gear, the indicator light shows ! !! !!!

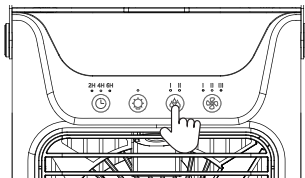

5.Touch the  button to open/close the humidification function, I Lighting indicates 1 gear humidification, II Lighting indicate 2 gear humidification, 40-60ML/H atomization volume.

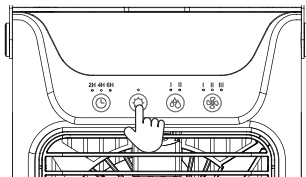

6. Touch the  button on/off color light, color light automatically change color, shortly press to fix color.

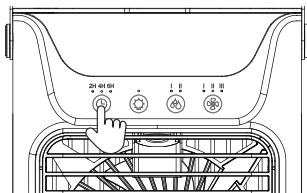

7. Touch the  button to turn on different timing functions, the display can be turned on for 2H, // on for 4H, // on for 6H, the corresponding time display, 2H 4H 6H when the timing time is up, the machine will automatically turn off. Long press to cancel the timing (all corresponding indicators are off).

8. The air discharge direction can be adjusted by adjusting the air discharge handle.

9. After opening the humidification function, when the water level of the water tank is lower than the lowest water level, the machine will automatically turn off the spray function

Note: It is normal to have water droplets on the shell during operation. It will automatically flow into the water drawer, you need to pour out the excess water before use (it is recommended to clean once a day); When cleaning the water tank, please be sure to clean the water in the water tray first to avoid damaging the machine

Instructions for use:

1. Before cleaning, maintaining or moving the product, turn off the product and remove the power plug.
2. Clean the fan only after the fan stops running to avoid injury.
3. Do not immerse the power cord or the host machine in water or rinse it under the faucet. Do not immerse the internal parts of the fan in water.
4. Do not use detergent, wire brush, gasoline, alcohol, vinegar or other volatile corrosive liquid to clean products, so as not to damage the product.
5. Clean the fan surface with a slightly damp cloths.
6. After cleaning, the product must be completely dry before it can be connected to the power supply.
7. If not used for a long time, please store the product back in the box and put it in a dry, cool and safe place.

Problems and solutions:

fault phenomenon	Causes of common problems	Treatment
The whole machine won't start.	Power supply unplugged or poor contact	Make sure the power supply is plugged into an energized socket, see if the product switch light is lit, not light indicates that the product is not energized
	On/Off key contact Bad contact	Ensure that the keys are touched And there should be no water buildup in the button area
	Fuselage damage	Sent to service point for overhaul
The whole machine can't be turned off	Poor contact with on/off button	Make sure the keys are touched and There should be no water buildup in the button area
	Fuselage damage	Sent to service point for overhaul
Noise from the fan or inside the machine	foreign objects entry into the fan	Remove foreign objects or send to servicepoint for repair
Indicator light does not come on	Lights are damaged.	Send to service point for overhaul

Notes:

- Please ensure that the input voltage is consistent before use (DC 5V/2A).
- In order to avoid electric shock, no part should be in contact with water.
- Nothing should block the inlet/outlet.
- Be sure to press the tank cover tightly when in use.
- The water level in the tank shall not exceed the highest water level.
- When there is water in the tank, do not shake the machine to avoid the overflow of water in the tank.
- Do not add oily essential oils to the tank to avoid corrosion of the product.
- Please do not blow directly in a fixed direction for a long time to the elderly, infants or people with mobility difficulties, so as not to cause discomfort
- Please do not put the fan in the bathroom, humid and very high temperature places, so as to avoid damage to the product
- Keep the fan away from soft objects such as curtains and door curtains to avoid getting involved in the fan.
- When the power cord or product is found to be damaged or unsafe, please suspend the use, contact the product maintenance center for inspection and repair, do not repair and check yourself.
- When the fan is not used for a long time, please remove the power plug to avoid shortening the product life in the state of backup for a long time; And cause accident or danger.
- Do not disassemble the product yourself to avoid damage to the product and electric shock.
- Do not put fingers and other body parts or debris into the inlet/outlet to avoid injury and damage to the product.

Product Parameters:

Product Name	F14 cooling fan
Product Model NO.	F14
Rated Voltage	TYP-C 5V/2A
Rated Power	7W
Product Material	ABS+PP
Tank Capacity	700ml
Atomization Volume	about 60mL/H
Product Size	165*122*211mm
Packing List	Cooling Fan *1, Type C Cable *1, Manual *1

尺寸：90X120mm

装订方式：风琴折

材质：105g铜版纸