



# INSTRUCTION MANUAL

 
## How To Start Your Watch

To start your watch remove the plastic guard from under the crown, then press the crown in against the case. The second hand will begin advancing in ones econd intervals.


Some deep-depth water-resistant watches require the setting crown to be screwed in to secure water-resistance. If your watch case has a protrusion with screw threads, the crown must be screwed in after setting the watch.

To screw in, push the crown firmly against the threaded protrusion and hold in while turning the crown clockwise. Continue to screw in the crown until it is tight. You will need to unscrew the crown (counter-clockwise) before pulling it out the next time you want to set your watch.

## Basic Display Type

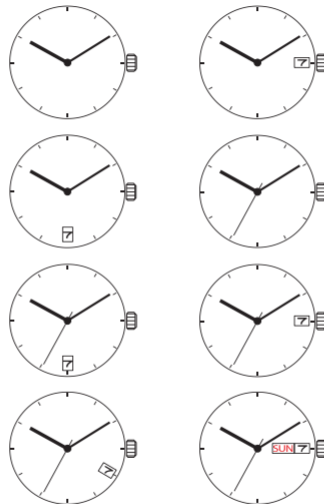


## Chrono Display Type

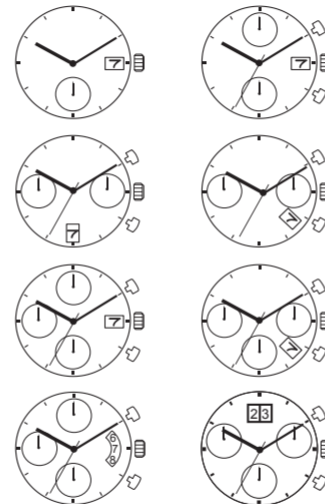 

## How To Set Chrono Type Watch
 
### 1.DISPLAY

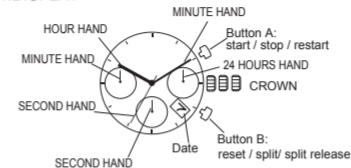

### 2. TIME/CALENDAR SETTING



**CROWN**  
Pull out to first click and turn clockwise until the previous day's date appears.  
▼  
Pull out to second click when Second hand is at the 12 o'clock position.  
▼  
Turn clockwise until the desired date appears.  
▼  
Set Hour and Minute hands.  
▼  
Push back in to normal position in accordance with a time signal.

### 3. ADJUSTING THE HAND POSITION

- Before setting the time, be sure to check that the WATCH small hands are in "0" position when the watch is reset. (For resetting the chronograph watch)
- If any of the WATCH hands does not return to "0" position, follow the procedure below.

## Water Resistance

If your watch is water-resistant, meter marking is indicated.

Water Resistant Depth	Atmosphere
30m/98ft	3ATM

\*pounds per square inch absolute  
**WARNING: TO MAINTAIN WATER-RESISTANCE, DO NOT PRESS ANY BUTTONS OR PULL OUT THE CROWN UNDER WATER UNLESS YOUR WATCH IS INDICATED AS 30 METER WATER-RESISTANT.**

Water resistant is common mark stamped on the back of watch.3ATM water resistance means 30 Meters water resistance.However,it does not mean the watch was designed for repeated long-term use in such watcher depths. Please note that 3ATM water resistance can be only for daily life used,such as splash and rain,but not sultable for shower,swimming,snorkeling ,water related work and fishing.

1. Watch is water-resistant only as long as crystal, crown and case remain intact.
2. Watch is not a diver watch and should not be used for diving.
3. Rinse watch with fresh water after exposure to salt water.

- There are several precautions to consider as well:
  - Do not put a water resistant watch in water while the crown is pulled out.
  - Do not tum or pull out the crown when the watch is wet.
  - Even if a watch is resistant, avoid placing it directly under running water from a faucet.The water pressure from a faucet is sufficient to result in moisture penetration inside the watch.
  - The water resistance of a watch is not permanently guaranteed. It is affected by the ageing of gaskets or delormation of watch part due to an accidental shock.We recommend that you have the water resistance of the watch checked regularly to ensure it's functionality.
  - To preserve it's water resistance as long as possible, wipe off moisture,sweat or dirt with a soft,dry cloth after removing it from the wrist.

## Battery Change

The miniature battery which powers your watch should last approximately 2 years. However, because the battery is inserted at the factory to check the function and performance of the watch, its actual life once in your possession may be less than the specified period. When the battery expires, be sure to replace it as soon as possible to prevent any malfunction. For battery replacement, we recommend that you contact us and request change battery.

• If the watch is used for more than 60 minutes a day, the battery life may be less than 2 years.

### **⚠ WARNING**

- Do not remove the battery from the watch.
- If it is necessary to take out the battery, keep it out of the reach of children. If a child swallows it, consult a doctor immediately.

### **⚠ CAUTION**

- Never short-circuit, heat or otherwise tamper with the battery, and never expose it to fire. The battery may burst, become very hot or catch fire.
- The battery is not rechargeable. Never attempt to recharge it, as this may cause battery leakage or damage to the battery.

## Advice For Use

- Do not try to open the watchcase or dismantle it.
- Please avoid violent collisions in daily life and take off the watch while doing vigorous exercise, which could create a shock to inside movement and cause the watch to stop working properly.
- Don't adjust the calendar between 9:00pm-3:00am when the spare parts of the watch would turn along with the calendar. Too quick adjustment may damage the wheel of watch and reduce the service life of the watch.
- For watch with rotating crown when adjusting time please anticlockwise rotate the crown before pulling it, do not pull it directly when finish directly when finish adjusting please push it back it back clockwise so that it can well prevent the watch from entering the watch.
- For watch with calendar when adjusting please set the date one in advance first after that adjust to the date you want by turning the hour hand it can avoid mixing up day and night if not adjust the calendar directly.
- Quartz watches are powered by battery inside which have to be replaced in a period of time inevitably. Many quartz watches have simple battery inductors include the sweeping second hand skipping seconds at a time moving back and forth in the same spot or being completely stopped altogether. When your watch battery does need to be replaced please have

it replaced at a repair or service center authorized by West Watches.

- Watch bands may require more attention since they directly touch the skin and could easily become soiled from perspiration and dust they should regularly. For metal hand, please use a soft toothbrush to remove the stains for heavy stains it is highly recommended to apply a mild soap or detergent mixed with water to clean them. For leather strap apply some leather oil on surface is a good way to protect. It is best avoid wearing a leather strap watch while in the shower, swimming and performing water related everyday activities if the strap gets wet gently rubbing it with a small dry cloth immediately. Also place your leather strap watch in a well ventilated room to dry the strap and do not collect with sunlight to avoid fading and discoloration directly.
- Please do not make the watch too tight for your wrist. It is more appropriate if leaves around one finger's space between the wrist and the watch.
- The interference of strong electrostatic charge may lead to the failure of the display screen to act normally and even damage the accessories inside the watch.
- If there is moisture appear inside the watch, please have it checked by the authorized distributors or West Watches agents immediately.
- The plated layer of the watch may fade because of strong collision, friction etc.
- Avoid exposing the watch to gasoline, cleaning solvents, adhesive agents, paint or aerosol sprays which may

damage the sealing ring the watch case and the surface of the watch if the watch has contacted the above articles please clean it with water immediately.

- Use a soft and dry cloth to wipe off moisture, sweat and dirt has accumulated on the case back and watch band to avoid and maintain the durability of the case back and band.
- The waterproof rubber sealing ring is designed to prevent the water and dust from entering the watch it would be better or replace it every two three years.
- Interference of electrostatic charge may lead to winding patterns on occasion the display screen which won't influence the functions of the watch.

## How To Adjust Mesh Band

Step 1. Open buckle



Step 2



Step 3. Pull up the buckle.



Step 4. Move to position



Step 5. Put at the groove



Step 6. pull back enclosed



## How To Adjust Chain Band



Step 1. Use some thing hold the band, push the adjust needle into chain hole, pull out the spring bar.

Step 2. Remove the chain, and joint the band together with the spring bar.

## WARRANTY

Place of purchase/official stamp

Placeholder for the official stamp of the place of purchase.

Name:

Placeholder for the name of the purchaser.

Model No.

Placeholder for the model number of the watch.

Date:

Placeholder for the date of purchase.

Country:

Placeholder for the country of purchase.

For information on service: Please contact the retailer where the watch was purchased for information regarding repairs and warranty. You can also contact our Customer Service Department by using the contact form on our website [www.westwatches.nl](http://www.westwatches.nl)