

# Handleiding

# Instruction Manual



## Dear Customer,

Thank you for choosing SCOOTER – you can rest assured that you have acquired a high quality product. We also offer you an excellent after-sales service. Before you convince yourself of the unique driving experience offered by your new scooter product, please, read the attached instructions carefully. They include important information on security, performance and maintenance. Please, keep these instructions in a safe place, so that you can refer to them in the future. Have fun with your New scooter product.

## SAFETY INSTRUCTIONS

1. Before you allow your child to use the SCOOTER, ensure that the steering rod is fully engaged and that all the screws are tight. Also ensure that the wheels have been correctly secured and that they show no signs of wear. Adult assembly is required or proper assembly must be checked by an adult before use.
2. Warning: Protective equipment should be worn. Ensure that your child always wears a helmet, and wrist, elbow and knee pads, as well as shoes with rubber soles.
3. Ensure that your child does not ride down any steep hills. The brake is not designed to decelerate from high downhill speeds.
4. The brake pad becomes hot when it is used. Make especially sure that your child does not keep the brake on for a long period of time. Explain to your child that direct skin contact may cause burns.
5. Do not allow your child to travel at speeds exceeding 5 km/h.
6. Ensure that your child does not ride on roads, paths or other places with motor vehicle traffic.
7. Always observe traffic regulations and laws. The SCOOTER may not be used on public roads.
8. Only one child may ride on the SCOOTER at any one time.
9. Never allow your child to ride Maxi-/Mini SCOOTER at dusk or at night.
10. The Maxi-/Mini SCOOTER must not be used on wet, oily, sandy, dirty, icy, rough or uneven surfaces.
11. Never use Maxi-/Mini SCOOTER in wet conditions.
12. Your child should practice first to gain control of the vehicle. Ensure that your child does not attempt any experiments or risky manoeuvres with it. Riding style should always be adjusted to the personal skill of the rider.
13. Do not make any modifications to Maxi-/Mini SCOOTER. If you do, the guarantee is expired.
14. Load capacity is up to 40 kg body weight for the Mini, respectively up to 60 kg body weight for the Maxi.
15. Suitable for children up to approx. 110 cm in height for the Mini and 150 cm in height for the Maxi.
16. Important: Undoing the axle screws several times will reduce the effect of the screw securing product. This means that the screws may come loose by themselves. Therefore you should always use a conventional screw securing product.

## Warnings

1. Only use the Maxi-/Mini SCOOTER with the steering rod fully engaged.
2. Like cycling, skateboarding and inline skating, riding the Maxi-/Mini SCOOTER is not totally safe even in perfect conditions and can lead to accidents.
3. Always make sure that your child wears a safety-approved helmet to ride the Maxi-/Mini SCOOTER. Falling off the Mini-respectively the Maxi scooter without such safety precautions may cause serious or even fatal accidents.  
Warning: Protective equipment should be worn.
4. In wet condition there is a major risk of slipping. Do not use the Maxi-/Mini SCOOTER in these circumstances.
5. Riding at dusk, at night or in poor visibility is very dangerous and increases the risk of accidents and injury.
6. Ensure that your child always wears safety equipment. In addition to the recommended safety equipment, your child could wear bright, reflective clothing.
7. Caution – the brake pad becomes hot when used.
8. Warning: Not suitable for children under 36 months due to small parts.
9. Seat/O-bar/T-bar version not for a baby weight of more than 20/20/40kg
10. The toy shall be used with caution, to avoid falls or collisions causing injury to the user and third parties.
11. Some metal parts may corrode after a certain time, especially when used near the sea or left outdoors to often in wet conditions.

# Assembly



## Mounting the handlebar mini scooter/ maxi scooter

### Possibility1:

Press push button "F" and insert the handlebar with the flat side backwards in hole "H" and make sure that "F" is fixed correctly with "I".




### Possibility2:

hold the handlebar like shown on picture 4. Turn the handlebar like shown on picture 4 (round arrow) and make sure that "F" is fixed with "I" correctly.



## Advice:

The quick clamp can be locked after the lever is closed with the allen key on screw "K". This is a recommendation for smaller children using the maxi scooter (child proof!!!).

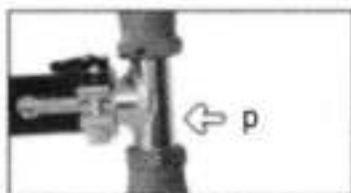

## SERVICING

Check at regular intervals that all screws are tight and the wheels are in good condition, if they are worn out, please replace them. Clean the Mini scooter/ Maxi scooter with a damp, soft cloth every time when you have finished using it.

## WARRANTY RESTRICTION

The Mini scooter/ Maxi scooter is supplied with a warranty of 6 months for material and workmanship faults. During this period of warranty it is up to YOUR DEALER to decide whether products covered by the warranty should be repaired or replaced. The warranty does not cover damage caused by improper usage such as incorrect installations on the model, careless use such as running against curbs, etc. or normal wear and tear.

## WARRANTY

We can only accept warranty claims if you can produce your receipt. Keep your receipt in a safe place. If you make a claim under the warranty, your dealer will decide whether the Mini scooter/ Maxi scooter will be repaired or replaced with a new model.