



● **Quick Instructions for Use**

1. Connect the power/switch cable with the USB port adaptor, and plug adaptor, and plug-in the adaptor into the power socket.
 2. Remove the paper CD disc from the new product before using it.
 3. Put the right format of CD disc into the player and make the power on by pulling the power cable of CD player. it will play music or other listening materials after 5-12s rotating (reading), press <Prev> or <Next> button on the player/remote to change songs, or you can press number buttons to select songs.
 4. Pull the power/switch cable again to turn off. Under this operation, the music will stay in the playing current position.
-

CE FC RoHS

