
USER MANUAL

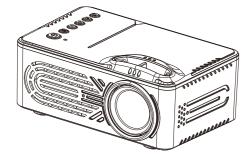



Due to continuous improvement, may there are few difference between actual product parameter with manual, which is just for reference.

Important Safeguards

- 1. Please read the manual carefully before operating projector. To ensure stable power supply, please use standard power cord
- 2. Please use the power supply and cable indicated on the rating label. The projector should be kept away from cloths, sofas and anything that may block the ventilation scoop. Please keep the unit away from flammable and explosive materials.
- 3. Please do not disassemble the unit yourself as this will invalidate the warranty service. To protect your eyes, do not stare directly at the lens when the projector is on. The projector must be kept away from water and any other liquids.
- 4. To prevent electric shock, please keep the projector out of the rain and away from moisture. It is recommended to switch off the projector after it has run for 6 hours non-stop. Please use the original foam and other cushioning material when transporting the projector.
- 5. If the projector does not work, please contact the authorized service agent.


Projector overview

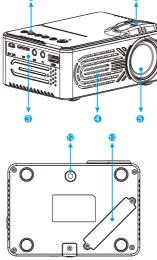

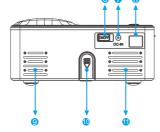

- 1. Panel key and indicator light
- 2. Focus ring
- Input terminal
- 4. Cool winds input ventilation
- Lens
- 6. Battery switch(optional function)
- 7. Adapter connection port
- 8. IR for remote control
- 9. Speaker 10. Dustproof filter
- 11. Hot winds output ventilation
- 12. Stand hole
- 13. Battery cover

Interface and panel key instruction

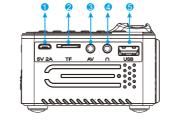

Interface instruction:

- 1. 5V 2A port: connect with power bank or charger.
- TF: TF card reader(Max is 64GB).
- 3. AV: connect with DVD player etc through AV adapter cable.
- 4. Earphone: standard 3.5mm.
- 5. USB: read U-disk, USB1.1 & USB2.0.
 - "previous/next; up/down" in the menu-
 - 10. Mode: press it in short seconds to choose sources of Music/Movie/Photo/Txt; press it in long seconds to change the USB / SD card input.
 - . Return: back operation or exit the process.

Indicator light: It is finished the charging or

it flashes red; working when it keeps green

Switch off it when press key on the working.

8. OK: Press"OK"button to confirm/enter/play.


9. Left/right: press them to choose the

standby status when it keeps red; charging when

. Power: Start it when press key on the standby;

Panel key instruction:

Remote control

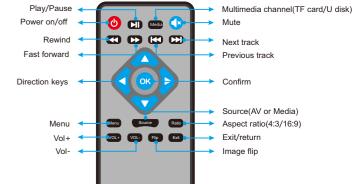



Do not mix old and new batteries in the remote control: If the remote control will not be used for a long time we strongly suggest to remove the batteries in order to avoid battery leakage; We have to take aim at the IR receiver when using the remote control.

Operation before playing

- Selection of Power supply mode
 Battery inside (the optional function)
- We push battery switch on the left (Picture 1), the product will be turned into standby mode.
- DC adapter
 It is better to connect DC adapter with DC-IN port in projector at first,
- plug into electric socket, then product will be turned into standby mode.

 3) 5V-2A power bank or charger
- It supports to connect with the mobile power charger or power bank which has 5V-2A output.(Picture 2)
- 2. Power supply mode
- 1) Automatic recognition of power supply:

 When projector connect with 5V and 12V mode at the same time, it will select 12V automatically. When connect with 5V and battery mode it will select 5V automatically.
- The projector battery can be charged with an external 5V/12V input. When indicator light flash the red color, machine is in the charging; keep the red color, the battery is full.
- keep the red color, the battery is full.

 3) Please cut down the power when you do not use the projector.

 Otherwise, the battery will be run down automatically.
- 4) If the battery power does not work, it means empty, need to
- charge it first.
- 5) The brightness of machine will be lower automatic when we select the battery or 5V power mode
- 3. Power on/off
- Power on/off
 Press the power button over 3s on the projector or remote control ower key, the projector will be
 turned on/off the projector.

screen is clearly. (picture 3)

How to use the focus
 Put the projector lens and the projection screen or wall surface vertically, adjust the focus until the

Playing and setting

1. The projector will be played automatically when you insert the U disk or TF card. If you want to check the picture, just press the "return" to main interface, there are music, movie picture, txt or AV input to choose. The projector will be played from the point which stop on the previous playing.



2. Settina Menu

DC-IN ____

Picture 1

Picture 2

We can set the menu through the remote control, also can be reset to factory defaults.

Language: Chinese/English/Spanish/German etc Timing shutdown:Off/15/30/60/120 minuts Bright:30-100
Contrast:30-100
Saturation:30-100
Flip:4 kinds of modes



3.Press the menu key on the remote when play the video, it will show the setting menu.



Multimedia

	Photo	JPG BMP PNG
	Music	MP3 AAC
	Movie	MKV(H264\MPEG4\MPEG2)
Multi- media		AVI(H264\MPEG\H263\MJPEG)
		MOV/MP4(H264\MPEG4\MPEG2\MPEG1\H263\MJPEG)
		TS(H264\MPEG2)
		ASF(H264\MPEG4\MPEG2\MPEG1\H263\MJPEG)
		FLV(H264\H263)
		PMP(H264\MPEG4G)
		MPG/VOB(MPEG2\MPEG1)
	Text	TXT
_		



.. ..

1: Due to copyright limit, the Dolby audio can not be played.

BITRATE < 30MBPS to enjoy a good viewing experience.

2: It will be incorrect working when play some full HD video whose FRAMERATE>30FPS or BITRATE>30MBPS, we suggest to play video whose FRAMERATE<30FPS and

Specification

Imaging technology	TFT LCD	Color	16.7M	
Consumption	15W(max)	Contrast ratio	1,000:1	
Native resolution	320×240	Max resolution	1,920×1,080	
Lamp type	LED	Life hours	20,000 hours	
Input voltage	12V==1.5A	Focus	Manual	
Lens	Glasses	Projection size	25-80 inch	
Distance	0.9-2.6 m	Net weight	0.27kg	
Aspect ratio	16:9/4:3	Speaker	8Ω 1W	
Machine size	123 × 86 × 56 mm			
Input	AV, USB, TF card, 5V == 2A power bank			
Output	Earphone			
System	Multimedia			

Accessories List

AV signal cable 1pc
Remote control 1pc
Power adapter 1pc
User Manual 1pc