






How to Use the LCD Drawing Tablet?


1. Unlock to enable the erasing function.
Or lock to disable the erasing function if you want to save the drawings.

 **Unlock**

 **Lock**

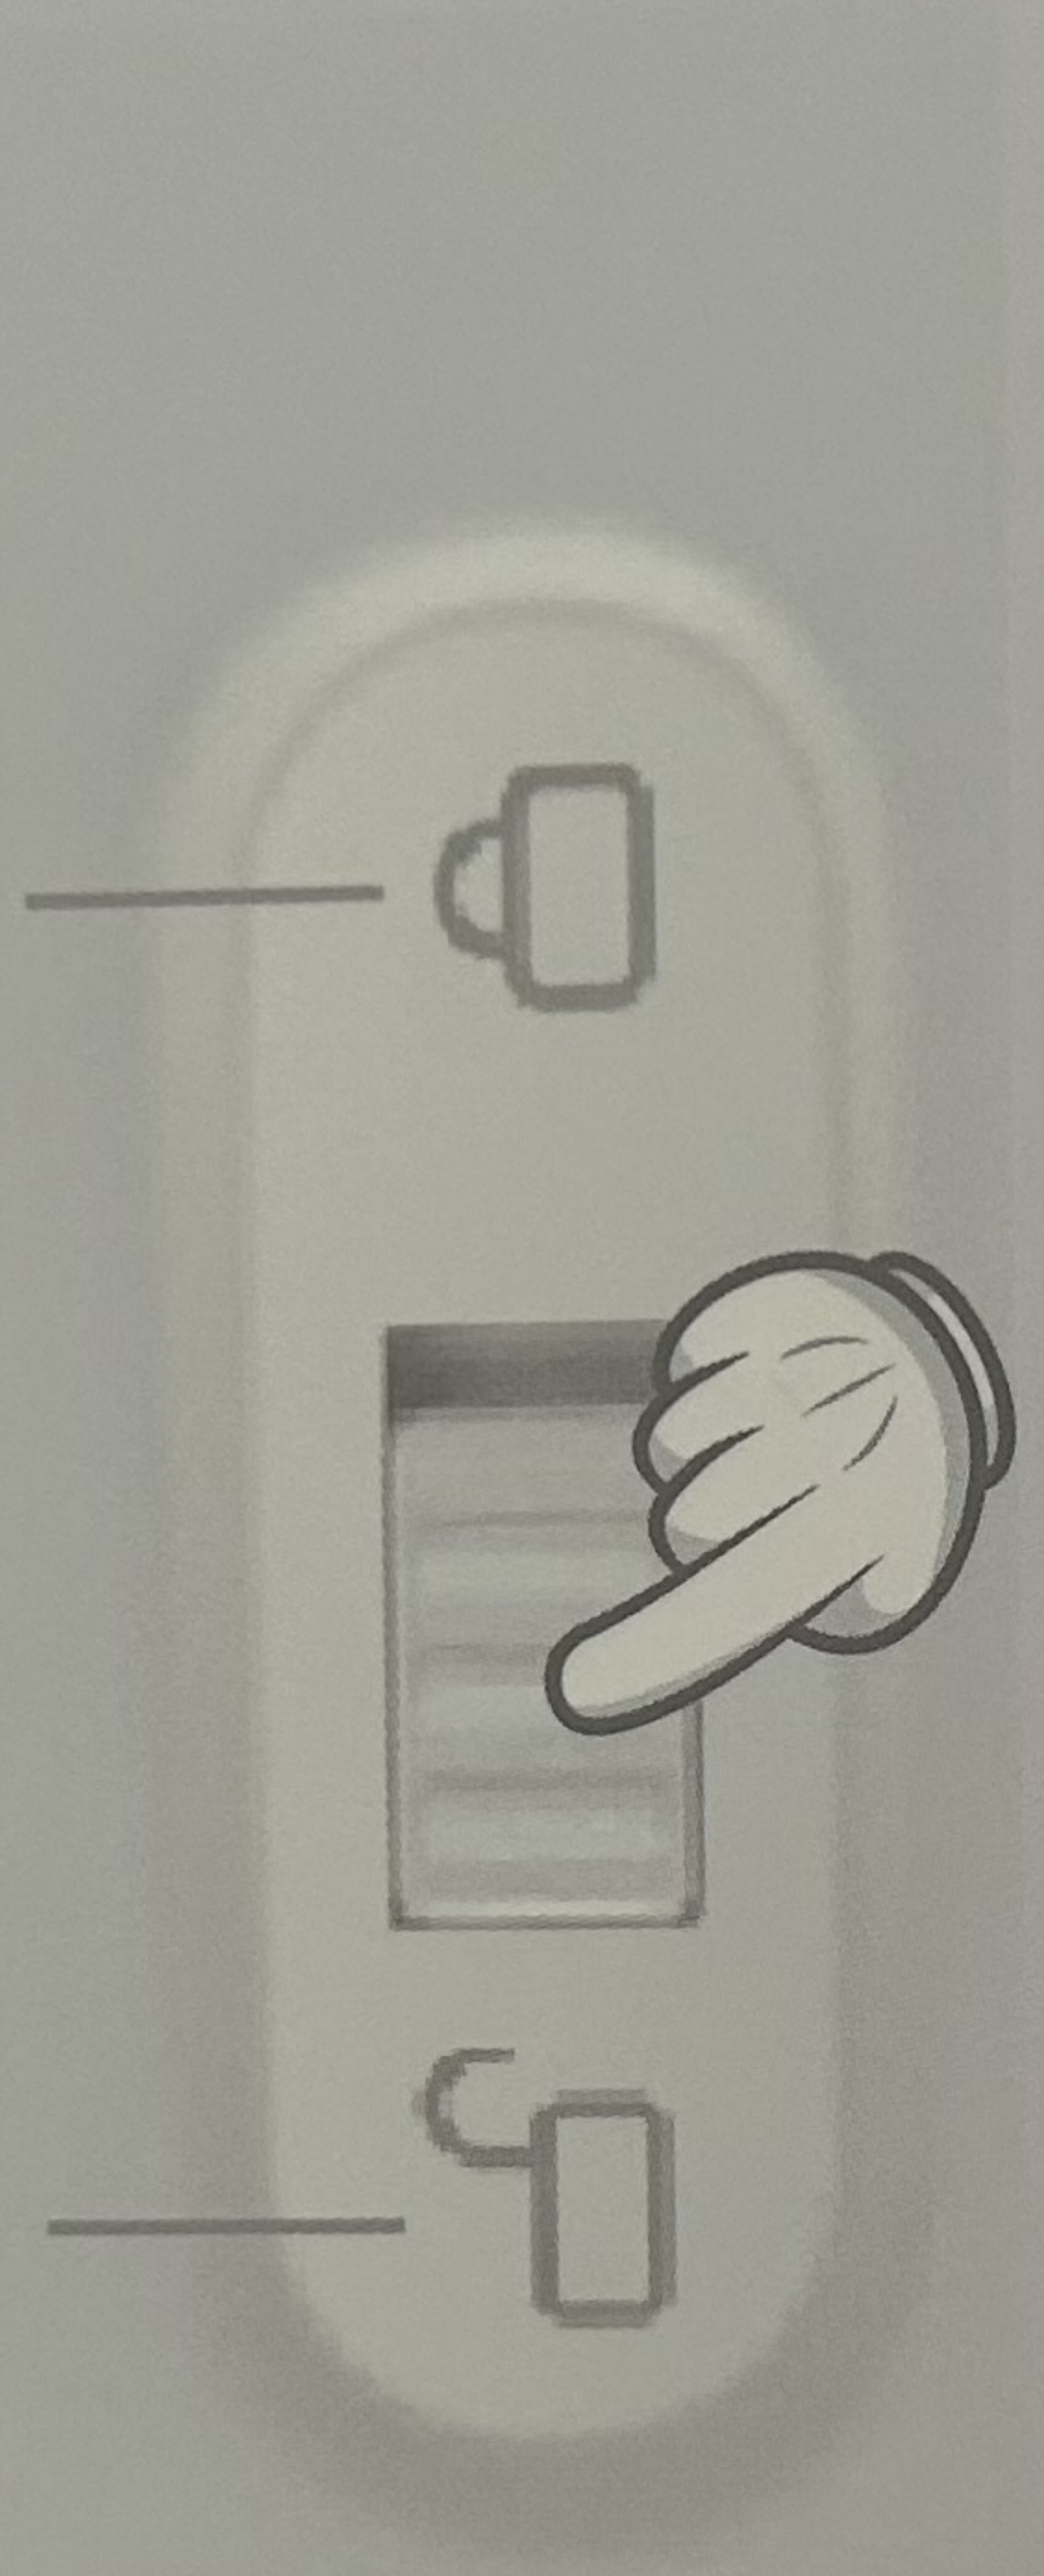

2. Take out the stylus pen and draw on the screen.
3. Press the erase button to clear the drawings.
The location of the erase button varies for different patterns.
It can be a press button, or on the nose, eye, or face.

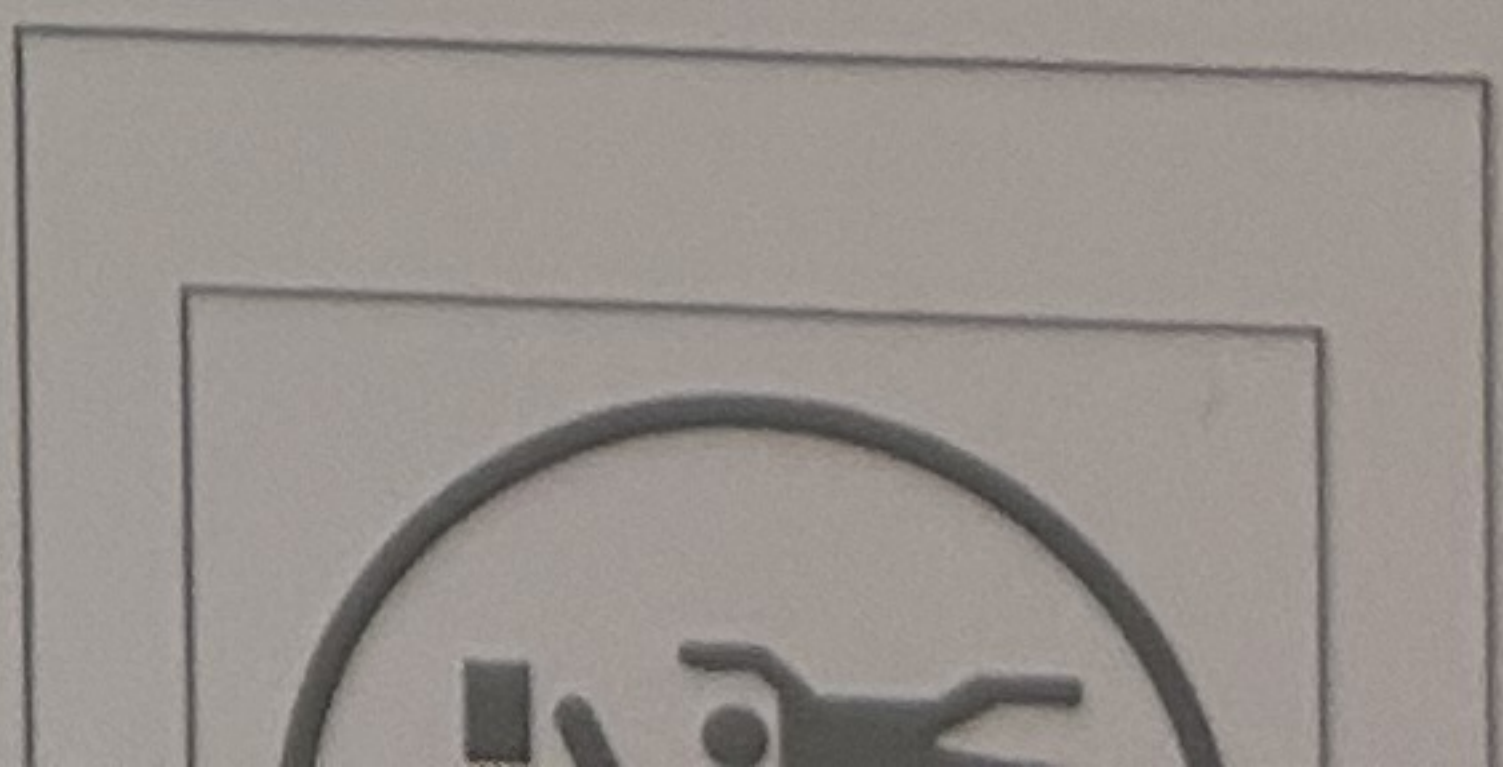

⚠ WARNING

CE FCC



Made in China