


|       |        |         |       |
|-------|--------|---------|-------|
| 1. x1 | 2. x1  | 3. x1   | 4. x4 |
|       |        |         |       |
| 5. x1 | 8. x1  | 10. x14 |       |
|       |        |         |       |
| 6. x1 | 9. x1  | 11. x4  |       |
|       |        |         |       |
| 7. x2 | 12. x2 | 13. x1  |       |
|       |        |         |       |

Step1

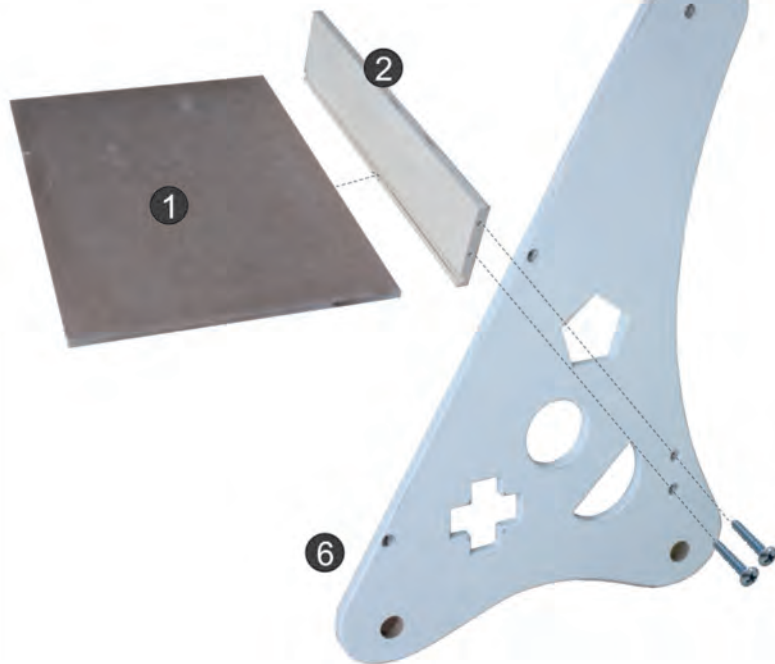

Step2



**WARNING:**


ADULT ASSEMBLY REQUIRED.  
 Product includes small parts with potentially hazardous sharp points and sharp edges in the unassembled state.  
 Keep unassembled parts away from children.



Please retain this information for future reference

Musical Activity Walker


Step3

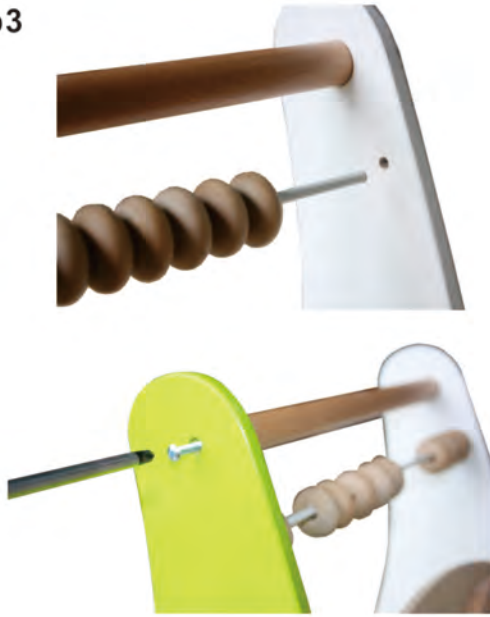

Step4



Step5

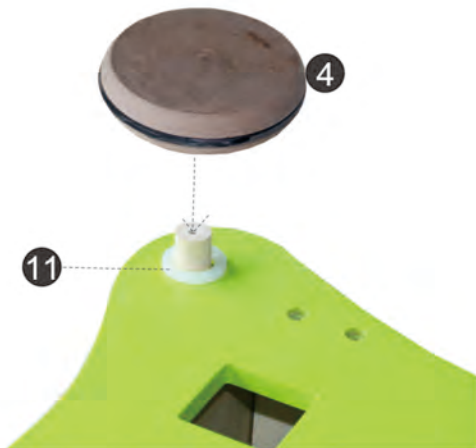

Step6



Step7



Step8

