

HAIR STYLING COMB

USER'S MANUAL



Model No : WT-115

IMPORTANT SAFEGUARDS

When Using Electrical Appliances, Especially When Children Are Present, Basic Safety Precautions Should Always Be Followed, Including The Following:

**Read all instructions before using.
Keep away from water.**

DANGER:As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always "unplug it" immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, "unplug it" immediately. Do not reach into the water.

WARNING:to Reduce The Risk Of Burns, Electrocutation, Fire, Or Injury To Persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by us.
4. Never operate this appliance if it has a damaged cord or plug. If it is not working properly, or if it has been dropped, damaged, or dropped into water return the appliance for examination and repair.
5. Keep the cord away from heated surfaces, Do not wrap the cord around the appliance,
6. Never use while sleeping.
7. Do not use an extension cord with this appliance.
8. This comb is hot when in use. Do not let eyes and bare skin touch heated surfaces.
9. Do not place the heated comb directly on any surface while it is hot or plugged in.
10. Before plugging in read the information about dual voltage contained in the instruction section of this manual.

SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE.

Operation Instructions

1. Plug in, the machine is on standby with OFF display.
2. Press the ON/OFF button for 2s to turn on the machine, then LCD monitor shows default temperature setting 180°C (355°F).
3. Press the ON/OFF button shortly to change the temperature settings: 190°C (375°F) / 200°C (390°F) / 210°C (410°F) / 120°C (250°F) / 130°C (265°F) / 140°C (285°F) / 150°C (300°F) / 160°C (320°F) / 170°C (340°F) / 180°C (355°F)
4. The LCD monitor will show changing numbers after temperature setting.
5. If the button 4S is not operated, it will be automatically locked and the button will fail. At this time, when the operation key is, the word "LOC" will be displayed instantly.
6. Press On/Off button twice within 1 second to unlock the device.
7. The machine is with 30min auto shutoff function.

USER-MAINTENANCE INSTRUCTIONS

This appliance does not require special maintenance or lubrication. If comb does not get hot, return for servicing.

Caution: Extreme care should be used when using this appliance on damaged, relaxed or color treated hair.

TO USE YOUR STYLING COMB

1. Make sure your hair is semi dry before you use this comb.
2. Part hair into sections during use.
3. Grap a section of hair and hold away from the scalp. Insert the comb into the hair section close to the scalp. It can create both straighten and curly hair styles.
4. Slowly turn the comb away from you and move it through the entire hair strand until the hair ends pass through the comb.
5. Repeat procedures throughout all sections of hair until entire head is complete.
6. Press the button to turn off the machine and allow it cool.
7. Rest the comb on flat surface, to prevent from dropping.



TO CLEAN

Unplug comb and allow to cool completely. Wipe the comb with a soft, slightly damp cloth.

TO STORE

Untwist cord before use. After use, re-wrap cord and store in a safe place, do not wrap cord tightly around appliance. Do not hang the unit by the power cord.

Speification

Item No.: WT-115
Rated Voltage: AC 100-240V 50/60Hz
Rated Power: 30W
Auto shutoff: 30min
Temperature setting: 120°C~210°C (250°F~410°F)