



MaxxHome FT-75 Tower Fan- Torenventilator


20769



OPERATING INSTRUCTIONS

ON/OFF speed selection with oscillation

- 1) Select the desired speed level by turning the speed control switch (right rotary switch) to 1=low speed, 2=medium speed or 3= high speed.
- 2) To turn off the fan turn the speed control switch to " 0 " position, the fan will be turned off.

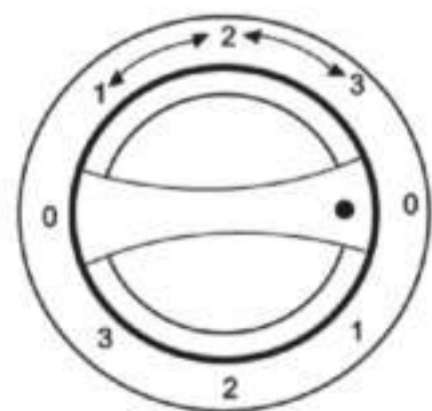

GUIDE TO MAINTENANCE

- Use in a dry place free of explosive humidity and water.
- Unplug fan before cleaning and disassembly. Wipe away dirt with a clean cloth. Plastic parts should be cleaned with mild soap and a damp cloth. Remove soap film thoroughly with a clean cloth.
- **NOTE: Do not immerse in water. Do not allow water or any other liquid to get into unit.**
- Before putting the fan in storage clean thoroughly cover with plastic bag and store in a dry place

DISPOSAL

This marking indicates that this product should not be disposed with other household wastes throughout the EU.



To prevent possible harm to the environment or human health from uncontrolled waste disposal recycle it responsibly to promote the sustainable reuse of material resources

WARRANTY CONDITIONS

Thank you for purchasing this product. Lauson guarantees the proper functioning of its products for a period of 2 YEARS from the date of purchase, being responsible for any lack of conformity that manifests within this period, including the repair of the defects or the replacement of the product within the Union European

SAFEGUARDS

WARNING

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and personal injury, these basic safety precautions should always be followed:

1. The fan must be connected to a 220-240V AC power supply.
2. All electrical work must only be undertaken after disconnection of the power by removing fuses or turning off the circuit breaker, to ensure all pole isolation of the electrical supply.
3. Never put your finger or other something into the cover to avoid any hurts.
4. Do not use outdoors. Installing the fan in a position where it could be exposed to water or moisture is dangerous.
5. Do not connect the fan motor to a dimmer switch. This is may give an unsatisfactory performance (motor hum) and cause damage to the motor.
6. Children of less than 3 years should be kept away unless continuously supervised. Children ages from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance

or perform user maintenance.

7. This appliance can be used by children aged from 8 years and above the persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been give supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
8. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
9. Young children should be supervised to ensure that they do not play with the appliance.
10. It is not recommended that fans and gas appliances to be operated in the same room at the same time.
11. Do not insert anything into the fan blades whilst they are spinning. This will damage the blades and upset the balance of the fan causing the unit to wobble.
12. Danger: You should not repair the appliance by yourself. It must be done just by qualified specialists. Only original spare parts may be used for repair.
13. To unplug before to touch the socket.
14. Wipe with a dry cloth moistened with soap and water. Dry thoroughly. Unplug the power before cleaning. Do not allow water inside.
15. Check the correct operation at all times. Do not leave the fan running alone in a room with people with reduced mobility, mental disabilities, children or animals.
16. Place 150 cm as minimum away from the wall.
17. Do not face furniture curtains personal or animals. They could sour and bodily damages.



The biggest online selection of tools, home & garden.

ONS MAXXTOOLS TEAM HELPT JE MET:

- Vragen over je bestelling
- Klachten
- Onderdelen en handleidingen

Heb je vragen of klachten contacteer ons en we helpen je graag verder.

NOTRE EQUIPE MAXXTOOLS VOUS AIDERA VOLONTIÈRE AUX CAS SUIVANTS:

- Questions sur votre commande
- Réclamations
- Pièces et manuels

Si vous avez des questions ou des plaintes, s'il vous plaît contactez-nous et nous serons heureux de vous aider.

UNSER MAXXTOOLS TEAM HILFT IHNEN GERNE BEI:

- Fragen zu Ihrer Bestellung
- Reklamationen
- Teile und Handbücher

Wenn Sie Fragen oder Beschwerden haben, wenden Sie sich bitte an uns. Wir helfen Ihnen gerne weiter.

OUR MAXXTOOLS SERVICE TEAM HELPS YOU WITH:

- Questions about your order
- Complaints
- Parts and manuals

If you have any questions or complaints, please contact us and we will be happy to help you.



TELEFOONSERVICE:

+32 (0) 11 191391
Maandag tot zaterdag - 9u.-18u.
De telefoon kosten kunnen variëren afhankelijk van uw mobiel abonnement.

ASSISTANCE TÉLÉPHONIQUE:

+32 (0) 11 191391
Du lundi au samedi de 9h à 18h
Les frais de téléphone peuvent varier en fonction de votre abonnement mobile.

TELEFON-SERVICE:

+32 (0) 11 191391
Montag bis Samstag von 9 bis 18 Uhr
Die Telefonkosten können je nach Mobilfunkabonnement variieren.

TELEPHONE SUPPORT:

+32 (0) 11 191391
Monday to Saturday - 9 am - 6 pm
Phone charges may vary depending on your mobile subscription.

Maxxtools

Grotstraat 36 - 3990 Peer
info@maxxtools.be
www.maxxtools.be