

Instant™

VORTEX™ MINI

2 QUART AIR FRYER



User manual

- Important safeguards
- Product, parts and accessories
- Get started
- Control panel
- Cooking
- Care, cleaning and storage
- Troubleshooting
- Warranty
- Contact

Download the Instant Pot app with
1000+ recipes at instantappliances.co.uk/app.

IMPORTANT SAFEGUARDS

(Yes, we have to)

At Instant Brands™ your safety always comes first. The Instant™ Vortex™ family was designed with your safety in mind, and we mean business. Visit instantpot.co.uk to learn about this appliance's safety mechanisms.

When using electrical appliances, basic safety precautions should always be followed:

- 01** READ ALL INSTRUCTIONS, SAFEGUARDS, AND WARNINGS BEFORE OPERATING THE APPLIANCE. FAILURE TO FOLLOW THESE SAFEGUARDS AND INSTRUCTIONS MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.
- 02** The appliance's outer surfaces may become hot during use. DO NOT touch hot surfaces. Only use the air fryer basket handle to lift and carry the air fryer basket. Wear proper hand protection when handling hot components. Extreme caution must be used when moving the appliance. Allow the appliance to cool to room temperature before handling or moving.
- 03** **⚠ CAUTION** To protect against the risk of electric shock, DO NOT immerse the power lead, plug or appliance in water or other liquid.
- 04** DO NOT rinse the appliance under tap.
- 05** The cooking chamber contains electrical components. To avoid electric shock, DO NOT put liquid of any kind into the cooking chamber.
- 06** This appliance is NOT to be used by children or by persons with reduced physical, sensory or mental capabilities. Close supervision is necessary when this appliance is used near children and these individuals. Children should not use or play with this appliance.
- 07** Turn off and unplug when not in use, as well as before adding or removing parts or accessories, and before cleaning. To turn off, press **Cancel**. To unplug, take hold of the plug and pull it from the socket. NEVER pull from the power lead.
- 08** Avoid making contact with moving parts.
- 09** Inspect the appliance and power lead regularly. DO NOT operate any appliance with a damaged lead or plug or after the appliance malfunctions, or is dropped or damaged in any manner. For assistance, contact the Customer Care Team at support@instantappliances.co.uk or on +44 (0) 3331 230051.

⚠ WARNING

Read this manual carefully and completely and retain for future reference. Failure to adhere to safety instructions may result in serious injury or damage.

IMPORTANT SAFEGUARDS

- 10 DO NOT use any accessories or attachments not authorised by Instant Brands Inc. The use of attachments not recommended by the manufacturer may cause a risk of injury, fire or electric shock.
- 11 For household countertop use only. Do not use outdoors. Not for commercial use. Not for use in staff kitchen areas in shops, offices and other working environments, in farmhouses, or by clients in hotels, motels and other residential type environments such as bed and breakfasts.
- 12 DO NOT place the appliance on any kind of hob, or in a hot oven; heat from an external source will damage the appliance.
- 13 DO NOT let the power lead come into contact with hot surfaces or open flames, including hobs.
- 14 DO NOT use the appliance for anything other than its intended use.
- 15 Proper maintenance is recommended after each use. Refer to **Care, cleaning and storage**. Allow the appliance to cool to room temperature prior to cleaning or storage.
- 16 **⚠ CAUTION** Spilled food can cause serious burns. A short power-supply lead is provided to reduce the hazards resulting from grabbing, entanglement and tripping. Keep the appliance and lead away from children. NEVER drape the lead over the edge of a table or counter, NEVER use a power outlet below the counter, and NEVER use with an extension lead.
- 17 DO NOT attempt to repair, replace, alter or modify components of the appliance. This may cause electric shock, fire and/or injury, and will void the warranty.
- 18 DO NOT tamper with any of the safety mechanisms.
- 19 DO NOT use the appliance in electrical systems other than 220–240 V ~ 60 Hz. DO NOT use with power converters or adapters.
- 20 DO NOT overfill the appliance or accessories. Overfilling may cause food to come into contact with the heating element, which may result in fire and/or personal injury.
- 21 DO NOT cover the cooling vents while the appliance is in operation. Doing so will prevent even cooking and may cause damage to the appliance.

⚠ WARNING

Read this manual carefully and completely and retain for future reference.
Failure to adhere to safety instructions may result in serious injury or damage.

IMPORTANT SAFEGUARDS

- 22 NEVER pour oil into the cooking chamber. This could result in fire and/or personal injury.
- 23 While cooking, the internal temperature of the appliance reaches several hundred degrees. To avoid personal injury, NEVER place unprotected hands inside the appliance until it has cooled to room temperature.
- 24 When cooking, DO NOT place the appliance against a wall or other appliances. Leave at least 13 cm of free space at the back, sides and above the appliance. DO NOT operate the appliance on or near combustible materials such as tablecloths and curtains. DO NOT place anything on top of the appliance.
- 25 When in operation, hot air is released through the cooling vents. Keep your hands and face at a safe distance from the cooling vents and take extreme caution when removing the accessories from the appliance.
- 26 Should the unit emit black smoke, press Cancel and unplug the appliance immediately. Wait for smoking to stop before removing the air fryer basket, then clean the appliance thoroughly.
- 27 DO NOT leave the appliance unattended while in use.
- 28 NEVER connect this appliance to an external timer switch or separate remote-control system.
- 29 Use extreme caution when removing hot accessories from the cooking chamber or disposing of hot grease.
- 30 Oversized foods and/or metal utensils must not be inserted into the cooking chamber as they may cause a risk of fire and/or personal injury.
- 31 DO NOT store any materials, other than the included accessories, in the cooking chamber when not in use.
- 32 DO NOT place any combustible materials in the cooking chamber, such as paper, cardboard, plastic, polystyrene or wood.
- 33 DO NOT use appliance accessories in any other appliance including microwave ovens, toaster ovens, convection or conventional ovens, ceramic, electric, induction or gas hobs, or outdoor grills.
- 34 **⚠ CAUTION** Use extreme caution when moving an appliance containing hot oil or other hot liquids.

⚠ WARNING

Read this manual carefully and completely and retain for future reference.
Failure to adhere to safety instructions may result in serious injury or damage.

IMPORTANT SAFEGUARDS

SAVE THESE INSTRUCTIONS.

⚠ WARNING

To avoid injury, read and understand the instructions in this user manual before attempting to use this appliance.

⚠ WARNING

Electrical shock hazard. Use an earthed outlet only.

- DO NOT remove earthing.
- DO NOT use an adapter.
- DO NOT use an extension lead.

Failure to follow these instructions may result in electric shock and/or serious injury.

⚠ WARNING







THE FAILURE TO FOLLOW ANY OF THE IMPORTANT SAFEGUARDS AND/OR THE INSTRUCTIONS FOR SAFE USE IS A MISUSE OF YOUR APPLIANCE THAT CAN VOID YOUR WARRANTY AND CREATE THE RISK OF SERIOUS INJURY.

Special lead set instructions

As per safety requirements, a short power supply lead is provided to reduce the hazards resulting from grabbing, entanglement and tripping.

This appliance has an earthed Europlug. To reduce the risk of electric shock, plug the power lead into an earthed and easily accessible electric socket.

Product specifications

| | | | | | |
|---|---|---|---|---|---|
|  |  |  |  |  |  |
| Models: Vortex Mini RE Vortex Mini AQ Vortex Mini BL Vortex Mini WH | 1200- 1400W | 220-240V ~ 50-60 Hz | 2 Litre | 3.3 kg | cm: 28.6D x 22.9W x 29.8H |

Find your model name and serial number

Find both of these on the rating label on the back of the air fryer, near the power lead.

⚠ WARNING

Read this manual carefully and completely and retain for future reference.
Failure to adhere to safety instructions may result in serious injury or damage.




Table of contents

| | |
|--|-----------|
| IMPORTANT SAFEGUARDS | 2 |
| Special lead set instructions | 5 |
| Product specifications | 5 |
| Find your model name and serial number | 5 |
| Table of contents | 6 |
| Product, parts and accessories | 7 |
| Air fryer | 7 |
| Get started | 8 |
| Initial set up | 8 |
| Is something missing or damaged? | 8 |
| Initial test run | 9 |
| Control panel | 10 |
| Settings | 11 |
| Cooking status | 12 |
| Status messages | 12 |
| Cooking | 13 |
| Air Fry, Roast and Bake | 13 |
| Cooking tips | 15 |
| Reheat | 16 |
| Care, cleaning and storage | 17 |
| Troubleshooting | 18 |
| Warranty | 19 |


Product, parts and accessories

Before using your cute new air fryer, make sure that everything is present and accounted for.

   Air fryer

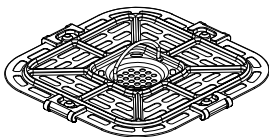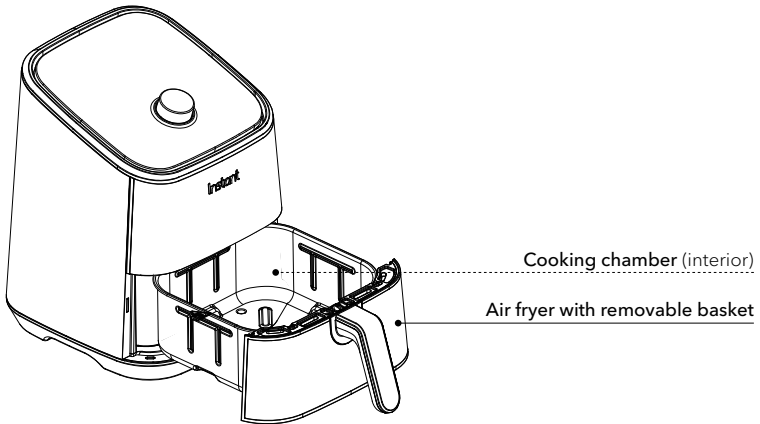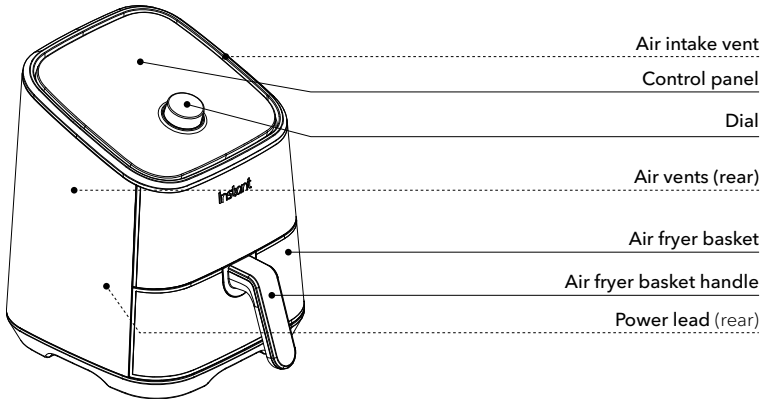

Cooking tray

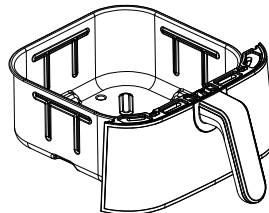 





Air fryer basket

*Illustrations in this document are for reference only and may differ from the actual product.
Always refer to the actual product.*

Get started

Initial set up

 **"Notice the small things. The rewards are inversely proportional." - Liz Vassey**

- 01** Pull that Vortex Mini out of the box!
- 02** Remove the air fryer basket and check the cooking chamber for loose packing material before first use.
 -  Don't remove the silicone supports from the removable cooking tray.
- 03** You may be tempted to put the air fryer on your stovetop – *but don't do it!* Place it on a stable, level surface, *away* from combustible material and external heat sources. Do not place your air fryer on top of another appliance.
 -  Make sure to leave *at least* 13 cm of space above and around all sides of the appliance.
- 04** Follow the **Care, cleaning and storage** instructions to wash your new air fryer before using it.
 -  Don't remove the safety warning stickers or the rating label from the air fryer.

Is something missing or damaged?

Get in touch with a Customer Care Advisor through our chat widget at instantappliances.co.uk/#chat, by email at support@instantappliances.co.uk or by phone on **+44 (0) 3331 230051** and we'll happily make some magic happen for you!

WARNING

| | | |
|--|--|--|
| Read the Important Safeguards before using the appliance. Failure to read and follow those instructions for safe use may result in damage to the appliance, property damage or personal injury. | Do not place the appliance on a hob, on another appliance, or in a hot oven. Heat from an external source will damage the appliance. | To avoid the risk of fire, property damage and/ or personal injury, do not place anything on top of the appliance, and do not block the air vents. |
|--|--|--|

Get started

Initial test run

Do you *have* to do the test run? No – but getting to know the ins and outs of your Vortex Mini prepares you for success in the kitchen! Take a few minutes to get to know how this little guy works.

Stage 1: Setting up the air fryer for cooking

01 Connect the power lead to a 220-240 V power source.

The air fryer is in standby mode and the display shows **OFF**.


02 Remove the air fryer basket from the cooking chamber.

03 Place the cooking tray on the bottom of the air fryer basket (if it is not already installed).

04 Insert the air fryer basket back into the cooking chamber.


05 Touch **Air Fry**.

06 Touch **Time**, then turn the dial to adjust the cooking time to 20 minutes (**00:20**).

 Each Smart Programme automatically saves the adjustments you make to the time and temperature when you touch **Start**.


07 Touch **Start** to begin!

The display shows **On** and the cooking status shows **Preheat**.

 The first few times you use your air fryer, you may notice a strong plastic smell. This is normal, non-toxic, and goes away quickly.

Stage 2: "Cooking" (...but not really, this is just a test!)

01 When the air fryer is hot enough, the display shows **Add Food**.

 For this initial test, do not add food to the air fryer basket.

Carefully remove and re-insert the air fryer basket. The display shows the cooking time and temperature, and the cooking status shows **Cook**.


02 Part way through cooking, the display shows **turn Food**.

Wait 10 seconds for the programme to resume automatically, or, remove and re-insert the air fryer basket to pause and resume the programme manually.

03 When 1 minute remains, the display counts down the remaining cooking time in seconds.

When the Smart Programme is complete, the display shows **End** and the fan blows for a little while to help cool the air fryer.

 
04 Press the dial or remove and re-insert the air fryer basket to return to standby mode and start cooking for real!

 If you forget this last step, the air fryer will beep to remind you about it after 5, 30, and 60 minutes.

CAUTION

The air fryer and air fryer basket will be hot during and after cooking. To avoid the risk of burn injury, **DO NOT** touch hot surfaces. Allow the air fryer to cool to room temperature, then clean the appliance according to **Care, cleaning and storage** instructions.


Control panel

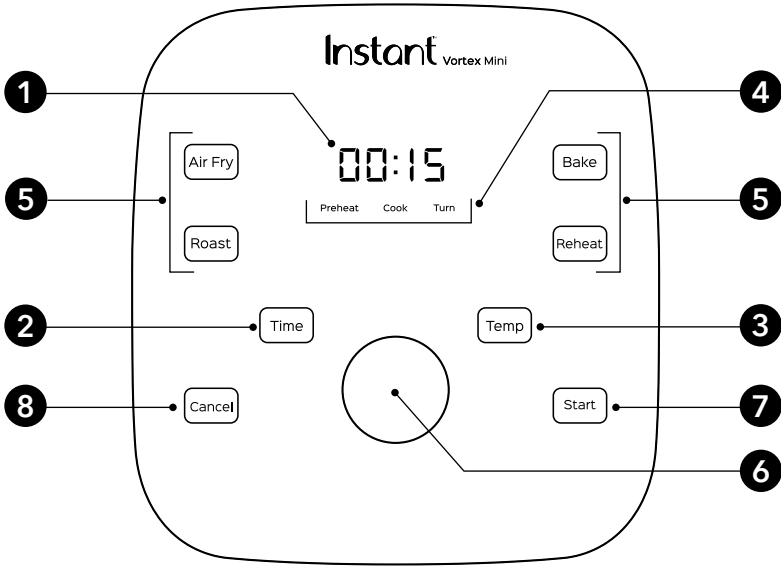

| | | |
|---|---------------------------------|--|
| 1 | Time/temperature display | Shows the cooking time, the set temperature, reminder messages and error messages. |
| 2 | Time | Touch Time if you want to adjust the cooking time. |
| 3 | Temp | Touch Temp if you want to adjust the cooking temperature. |
| 4 | Cooking status | Preheat, Cook and Turn. |
| 5 | Smart programmes | <ul style="list-style-type: none"> • Air Fry • Roast • Bake • Reheat |
| 6 | Dial | Rotate to adjust cooking times and temperatures. Press to wake the display. |
| 7 | Start | Touch Start to begin a selected smart programme. |
| 8 | Cancel | Touch Cancel to stop a smart programme at any time and go back to standby. |

*Illustrations in this document are for reference only and may differ from the actual product.
Always refer to the actual product.*

Settings

| To do this... | Do this! |
|--------------------------------------|---|
| Wake the air fryer. | Touch any button, press the dial, or remove and re-insert the air fryer basket to wake the air fryer. The display shows OFF to let you know that it's in standby mode and ready for action. |
| Turn sounds on and off. | In standby mode, touch and hold both the Time and Temp for 3 seconds. The display shows S On when the sound is on, and SOFF when the sound is off.  Error alerts cannot be silenced. |
| Change temperature scale (°C or °F). | In standby mode, touch and hold the Temp key for 5 seconds to toggle between °C and °F . |
| Save a custom cooking time. | Select a smart programme, then touch Time , and use the dial to adjust the time as you like. Touch Start to save the change to memory. |
| Reset an individual smart programme. | In standby mode, touch and hold the smart programme key you want to reset (for example: Air Fry) for 3 seconds. The cooking time and temperature for that Smart Programme are restored to the factory default settings. |
| Reset all smart programmes. | In standby mode, press and hold the dial for 3 seconds. The cooking times and temperatures for all Smart Programmes are restored to the factory default settings. |

Cooking status

00:15

Preheat

Cook


Turn

The air fryer is heating up to the perfect temperature to cook your meal.




 Not applicable to Reheat.

Cooking is in progress.

Food is ready to be flipped or tossed, as required by your recipe.

 Not applicable to Bake or Reheat.

Status messages

| | |
|-----------|---|
| OFF | The air fryer is in standby mode. |
| On | A smart programme is in the Preheat stage.  Not applicable to Reheat. |
| Add Food | This message appears to let you know that the air fryer has reached the perfect cooking temperature and food can be added to the air fryer basket (if it hasn't been already).  Not applicable to Reheat. |
| OPEN | May indicate that the air fryer basket has been removed or is not fully inserted. |
| 05:20 | The display alternates between showing the cooking time, the temperature, and on-screen messages. |
| Turn Food | Food is ready to be turned or tossed, as recommended by your recipe.  Not applicable to Bake or Reheat. |
| End | The Smart Programme has finished. |

Cooking

Cooking in the Vortex is quick and easy – food goes in, crispy deliciousness comes out!

Check out the **cooking timetables** for guidance, or visit our **recipe site** for fun, easy-to-follow recipes with big crunch. You can also download the free **Instant Pot app** to search recipes, save favorites, make notes and more!

⚠ CAUTION

When cooking meat, always use a meat thermometer to ensure the internal temperature reaches a safe minimum temperature. Refer to the WHO's (World Health Organization) **Safe Minimum Internal Temperature Chart** and/or review your local government's food safety recommendations for more information.

Air Fry, Roast and Bake

These programmes give your meals all the rich, crispy flavor of deep frying with little to no oil, so you can say, "See ya!" to the greasy mess and extra calories! The pre-sets are a starting point that you can experiment with to get the results you like best.

| Smart programme | Default time | Time range | Default temperature | Temperature range |
|-----------------|-----------------------|--|---------------------|-----------------------------|
| Air Fry | 12 minutes (00:12) | 1 minute to 1 hour (00:01 to 01:00) | 205°C / 400°F | 82 to 205°C 180 to 400°F |
| Roast | 18 minutes (00:18) | 1 minute to 1 hour (00:01 to 01:00) | 193°C / 380°F | 82 to 205°C 180 to 400°F |
| Bake | 30 minutes (00:30) | 1 minute to 1 hour (00:01 to 01:00) | 166°C / 330°F | 82 to 205°C 180 to 400°F |


Stage 1: Setting up for cooking

01 Follow steps 01 to 04 in the **Initial test run: Stage 1** to set up the air fryer.

02 Touch the smart programme you want to use: **Air Fry, Roast** or **Bake**.

03 Touch **Temp**, then turn the dial to adjust the temperature.

04 Touch **Time**, then turn the dial to adjust the time.

 Smart Programmes automatically save adjustments to temperature and time settings when you touch **Start**.


05 Touch **Start** to begin!

The display shows **On** and the cooking status shows **Preheat**.

Cooking

Stage 2: Cooking

01 When the display shows **Add Food**, remove the air fryer basket and carefully place your food items inside the hot cooking chamber.


 You can put food directly on the cooking tray or within any oven-safe baking dish.

02 Carefully re-insert the air fryer basket. The display shows the cooking time and temperature, and the cooking status shows **Cook**.

03 Part way through cooking, the display shows **turn Food**.

 Not applicable to Bake.

If you want to toss or turn your food, remove the air fryer basket and do so, then re-insert the basket into the air fryer. Cooking pauses and resumes automatically.

 If your food does not need to be flipped, wait 10 seconds for the programme to resume automatically.

04 When the display shows **End**, carefully remove your food from the hot cooking chamber.

CAUTION

The air fryer oven and air frying accessories will be hot during and after cooking. Do not touch hot surfaces with unprotected hands. Allow all items to cool to room temperature, then clean them according to **Care, cleaning and storage** instructions.

Always use proper hand protection and exercise extreme caution when adding food to or removing it from the hot cooking chamber.

Cooking

Cooking tips

Give all your favorite fresh and frozen oven-baked and deep-fried snacks a fighting chance!

- Preheating is an important step! Wait for the **Add Food** message to appear before adding food to the air fryer basket.
- When baking muffins, buns, quiche, and other treats, use an oven-safe baking dish covered with foil (or an oven-safe lid) to prevent the top from overcooking.
- For coated food, like onion rings or deep-fried snacks, use an egg and breadcrumb mix rather than liquid-based batters to make sure the coating sticks to the food.
- Spray food items with cooking oil before adding seasoning to get the seasoning to stick well.
- For super crispy chips, soak your fresh-cut potato sticks in iced water for 15 minutes, then pat them dry and spray lightly with oil before cooking.
- Patting moist food items dry before cooking prevents excess steam and splatter and gives you crispier results.
- Air frying can cause oil and fat to drip from foods. To prevent excess smoke, carefully remove and drain the air fryer basket as needed.

Check out the **cooking timetables**, download the **Instant Pot app**, or visit our **recipe site** for fun, easy-to-follow recipes.

CAUTION

To avoid the risk of fire, property damage and personal injury, **DO NOT** spray cooking oil into the cooking chamber.


CAUTION

When cooking meat, always use a meat thermometer to ensure the internal temperature reaches a safe minimum temperature. Refer to the **WHO (World Health Organization) website** and/or review your local government's food safety recommendations for more information.

Cooking

Reheat

| Smart programme | Default time | Time range | Default temperature | Temperature range |
|-----------------|-----------------------|--|---------------------|-----------------------------|
| Reheat | 10 minutes (00:10) | 1 minute to 1 hour (00:01 to 01:00) | 138°C / 280°F | 49 to 182°C 120 to 360°F |

- 01 Follow steps 01 to 04 in the **Initial test run: Stage 1** to set up the air fryer.
- 02 Remove the air fryer basket and place your food items inside, then carefully re-insert it.
- 03 Touch **Reheat**.
- 04 Touch **Temp**, then turn the dial to adjust the temperature.
- 05 Touch **Time**, then turn the dial to adjust the time.
 Smart Programmes automatically save adjustments to temperature and time settings when you touch **Start**.
- 06 Touch **Start** to begin reheating. The time begins to count down right away.
- 07 When the display shows **End**, carefully remove your food from the air fryer.

CAUTION

The air fryer oven and air frying accessories will be hot during and after cooking. Do not touch hot surfaces with unprotected hands. Allow all items to cool to room temperature, then clean them according to **Care, cleaning and storage** instructions.

To avoid a burn injury, always use proper hand protection and exercise extreme caution when adding food to or removing it from the hot cooking chamber.

Care, cleaning and storage

Clean your air fryer and accessories after each use.

Always unplug the air fryer and allow it to cool to room temperature before cleaning. Never use harsh chemical detergents, scouring pads or powders on any of the parts or components.

Allow all surfaces to dry thoroughly before use and before storage.

| Part or accessory | Cleaning method and notes |
|-------------------------|---|
| Air fryer basket | <ul style="list-style-type: none">• Clean the air fryer basket with a sponge or cloth and a solution of warm water and washing up liquid, then rinse well. Ensure that all grease and food debris are removed.• DO NOT immerse the basket in water or any other liquid.• DO NOT wash the basket in a dishwasher. |
| Cooking tray | <ul style="list-style-type: none">• Clean the cooking tray with a cloth or sponge and a solution of warm water and washing up liquid.• The cooking tray has a non-stick coating. To avoid damage to the non-stick coating, DO NOT use metal cleaning utensils. |
| Cooking chamber | <ul style="list-style-type: none">• Clean the cooking chamber with a sponge or cloth and a solution of warm water and washing up liquid.• To remove baked-on grease and food residue from the cooking chamber, spray with a mixture of bicarbonate of soda and vinegar and wipe clean with a damp cloth.• For stubborn stains, allow the mixture to sit on the affected area for several minutes before scrubbing clean.• Check the heating coil for oil spatter and food debris. Clean the heating coil with a damp cloth as needed. Ensure the heating coil is completely dry before the next use. |
| Exterior | <ul style="list-style-type: none">• Clean with a soft, damp cloth or sponge and wipe dry. |

WARNING

| | | |
|--|---|---|
| To avoid risk of electrical shock and personal injury: <ul style="list-style-type: none">- Do not immerse the appliance in water.- Do not rinse the appliance under a tap.- Do not wet the pins of the power lead. | Without proper cleaning, food and grease splatter may build up around the heating element, causing the risk of smoke, fire and personal injury. | If you see or smell smoke, touch Cancel , unplug the appliance, and allow it to cool. Remove food splatter or grease with a soft cloth and a mild detergent. |
|--|---|---|

Troubleshooting

Register your air fryer today!

If your problem persists or if you have any questions, get in touch with a Customer Care Advisor through our chat widget at instantappliances.co.uk/#chat, by email at support@instantappliances.co.uk or by phone on +44 (0) 3331 230051.

| Problem | | Possible reason | Solution |
|--|---|--|--------------------------------|
| Black smoke is coming from the air fryer. | ⚠ CAUTION Stop cooking immediately. Cancel the Smart Programme, then unplug the air fryer and allow it to cool to room temperature. | | |
| | Using an oil with a low smoke point. | Touch Cancel , unplug the air fryer, and allow it to cool to room temperature. Choose a neutral oil with a high smoke point, such as avocado, rapeseed, soybean, safflower or rice bran oil. | |
| | Food residue on the heating coil, in the cooking chamber or on accessories. | Touch Cancel , unplug the air fryer, and allow it to cool to room temperature. Clean the cooking chamber and accessories thoroughly. | |
| | Faulty circuit or heating element. | Touch Cancel , unplug the air fryer, and allow it to cool to room temperature. Contact Customer Care . Note: Do not attempt to repair the appliance. | |
| White smoke is coming from the air fryer. | Cooking foods with a high fat content, such as bacon, sausages and hamburgers. | Avoid air frying foods with a high fat content. Check the air fryer basket for excess oil or fat and carefully remove as needed after cooking. | |
| | Water is evaporating, producing thick steam. | Pat moist food ingredients dry before air frying and do not add water or other liquid to the cooking chamber when air frying. | |
| | Seasoning on food has blown into the element. | Be careful when seasoning food. Spray vegetables and meats with oil before seasoning to help the seasoning stick. | |
| The air fryer is plugged in but will not turn on. | The appliance is not properly plugged in. | Make sure the power lead is in good condition, and is plugged firmly into the socket. | |
| | Power is not switched on at the socket. | Plug another appliance into the same socket to test the circuit. | |
| | | Move the air fryer to another socket. | |
| Air fryer basket is not fully inserted into the cooking chamber. | Make sure the air fryer basket is fully inserted into the cooking chamber. | | |
| All lights flash and a code appears on the display. | E1 | Temperature sensor broken circuit. | Contact Customer Care . |
| | E2 | Temperature sensor short circuit. | Contact Customer Care . |

Any other servicing must be performed by an authorized representative.

Warranty

Limited Warranty

Earlyview Ltd., an authorised distributor of Instant Brands, Inc., and Instant Brands Inc. (collectively the "Company") warrant this appliance to be free from defects in workmanship and material, under normal household use, for a period of one (1) year from the date of original purchase. This Limited Warranty extends only to the original purchaser and use of the appliance in the UK. This warranty does not cover appliance use outside of the UK.

Proof of original purchase date and, if requested, return of your appliance is required to obtain service under this Limited Warranty. Provided that this appliance is operated and maintained in accordance with the written instructions included with the appliance (which are also available at instantpot.co.uk), the Company will, at its sole discretion, either: (i) repair defects in materials and workmanship; or (ii) replace the appliance. In the event the appliance is replaced, the Limited Warranty on the replacement appliance will expire 12 months from the date of original consumer purchase.

The Company is not responsible for shipping costs for warranty service.

Limitation and Exclusions

Any modification or attempted modification to your appliance may interfere with the safe operation of the appliance and may result in serious injury and damage. Any modification or attempted modification to your appliance or any part thereof will void the warranty, unless such modification(s) or alteration(s) were expressly authorised by the Company.

This warranty does not cover (1) normal wear and tear; (2) damage resulting from negligent, unreasonable or misuse of the appliance, improper assembly or disassembly, use contrary to the operating instructions, failure to provide reasonable and necessary maintenance, Acts of God (such as fire, flood, hurricanes and tornadoes), or repair or alteration by anyone, unless expressly directed and authorised by the Company; and (3) repairs where your appliance is used for other than normal household use and in a manner contrary to published user or operator instructions.

To the extent permitted by applicable law, the liability of the Company, if any, for any allegedly defective appliance or part shall be limited to repair or replacement of the appliance or part thereof, and shall not exceed the purchase price of a comparable replacement appliance. Except as expressly provided herein and to the extent permitted by law, (1) the Company makes no warranties, conditions or representations, express or implied, usage, custom of trade or otherwise with respect to the appliance or parts covered by this warranty and (2) the Company shall not be responsible or liable for indirect, incidental or consequential damages arising out of or in connection with the use or performance of the appliance or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of any nature or kind.

You may have rights and remedies under applicable laws, which are in addition to any right or remedy which may be available under this limited warranty.

Warranty

Warranty Registration

Please visit instantpot.co.uk/support/register to register your appliance. You will be asked to provide your name, your email address, the store name, date of purchase, model number and serial number (both of which are found on the appliance). This registration will enable us to keep you up-to-date with product developments and recipes, and contact you in the unlikely event of a product safety notification. By registering, you acknowledge that you have read and understood the instructions for use and warnings accompanying the appliance.

Warranty Service

Your name, email address or phone number.

A copy of the original purchase receipt with order number, model and serial number. A description of the product defect, including any photographs or video if possible. Contact Information

Instant Pot / Earlyview Ltd
Unit 5 Hersham Farm Business Park Kitsmead Lane
Chertsey, Surrey KT16 0DN, UK

Email: support@instantpot.co.uk

Telephone: **+44 (0) 3331 230051**

This warranty was last updated on 1 September 2019 for all products sold from [1 November 2019]. If your product comes with our older warranty version, your warranty will continue to be honoured.

Recycling

This appliance complies with the WEEE Directive 2012/19/EU on the disposal of electrical and electronic equipment (WEEE). This appliance complies with the European directive for

electromagnetic compatibility (EMC) 2014/30/EU and its revisions, as well as Low Voltage Directive (LVD) 2014/35/EU and its revisions.

This marking indicates that this product should not be disposed of with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable re-use of material sources. To return your used device, please use the return and collection systems or contact Customer Care for further recycling and WEEE information.

Instant™

Instant Brands Inc.
11–300 Earl Grey Dr., Suite 383
Ottawa, Ontario K2T 1C1, Canada

Earlyview Ltd (Instant Pot Official Distributor)
5 Hershaw Farm Business Park
Kitsmead Lane, Chertsey, Surrey, KT16 0DN, UK

Register your product today
www.instantpot.co.uk/support/register




Contact Customer Care:
+44 (0) 3331 230051
support@instantpot.co.uk

instantpot.co.uk instantpot.co.uk/instant-pot-shop

Download the Free App:



Join the Official Instant Pot Community:
www.facebook.com/groups/InstantPotUKCommunity

 @instantpotUK
 @InstantPotUK
 @instantpotuk

Made in China

Copyright© 2020 Instant Brands™ Inc
885-0104-61