

# Portable USB Blender

## **Instruction:**

Before your first use time, please add water and press the switch button to rinse the blender.

It may take 1-3 hours to fully charge the blender, but often the charging will finish in shorter time and reach the maximum capacity. In order to use the blender with maximum power, we suggest you charge it before your first use time. The red light will flash when you charge the blender and the blue light will flash when it is fully charged.

You can charge the blender with a USB cable from any USB port, such as your phone charger, your computer USB port, your power bank USB port and the USB port in your car.

For maximum blending power, please put the blender upside down so that the blades will reach the top rotation speed. Then, reverse it to the right position so that the food can be grinded by the stainless steel blades at the full speed.

In order to clean the blender, please simply use water with some kitchen detergent and start blending for once or twice if needed. We don't recommend you to put the blender base in the sink, or submerge the blender base in the water. Please also keep water away from the blender USB port.

If red light and blue light flash in turn, it may mean the magnetic piece of the blender body isn't aligned with the blender switch button. In order to fix it, please simply screw the blender body till the magnetic piece is aligned with the blender switch button. The arrow on the bottle body should also line up with the light on the blender base.

If the red light flashes when you start up the blender, it may mean your blender needs charging or blender blades get stuck by the food. Please recharge it or shake your blender and/or put it upside down and then flip it back over and restart the blender.