



Digital Cordless Telephone

Motorola C1L
For C1001L, C1002L, C1003L and C1004L

Technical Information

How many telephones can I have?

All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line.

Any additional handsets and chargers that you register have a REN of 0.

Connecting to a switchboard

This product is intended for use within Europe for connection to the public telephone network.

Recall

You may need to use the recall function if you are connected to a switch. Contact your PABX supplier for further information.

Manufactured, distributed or sold by Suncorp Technologies Ltd., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC.



Version 3 (EU)




Warning: Charge the handset for 24 hours before use.

2. Getting to know your phone

Overview of your handset



Handset LCD Display

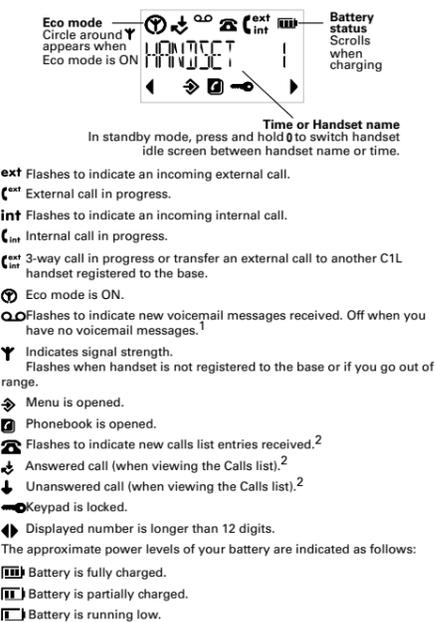

This user guide provides you with all the information you need to get the most from your phone. To set up your phone, follow the simple instructions in 'Getting Started', on the next few pages.

IMPORTANT

Only use the telephone line cord supplied.

Got everything?

- C1L base & cordless handset
2 x rechargeable Ni-MH battery cells
Power adaptor for the base
Telephone line cord
If you have purchased a C1L multiple pack you will also have the following additional items:
Cordless handset & charger
2 x rechargeable Ni-MH battery cells
Power adaptor for the charger



ECOMOTO: a convergence of efforts by marketing, design, research, engineering and supply chain management that leads to better products for everyone.

- The right thing to do.
Meets and / or exceeds EMEA environmental regulatory requirements.
Eco friendly packaging with a minimum 20% post consumer recycled content.
Phone housing is built with a minimum of 25% post consumer recycled content plastic.
Energy efficient charger that meets EU Code of Conduct requirements.
ECO mode function which reduces the transmitted power and energy consumption.

1. Getting started

IMPORTANT

Do not place your C1L in the bathroom or other humid areas.

Location

You need to place your C1L base within 1.5 metres of the mains power and telephone wall socket so that the cables will reach.

Make sure that it is at least 1 metre away from other electrical appliances to avoid interference.

HANDBET RANGE

The unit has a range of up to 300 metres outdoors when there is a clear line of sight between the base and handset.

SIGNAL STRENGTH

The Y icon on your handset indicates that you are within range of the base. When out of range of the base, the Y icon flashes.

The line will hang up if the handset moves out of range of the base. Move closer to the base. The handset will automatically reconnect to the base.

Setting up

IMPORTANT

The base station must be plugged into the mains power at all times. Do not connect the telephone line cord into the wall socket until the handset is fully charged.

Connecting the base

- Plug the telephone line cord into the socket marked on the underside of the base.
Plug the power adaptor into the socket marked on the underside of the base and plug the other end into the mains power wall socket.

Menu map

Table with 3 columns: PHONEBOOK, HANDBET, DATE-TIME. Lists various menu options like ADD ENTRY, MODIFY ENTRY, DEL HANDSET, etc.

3. Using the phone

NOTE

Your handset will automatically time the duration of all external calls. The call timer will display after the first 15 seconds of your call.

3.1 Switch the handset on / off

Press and hold to switch the handset on or off.

3.2 Calls

3.2.1 Make an internal call

- Press.
When you hear the dial tone, dial the number.

3.2.2 Preparatory dialling

- Dial the number first. If you make a mistake press to delete the last digit.
Press to dial.
Press to select an option. To return to the previous menu level, press. To exit the menu and return to standby, press.

3.2.3 Receive a call

When you receive an external call, the phone rings and ext icon flashes on the display.

- If the handset is off the base then press to answer the call, or if

- Press to delete the number if required, then enter the new number and press.
Scroll up or down to select a new ringer melody and press. The display shows ADD ENTRY.
Enter the next name and number entry you wish to store in your phonebook or press twice to return to standby.

4.4 Delete an entry

- Press. The display shows PHONEBOOK.
Press. The display shows ADD ENTRY.
Scroll up or down to DELETE ENTRY and press.
Scroll up or down to the entry you want to delete, or search alphabetically and press. The display shows CONFIRM?.
Press to confirm or to cancel.

5. Handset settings

5.1 Handset ringer volume

- You can adjust the ringer volume and set different volume levels for your internal and external calls. Choose from 5 volume levels or Off.
Press, scroll up or down to HANDBET and press.
Press up or down to select INT RING VOL or EXT RING VOL and press.
Press up or down to select the volume (1 -5 or OFF).
Press to confirm or to return to the previous menu.

NOTE

When the phone is ringing, you can adjust the ringer volume by pressing up or down.

5.2 Handset ringer melody

Switch on the mains power.

Installing and charging the handset

- Remove the battery cover from the back of the handset and insert the rechargeable Ni-MH battery cells supplied. Please note the '+' and '-' markings inside the battery compartment and insert in the correct direction.
Slide the battery cover back into place.
If you are charging the batteries for the first time, place the handset on the base to charge for at least 24 hours continuously.
When the handset is fully charged, icon will appear steady on the display. Plug the other line of the telephone line cord (make sure that one end is already plugged into the base) into the telephone wall socket.

Connecting the handset and charger (for multi-pack only)

If you have purchased a multiple pack, you will need to carry out this process for all the handsets and chargers.

- Plug the power adaptor into the socket marked on the underside of the charger and plug the other end into the mains power wall socket.
Remove the battery cover from the back of the handset and insert the 2 x AAA NiMH rechargeable batteries supplied. Please note the '+' and '-' markings inside the battery compartment and insert in the correct direction.
Slide the battery cover back into place.
If you are charging the batteries for the first time, place the handset on the charger to charge for at least 24 hours continuously.
When the handset is fully charged, icon will appear steady on the display. The display will show HANDBET and handset number (e.g. 2) to indicate that it is registered to the base.

the handset is on the base simply lift the handset to answer the call.

NOTE

If you prefer to press when you lift up the handset to answer a call, you will need to switch Auto answer off.

3.3 Adjust the earpiece volume

During a call, press up or down to increase or decrease the volume. There are 5 levels to choose from.

3.4 Mute

You can mute your handset so that you can talk to someone nearby without your caller hearing.

- During a call, press. The display shows MUTE and your caller cannot hear you.
Press again to resume your call.

3.5 Intercom

3.5.1 Make an internal call

If you have more than one handset registered to the base, you can make internal calls between two handsets.

int icon is displayed to indicate an internal call.

- Press followed by the number (1-5) of the handset you want to call.
3.5.2 Receive an internal call
When you receive an internal call, int icon flashes and the handset number that is calling you is displayed.
Press to answer the call.
3.5.3 Transfer a call
You can transfer an external call to another handset registered to the base. During an external call:
Press followed by the handset number (1-5) that you want to transfer to.
When the other handset answers, press to complete the transfer.

You can set different ringer melodies for your internal and external calls. Choose from 5 different ringer melodies.

You will hear a sample ring as you scroll to each ring melody.

- Press, scroll up or down to HANDBET and press.
Press up or down to select INT MELODY or EXT MELODY and press.
Press up or down to select the ringer melody (1 - 5).
Press to confirm or to return to the previous menu.

NOTE

If you subscribe to your network providers caller ID service, calls from the numbers that you have stored in the phonebook will ring using the ringer melody you have set when you store the entry.

5.3 Auto answer

Your phone is set to answer calls by lifting the handset off the base or charger. You can switch this feature off so that calls can only be answered by pressing.

- Press, scroll up or down to HANDBET and press.
Scroll up or down to AUTO ANSWER and press.
Press up or down to select ON or OFF and press to confirm.

5.4 Handset name

If you are using more than one handset with your C1L base, you can set a personalized name for each handset to easily distinguish between them. A name can be up to 10 characters long.

- Press, scroll up or down to HANDBET and press.
Scroll up or down to NAME and press.
Enter the new handset name and press to confirm. Delete the current name by pressing.

NOTE

When the phone is ringing, you can adjust the ringer volume by pressing up or down.

IMPORTANT

Warning! Use only the approved rechargeable Ni-MH battery cells (2 x AAA Ni-MH 300mA rechargeable batteries) supplied with your C1L.

BATTERY LOW WARNING

If icon flashes on the display and you hear a warning beep every minute during a call, you will need to recharge the handset before you can use it again.

When charging, icon will scroll on the display.

BATTERY PERFORMANCE

In ideal conditions, fully charged batteries should give up to 6.5 hours talk time or up to 135 hours standby time on a single charge.

Note that new batteries do not reach their full capacity until they have been put to normal use for several days.

To keep your batteries in the best condition, leave the handset off the base for a few hours at a time.

Running the batteries right down at least once a week will help them last as long as possible.

The charge capacity of rechargeable batteries will reduce with time as they wear out, giving the handset less talk / standby time. Eventually they will need to be replaced.

After charging your handset for the first time, subsequent charging time is about 6-8 hours a day. Batteries and handset may become warm during charging. This is normal.

All talk and standby times are approximate and depend on features selected and usage pattern.

Date and time

If you have subscribed to a Caller ID Service, the date and time is set automatically for all handsets when you receive your first call.

If you do not have a Caller ID service, you can set the date and time manually, see section 7. Clock & Alarm.

Your C1L is now ready for use.

NOTE

If there is no answer from the other handset and you wish to return to your external caller, press.

Your external call resumes automatically after 30 seconds if there is no answer.

3.5.4 3-way conference call

You can hold a 3-way conference call between 2 internal callers and 1 external caller.

During a call with an external caller:

- Press followed by the handset number (1-5) that you want to establish a conference call.
When the other handset answers, press to connect all three callers to begin the conference call. int icon is displayed.
If there is no answer from the other handset, press to return to your external caller.
Press to end the call.

3.6 Redial

The last 10 entries dialled are stored in the redial list.

3.6.1 View or dial an entry

- Press to open the Redial list.
Scroll up or down to the entry you want.
Press to dial the displayed entry or press to return to standby.

NOTE

If the caller's number exactly matches an entry stored in the phonebook, the name is displayed. Press to see the caller's number.

3.6.2 Copy a Redial list number to the phonebook

- Press to open the Redial list.
Scroll up or down to the entry you want.
Press. The display shows ADD?.

- Press again. The display shows NAME?.
Enter the name and press. The number is displayed.
Edit the number if necessary, then press.
Press up or down to select the ringer melody you want and press. The number is stored.

3.6.3 Delete an entry

- Press to open the Redial list.
Scroll up or down to the entry you want and press. The display shows DELETE?.
Press to confirm or to cancel.

3.6.4 Delete the entire Redial list

- Press to open the Redial list.
Press and hold. The display shows DELETE ALL?.
Press to confirm or to cancel.

3.7 Lock / unlock the keypad

You can lock the keypad so that it cannot be operated accidentally while carrying it around.

NOTE

When the keypad is locked, you can still answer incoming calls and operate the handset as normal during the call. When the call ends, the keypad lock comes on again.

- Press and hold. icon is displayed.
To unlock the keypad, press any key on your handset. The display shows PRESS?.
Press within 5 seconds.

3.8 Paging / Find handset

You can alert a handset user that they are wanted or locate a missing handset.

Paging calls cannot be answered by a handset.

- Press on the base. All handsets registered to the base will ring.
To stop the ringing, press on the base again or press any button on the handset.

4. Phonebook

You can store up to 50 names and numbers in the phonebook. Names can be up to 12 characters long and numbers up to 24 digits. You can also select different ringer melodies for the phonebook entries.

4.1 Store a name and number

If the C1L is connected to a switchboard, you may need to enter a pause in a stored number. This gives the switchboard time to find an outside line. A pause is normally stored after the switchboard access code (e.g. 9). When storing a number, press and hold until the display shows P. You can then continue storing the phone number.

If you have subscribed to Caller ID Service and wish to display the name of your caller instead of the number, save the full telephone number including the area code to your phonebook.

You can store multiple entries with the same number. However, to prevent unnecessary duplicated entries, you can only store the same name once.

- Press. The display shows PHONEBOOK.
Press. The display shows ADD ENTRY?.
Press. The display shows NAME?.
Enter the name and press. The display shows NUMBER?.
Enter the number and press. The display shows MELODY?.
Press up or down to select the ringer melody you want and press. The display shows ADD ENTRY?.
Enter the next name and number entry that you wish to store in your phonebook or press twice to return to standby.

ENTERING NAMES

Use the keypad letters to enter names, e.g. to store TOM:


Press once to enter T.

Flashes when battery is almost fully discharged.

This feature is dependent on your Network Service provider supporting the service. A subscription fee may be payable.

For this feature to work, you must subscribe to Caller ID Service from your network operator. A subscription fee may be payable.

Underside of the base

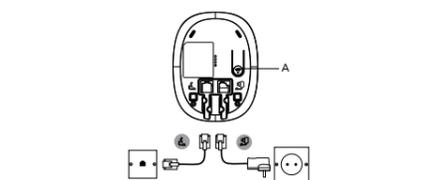

A Page In standby mode, press to ring the handset(s). Press and hold to enter registration mode when registering handsets.

Navigating the menus

Your C1L has an easy to use menu system.

Each menu has a list of options, which you can see on the menu map on the following page.

When the handset is switched on and in standby:

- Press to open the main menu.
Then use up or down buttons to scroll through the available options.
Press to select an option. To return to the previous menu level, press. To exit the menu and return to standby, press.

NOTE

If no buttons are pressed for 20 seconds, the handset returns to standby automatically.

Press three times to enter O.

Press once to enter M.

WRITING TIPS

Press to delete the last character or digit.

Press up or down to move between characters.

Press to insert a space.

Use twice to insert a dash.

4.2 View or dial an entry

- Press. icon is displayed.
Scroll up or down to the entry you want.
OR
Enter the first letter of the name to search alphabetically. The first name that starts with this letter or the nearest letter in the alphabet will be displayed. Scroll up or down to the entry you want.
Press to dial or to return to standby.

NOTE

When the name is displayed, you can switch between the name and number by pressing.

4.3 Edit a name and number

- Press. The display shows PHONEBOOK.
Press. The display shows ADD ENTRY?.
Scroll up or down to MODIFY ENTRY and press.
Scroll up or down to the entry you want to edit, or search alphabetically and press. The existing name is displayed.
Press to delete the name if required, then enter the new name and press. The existing number is displayed.

