

# Portable blender



Reference : DOP221  
Version : 1.4  
Language: English



## User manual

You have purchased a product LIVOO brand and we thank you. We take great care in design, ergonomics and ease of use of our products. We hope that this product will give you complete satisfaction.

This instruction manual is available too on our website [www.livoo.fr](http://www.livoo.fr)

### **GENERAL INSTRUCTIONS**

PLEASE, TAKE TIME TO READ WELL THE INSTRUCTIONS FOR USE PARTICULARLY BEFORE THE FIRST USE.

A misuse of the appliance can damage it or hurt the user. Assure that you use the appliance for the use for which it is designed; we refuse any responsibilities as for the damages by an incorrect use or a bad manipulation.



1. To reduce the risk of electric shock, never operate this product with wet hands, spill liquid in the product or submerge it in water
2. Close supervision is necessary when your appliance is being used near children or infirm persons.
3. Do not place an appliance on or near a hot gas or on a heated oven.
4. Do not use the product outdoors (household use only).
5. Do not touch the cutting blades and do not insert any kind of object (knives, forks, spoons etc.) into the bowl while the product is operating. A spatula may be used only when the product is not in operation, avoiding the risk of serious injury.
6. Never operate the product when the bowl is empty and do not remove the bowl lid before the blades come to a complete stop.
7. This appliance is designed to chop small quantities of food, under no circumstances should the bowl be overfilled.

## User manual


8. The appliance shall not be used by children.
9. Keep the appliance and its cord out of reach of children.
10. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
11. Children shall not play with the appliance.
12. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
13. There is potential injury for misuse.
14. Regarding the instructions for cleaning surfaces in contact with food or oil, thanks to refer to the below paragraph "cleaning" in manual.
15. It is absolutely necessary to keep this appliance clean at all times as it comes into direct contact with food.
16. Regarding the instructions for use, operation times and speed settings, thanks to refer to the below paragraphs.
17. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments
  - farm houses
  - by clients in hotels, motels and other residential type environments
  - bed and breakfast type environments

## User manual

### TECHNICAL CHARACTERISTICS

Battery voltage	3.7 V 
Charging voltage	5.0 V 
Lithium battery capacity	1400 mAh
Motor speed	20 500rpm $\pm 10\%$
Single working time	40 seconds
Charging time	2 hours
Number of full-power operations	10-15 times

### DESCRIPTION

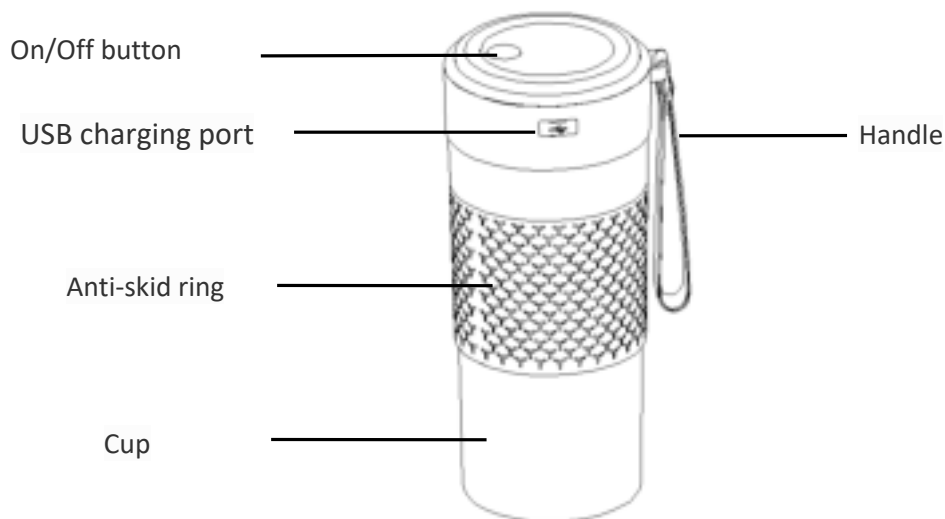

### USE

#### CHARGING MODE:

1. Before using, fully charge the battery using the supplied USB cable. Plug in to any USB port supplying power (Laptop, Computer, AC Charger, Car Charger, etc.), and the other end into charging port of product.
2. The LED will display red while charging.
3. After being fully charged, the LED displays blue.
4. During the charging process, the product cannot start working.

## User manual



### OPERATING MODE:

1. Double-click the key switch button, the indicator light will be blue, and the product will run at full speed. When the working voltage is lower than 3.0 V, the indicator light will show red and flash three times, and the machine will stop running. If the indicator light flashes during operation, it means the battery is running out of power.
2. In case of stalling during operation, the product will stop immediately and the red light of the indicator light will start flashing. During the flashing process of the indicator light, in order to protect the program of the control panel, the product will not respond by pressing the key to switch the product halfway.
3. In the process of working, click and press the key switch button, and the machine will stop running.
4. Full power can be continuously operated for 10 to 15 times (each time the program is set to 40 seconds maximum), each time the interval is not less than 3 minutes, and rest is required after 5 times of operation.

### WARNING :

- **Always handle the blade/knife carefully as it is very sharp.**
- **Never touch the moving parts**
- **Never overfill the bottles to avoid any spillage**
- **Do not remove the lid and never replace accessories without switching off the appliance and if the accessory being used has not stopped working.**
- **Appliance is for liquid and soft fruits.**


### BEFORE THE FIRST USE :

- Please clean the blade combination on the juicer and the cup with soap and dry it thoroughly. The main machine is wiped with wet cloth and cannot be soaked in water.
- Please ensure that the battery is fully charged and the parts contacting with food materials are thoroughly cleaned. The product is provided with double safety protection. If the main machine is placed alone or is not rotatably installed in place with the juicing cup, press the key switch, the product does not work, and the indicator light is red and flashing. Only when the main machine and the juicing cup are rotatably and fixedly installed in place can the "key switch" be double-clicked to start the work, and the working status indicator light is blue.

**Note:** In order to meet the transportation requirements, the juicing cup has only 40% of the power from the factory. It is recommended to charge for the first time for 4 hours to improve the battery life.

## User manual

1. Wash fruits (banana, pears, mango etc.), peel and core, cut into small squares of about 1cm×1cm×1cm.

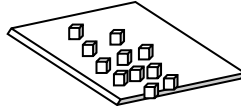

2. Put the cut fruit into the juicing cup, add water or milk and other liquids, the total amount of food and liquid shall not exceed 300 ml in the cup body.



3. Install the main machine on the juicing cup in a rotating way, tighten the main machine and the juicing cup in place to ensure that food materials will not leak out.



4. Double-click the "key switch" on the main machine of the product twice, turn the product upside down and lay it flat on the desktop or hold it in your hand, and the product starts working. The product sets a single working time of 40 seconds. In the process of working, the product is shaken from side to side, the stirring effect is better, and the taste is more exquisite.

**Note :** During the working process, click the "key switch" once, and the product will stop working immediately.

5. If the blade is jammed during startup, the product can be placed upright and then slowly inverted after normal startup.



## User manual

6. After mixing to make juice, screw the main machine out of the juicing cup, and the juice in the juicing cup can be drunk directly.



### TYPES OF FAULTS AND COMMON PROBLEMS :

SYMPTOMS	CONFIRMATION	TAKE MEASURES
The product does not start	<ul style="list-style-type: none"> <li>·Is it used continuously for a long time?</li> <li>·Is the food stuck on the blade?</li> <li>·Whether the main machine and juicing cup do not have Rotate in place?</li> <li>·The red light blinks.</li> </ul>	<ul style="list-style-type: none"> <li>·Please wait for the motor to cool before using.</li> <li>·Please remove the remaining ingredients before use.</li> <li>·Please install the main machine and juicing cup to Bit before starting</li> <li>·Please fully charge before using</li> </ul>
When working, the knife is clamped and the lamp flashes	<ul style="list-style-type: none"> <li>·The fruit particles put in are too large, causing knife sticking.</li> <li>·Fruits and liquids exceed the product's rated maximum scale.</li> </ul>	<ul style="list-style-type: none"> <li>·Wash fruits (apples, pears, etc.), peel and core, cut into small squares of about 1cm×1cm×1cm. Don't let the blade contact with the pulp first, then turn on the machine and set it straight.</li> <li>·The reduced liquid capacity shall not exceed the maximum capacity of the cup body.</li> </ul>
There is a smell of burning the motor.	<ul style="list-style-type: none"> <li>·Is it used continuously for a long time?</li> </ul>	<ul style="list-style-type: none"> <li>·The high-power motor is located inside the main engine. Due to friction of carbon brushes, odor will occur, but it is not a product fault. Please feel free to use it.</li> </ul>
Charging No Prompt Light (Red Light Not Illuminated)	<ul style="list-style-type: none"> <li>· USB cable connection is not good.</li> <li>·Because some brand adapters have identification restrictions on electrical equipment, the actual output voltage and</li> </ul>	<ul style="list-style-type: none"> <li>·Check the connection status of USB data cable to ensure normal connection.</li> <li>·Please use DC5V and above universal mobile phone adapters purchased through regular channels to charge the product.</li> </ul>



## User manual

	current cannot meet the requirements.	
--	---------------------------------------	--

### CLEANING AND MAINTENANCE

1. Please confirm that the blade stops running before cleaning.
2. Do not use steel wire balls, abrasive cleaners or corrosive liquids (such as gasoline and acetone) to clean this product.
3. The main machine can be wiped with a wringing wet cloth. Do not rinse, soak or spray in water or other liquids to avoid device damage or product leakage.
4. Please rinse the inside of the juicing cup and the parts in contact with food with clear water, and dry or dry in time. Please be careful to avoid cutting (protective gloves can be worn).
5. Please ensure that the product is clean, dry and placed in a dry, ventilated place to avoid direct sunlight during storage.
6. Quick cleaning: Add proper amount of water into the juicing cup and install it on the main machine. Double-click to start the "key switch" and work for 5 to 10 seconds.
7. Never immerse the base of your appliance in water





**Correct Disposal of this product  
(Waste Electrical & Electronic Equipment)  
able in the European Union and other European countries with separate collection systems)**



The European Directive 2012/19/EU on Waste Facilities Electrical and Electronic (WEEE)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.



Pour en savoir plus :

[www.quefairedemesdechets.fr](http://www.quefairedemesdechets.fr)

**LIVOO**

61071

67452 Mundolsheim-FRANCE

- Photo no contractual
- Worried about the quality of his products the manufacturer reserves the right to make modifications without advance notice