

2. Socket should be well earthed.
3. Connect portable polisher to output of power box.
4. Adjust the speed to the minimum.
5. Switch on, with the indicating lamp on.
6. Adjust the speed controller to increase speed.
7. Switch to "FOOT" if you choose to use foot pedal.
8. If the indicating lamp is not on during operation, stop immediately.
9. Make sure the power is off if polisher is not in use.

Manufactured By:

NINN Ecommerce BV Tuinstraat 28
1815TM Alkmaar The Netherlands

